Sizing



CALF

Stand and measure the calf in question. Measure at the fullest part of the calf. When ordering a pair, take measurements on both calves and use the average of the results.



SIZE	S	М	L	XL
Measure around calf	29-32 cm	32-33 cm	36-38 cm	38-41 cm
	11.5-12.5"	12.5-13"	14-15	15-16"