


## **HELMET**

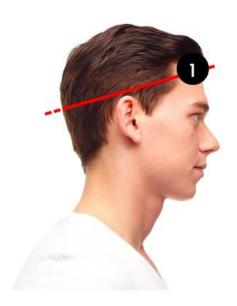

## **HOW TO MEASURE**

## 1. HELMETS & HATS

Use a flexible tape measure and wrap it around your head just at the top of the brow and around the temples.

SIZE TABLE Cm Inches

	S	М	L
Head Circumference	6 1/4 - 6 3/4	6 7/8 - 7 3/8	7 1/2 - 7 7/8
	S	M	L
Head Circumference	51-55	55-59	59-63



## THE BOA FIT SYSTEM

The BOA system allow you to adjust the space below your neck to offer you the maximum comfort.