



Ruffwear Boot SIZING

	XXXS	XXS	XS	S	M	L	XL	XXL
Paw Width	1.5 in 38 mm	1.75 in 44 mm	2.0 in 51 mm	2.25 in 57 mm	2.5 in 64 mm	2.75 in 70 mm	3.00 in 76 mm	3.25 in 83 mm

10 1/2" 13 1/2" 15 1/2" 17 1/2" 19 1/2" 21 1/2" 23 1/2" 25 1/2"
268mm 343mm 394mm 445mm 496mm 547mm 598mm 649mm



Paw Width

Measurement
across widest
part of paw when
bearing weight

GETTING THE RIGHT SIZE FOR YOUR DOG

1. Have your dog stand on a firm surface.
2. Place a piece of paper under a front paw.
3. Lift dog's opposite front paw so that weight is placed firmly onto the paw being measured.
4. Mark BOTH SIDES of weighted paw at its widest point on the sheet of paper.
5. Measure that distance and choose correct boot size from the figures above. If you are between sizes, choose the smaller size.