

ELIXIR™ 2

Assembly Instructions




PACKAGE INCLUDES:

Frame assembly, tent body, rainfly, stakes, MSR® Footprint


1 PREPARE FOR SETUP

1. Spread tent out and stake out four corners tightly.
2. Assemble poles.

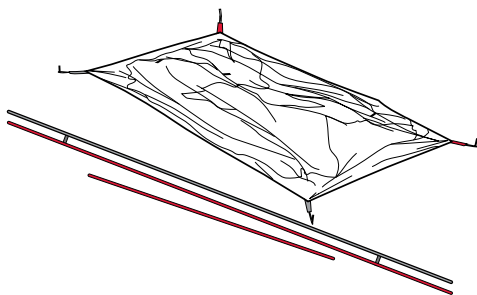


2 ASSEMBLE TENT

1. Insert each red pole tip of main poles into grommets on the stake loops with red webbing.
2. Insert each gray pole tip of main poles into grommets on the stake loops with gray webbing.
3. Attach color-coded clips to like-color pole along entire length of frame assembly.

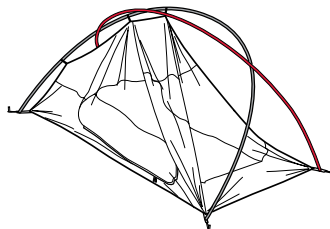


3 ATTACH RIDGE POLE

1. Insert red ridge pole into red grommets above doors, making sure ridge pole rests on top of both red and gray main poles.

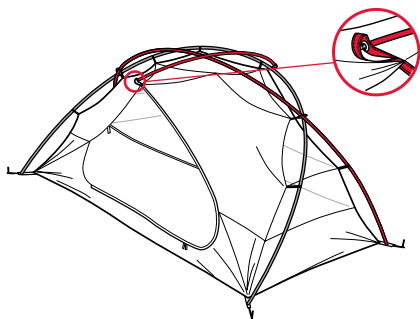

4 ATTACH RAINFLY

1. Lay rainfly over tent. Attach rainfly's midpoint grommets to ridge pole.
2. Clip and tighten all buckles at all stake loops, connecting red webbing with red stake loops, gray webbing with gray stake loops.
3. Stretch out vestibules until taut and stake down, making sure seams align with frame.

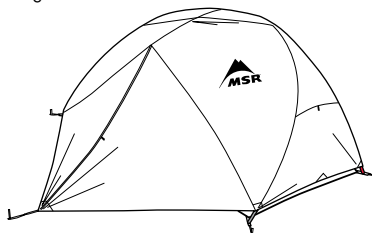

USE TIPS: All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. For complete care and use instructions, refer to the Owner's Manual (available at www.msrgear.com/Elixir2).



MOUNTAIN SAFETY RESEARCH®

© 2016 Cascade Designs, Inc.

4000 First Avenue South
Seattle, WA 98134 USA

1-800-531-9531 | 1-206-505-9500