

# FREELITE 3

## Assembly Instructions




### PACKAGE INCLUDES:

Frame assembly, tent body, rainfly, stakes


## 1 PREPARE FOR SETUP

1. Spread out tent and stake out four corners tightly.
2. Assemble poles.

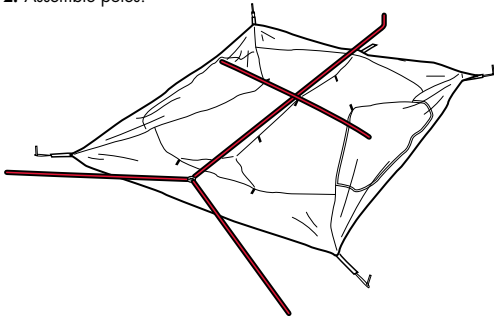


## 2 ASSEMBLE TENT FRAME

1. Insert tips of poles into the tent's corner and rear grommets.

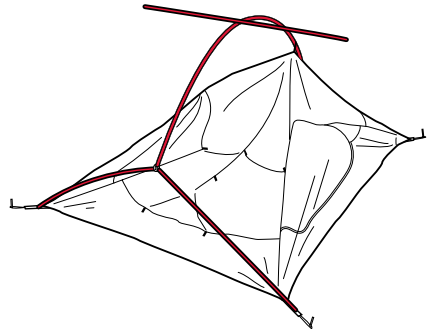


## 3 ATTACH CLIPS

1. Attach all clips to tent frame.
2. Insert cross pole into the grommets above tent doors.

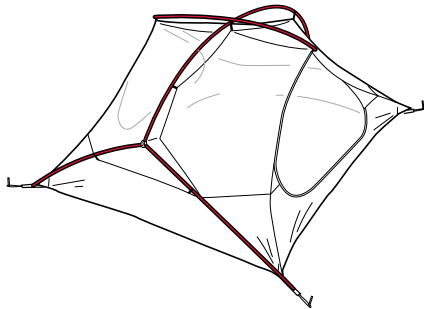

## 4 ATTACH RAINFLY

1. Lay rainfly over tent and attach midpoint rainfly grommets to cross pole.
2. Attach rainfly at the corners and tighten buckles.
3. Stretch out vestibule until taut and stake down.

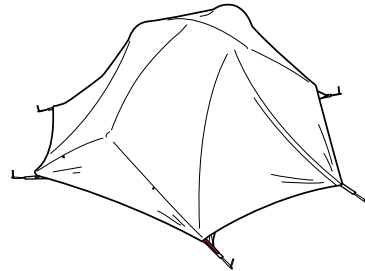

**USE TIPS:** All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. For complete care and use instructions, refer to the Owner's Manual (available at [www.msrgear.com/FreeLite3](http://www.msrgear.com/FreeLite3)).



MOUNTAIN SAFETY RESEARCH®

© 2016 Cascade Designs, Inc.

4000 First Avenue South  
Seattle, WA 98134 USA

1-800-531-9531 | 1-206-505-9500