MAINTENANCE INSTRUCTIONS

Treating the <u>Seascooter</u> with care will maintain its performance in use and make it last longer. Consistently follow below points, and you'll get much more use out of your <u>Seascooter</u>:

Always fully charge the battery immediately after purchase and every use.

If the unit is not used for extended periods, remove the battery from the unit and fully charge every month.

Never place the battery in a sealed container when charging.

Only use the charging base supplied with the SEADOO® Seascooter™ you purchase.

To store the battery, remove it from the SEADOO® Seascooter™, store it separately from the charging base and keep in a dry, cool place.

NEVER expose the battery to excessive heat or sunlight.

Always store your SEADOO® Seascooter™ vertically when not in use to prevent deformation of the propeller nozzle.

Always rinse the SEADOO® Seascooter™ in fresh water immediately after use, and allow it to dry before storage.

Do not use detergents; only use a damp cloth to wipe the unit clean. The battery housing interior should be kept dry at all times.