 


USER'S GUIDE & WARRANTY

COSMO
ride

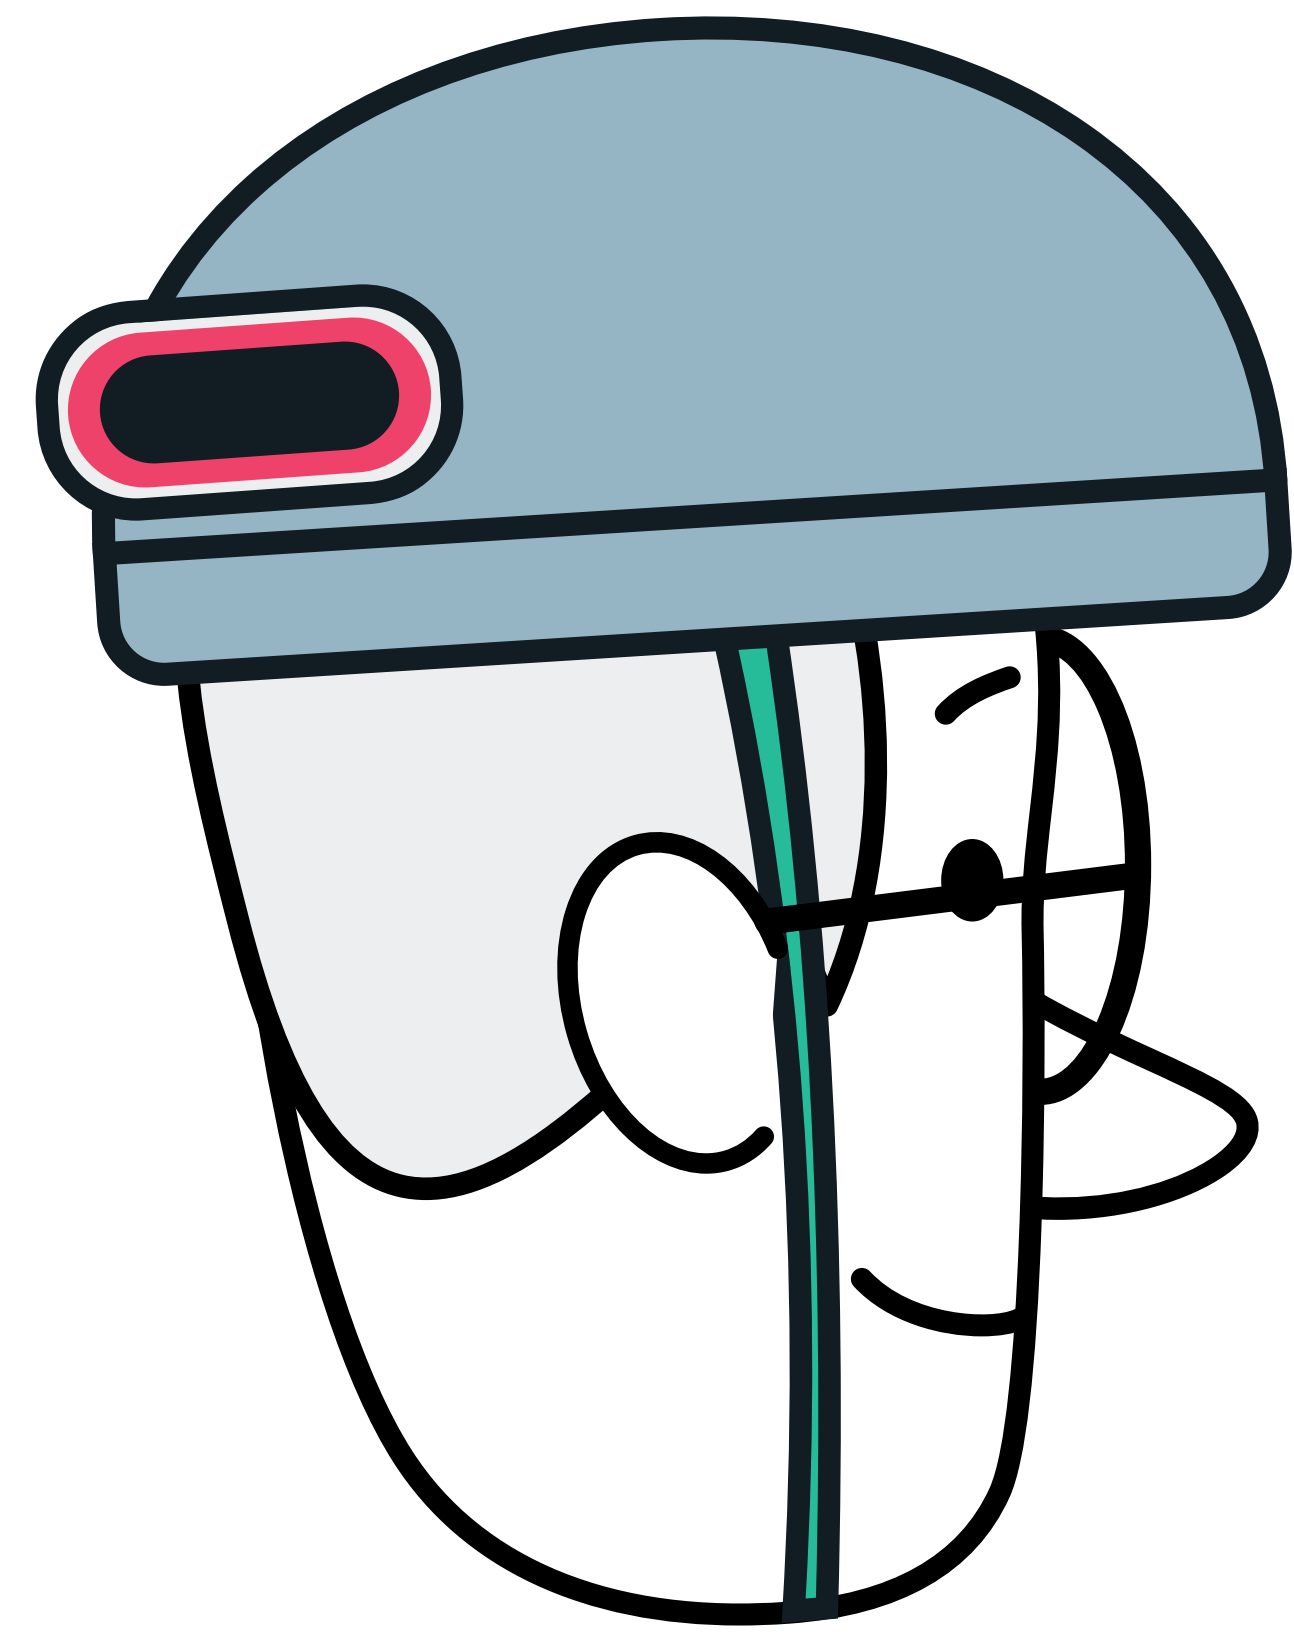

THE SMART LIGHT

FOR MORE SAFETY ON THE ROAD

 


TUTORIAL • COSMO RIDE




If you'd like a user's guide in another language, find it here: cosmoconnected.com/en/user-guide


How to attach the Cosmo and the remote control

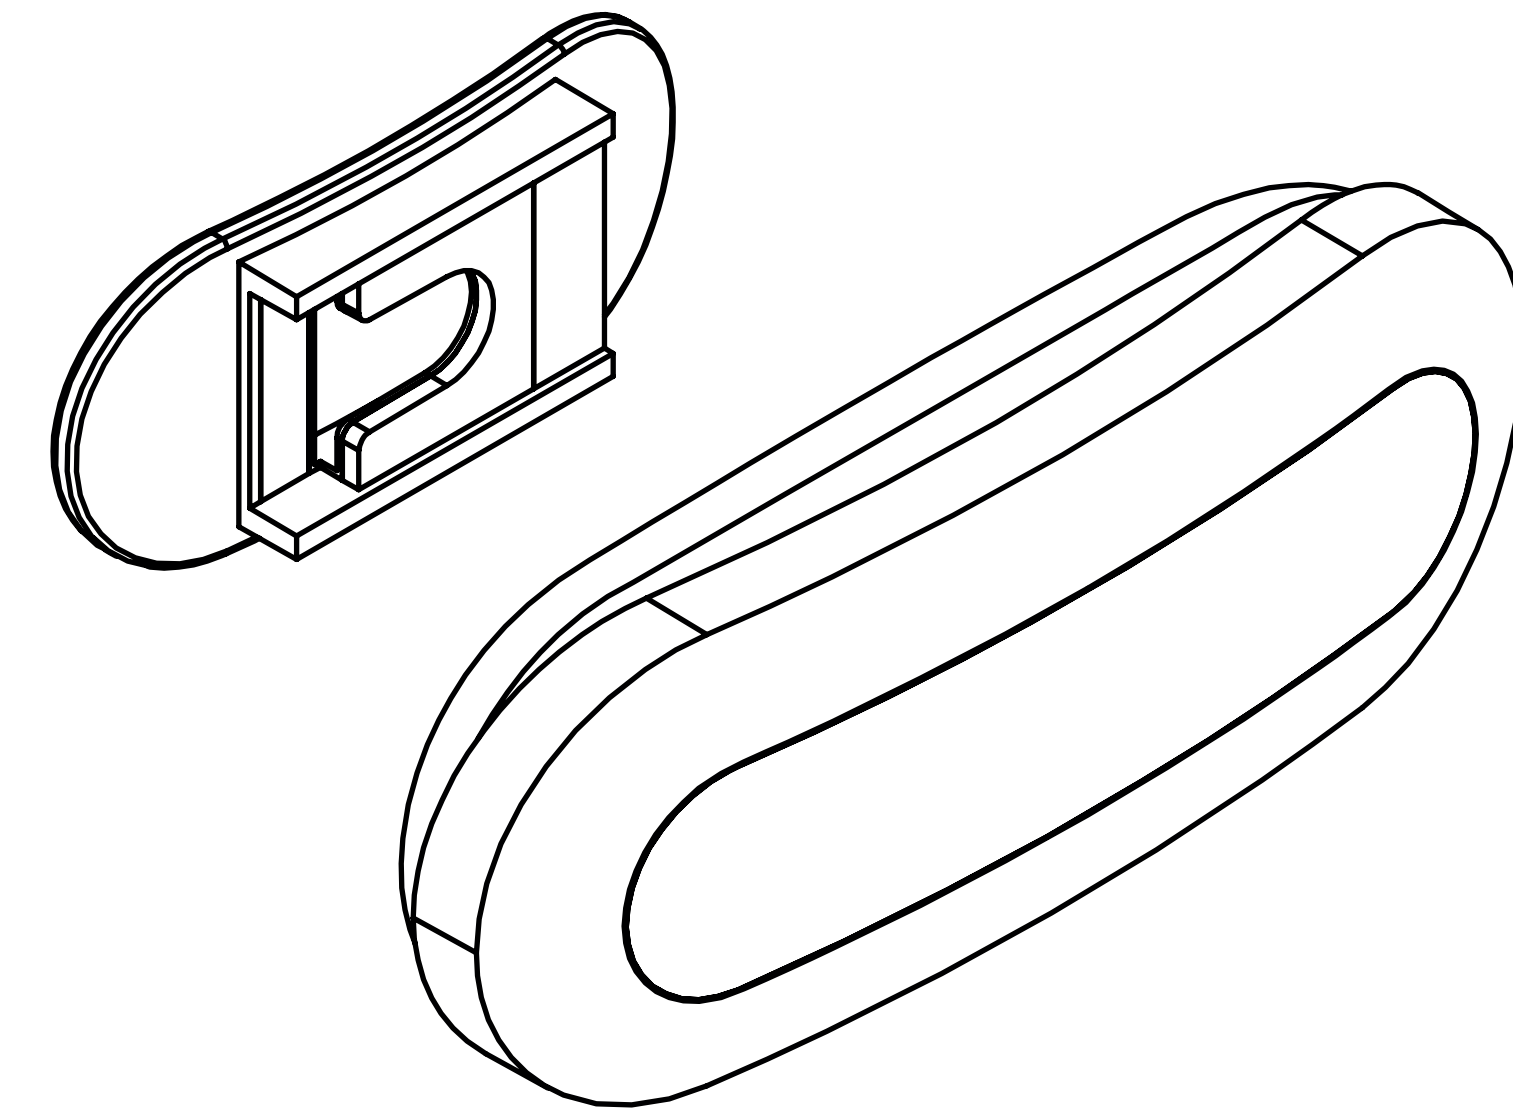


Attach the Cosmo to an urban helmet

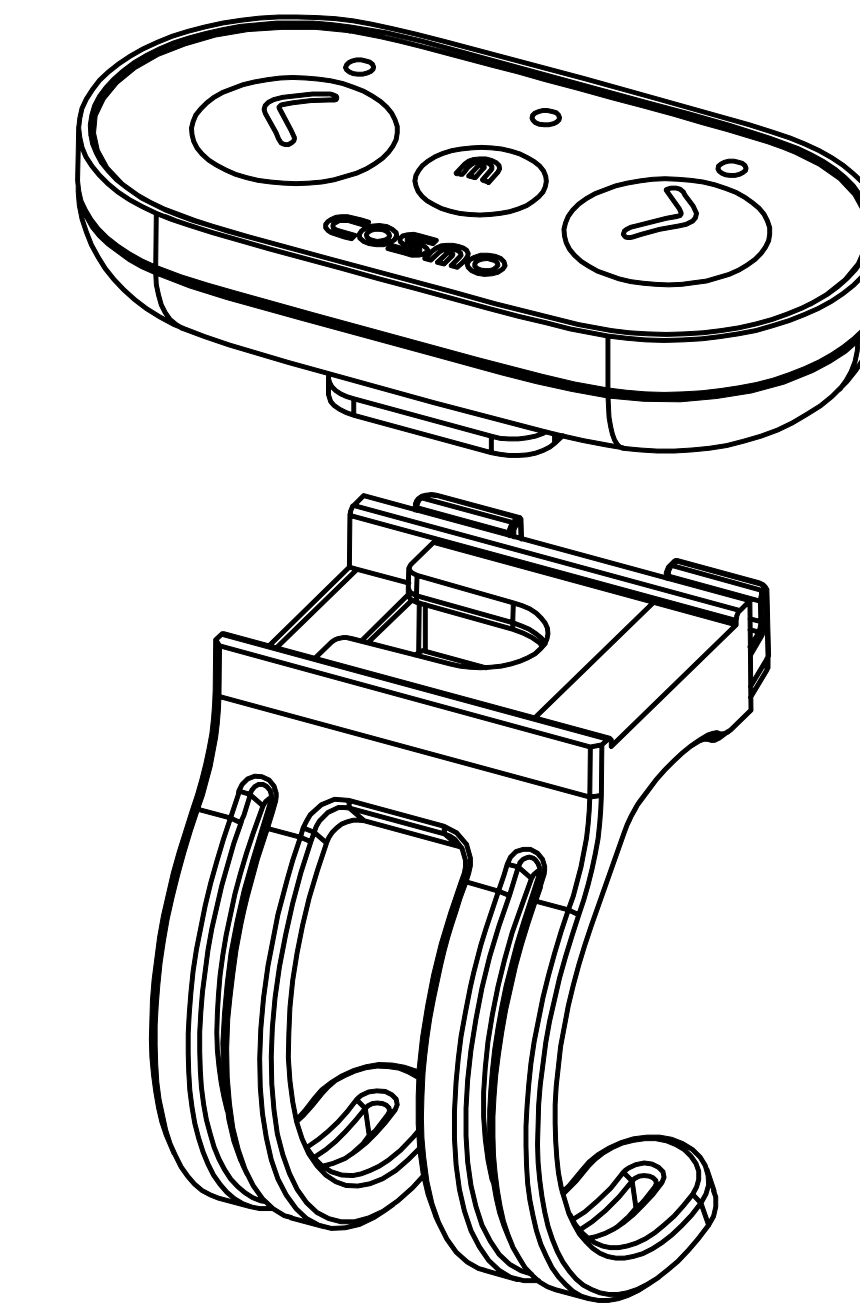 

 Attach the remote control to the handlebar

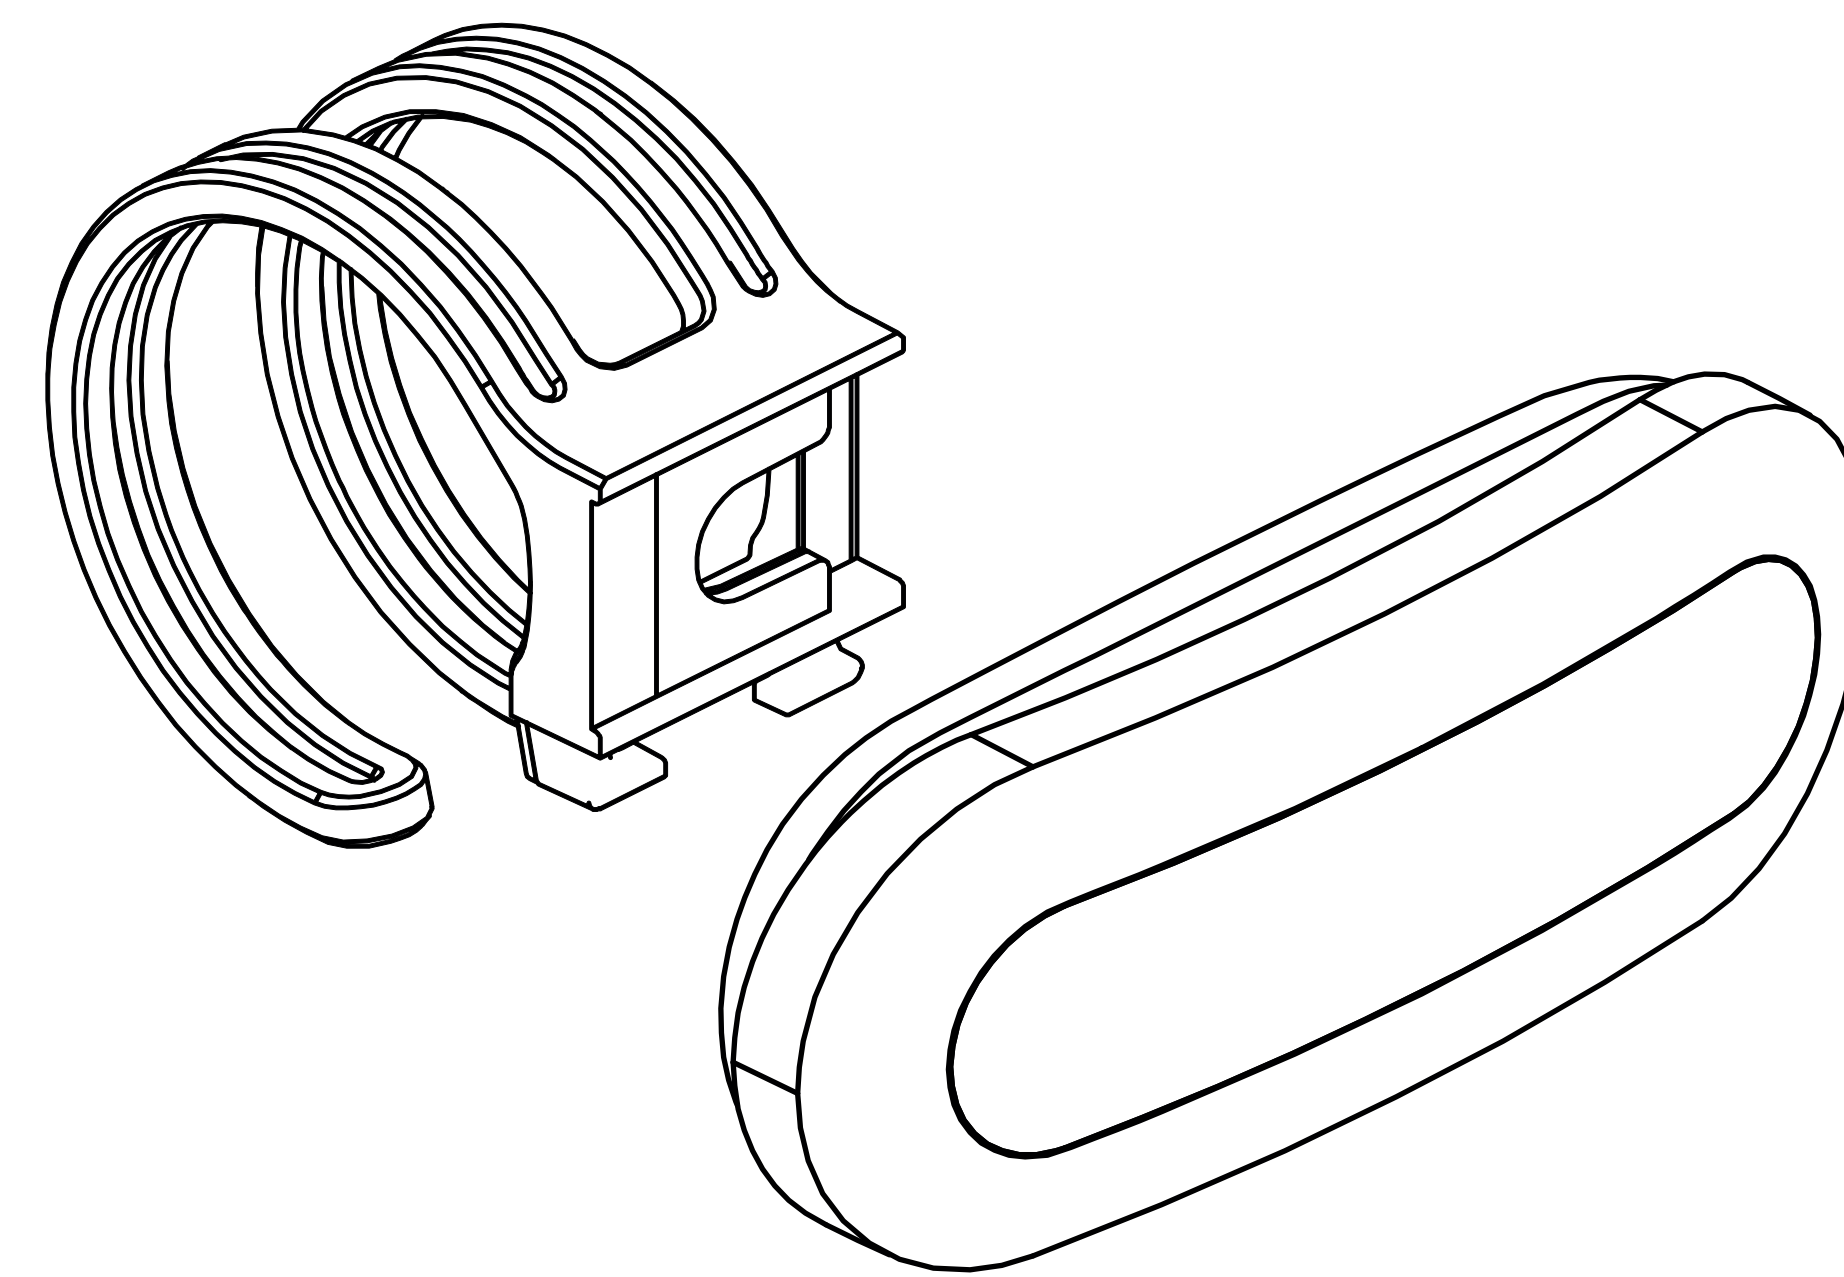

Attach the Cosmo to a ventilated helmet

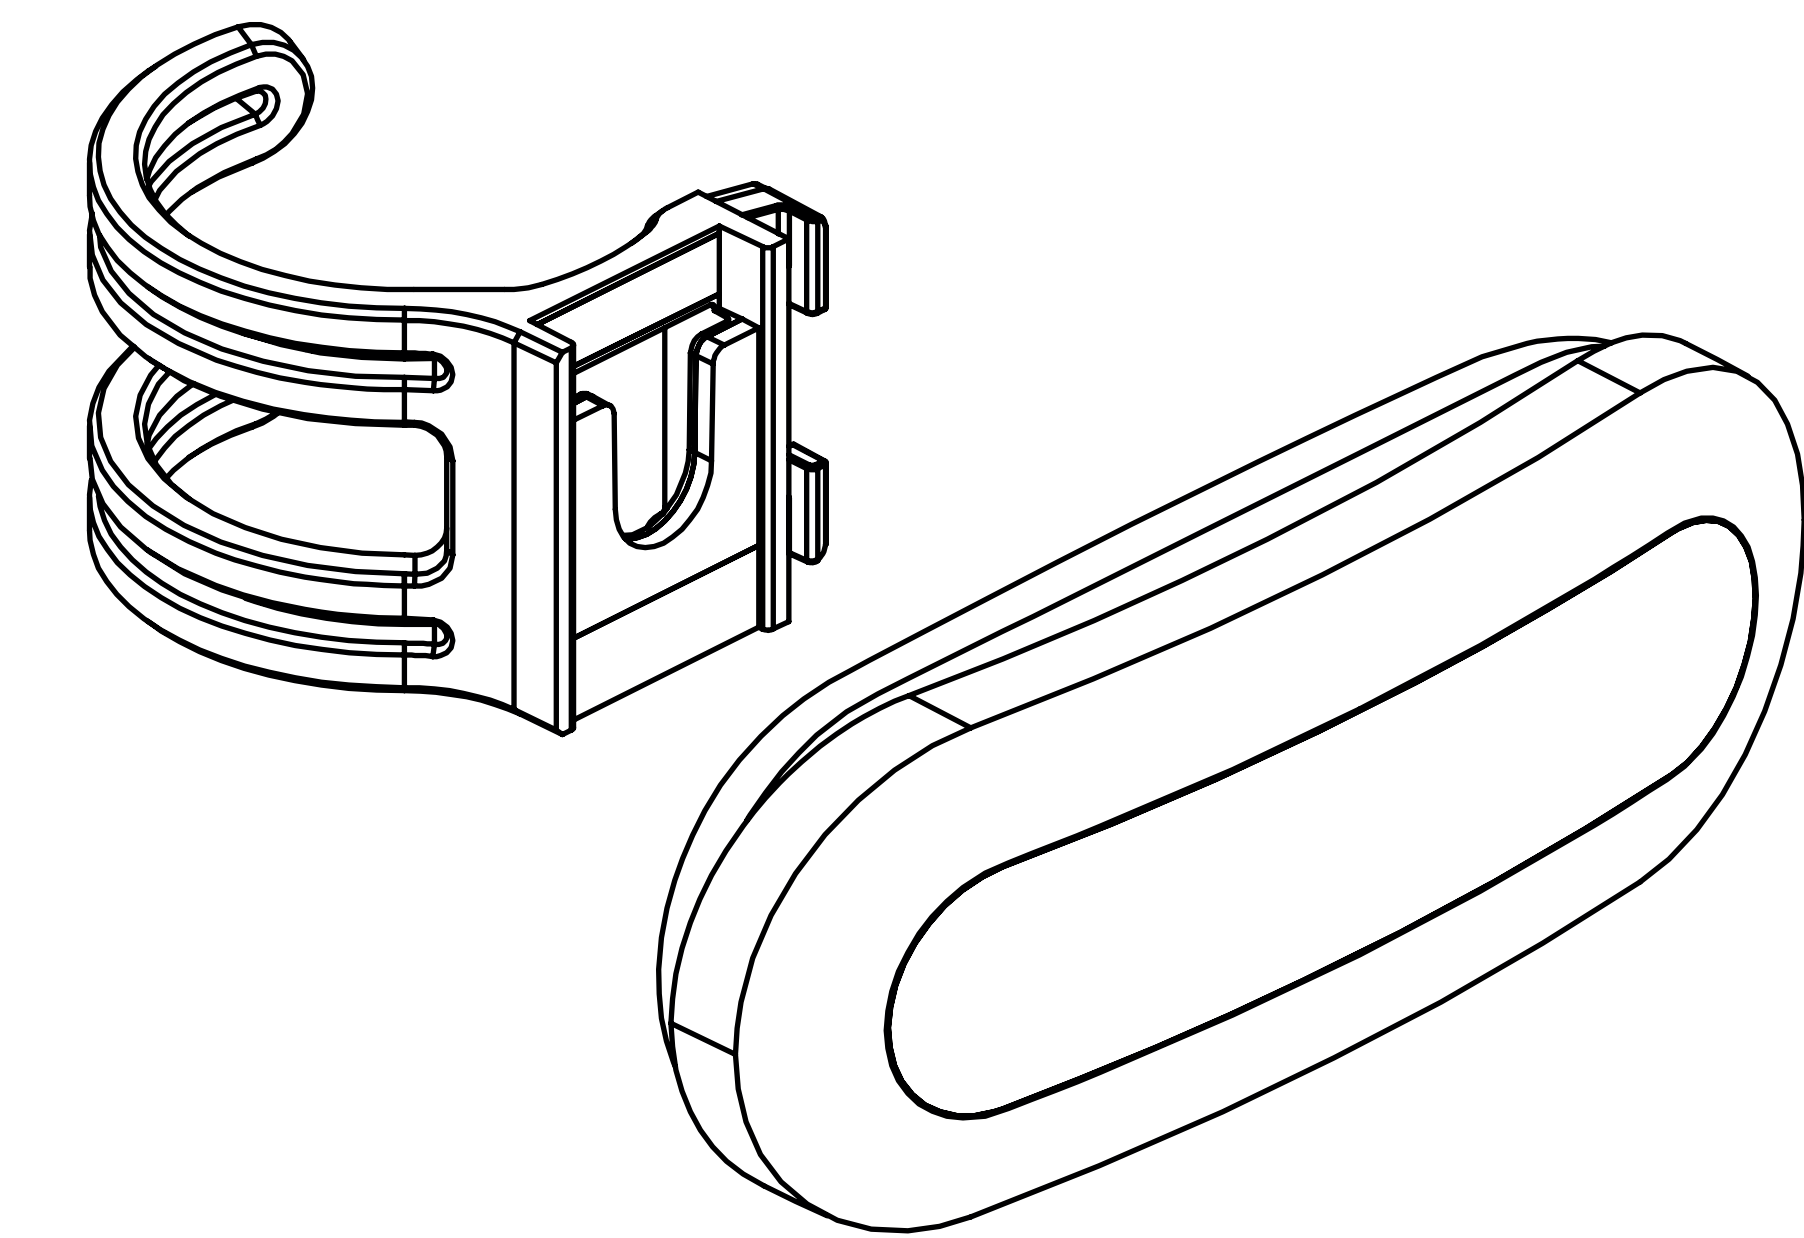 

Attach the Cosmo to the tube saddle / seat post

How to use the remote control

Left indicator light

Right indicator light



Middle button: hold down to turn off the Cosmo Ride or press quickly to change the lighting mode.
There is one return light per light mode (details below mode 1, 2, 3, 4)

1.

Brake light
(short blink)

2.

Position light
& brake light
(a long blink)

3.

Continuous lighting
& warning light
(a long blink)

4.

Warning light
(short blink)

Note: Simultaneously pressing the two indicator lights will desynchronise the Cosmo Ride and remote control.

Cosmo Ride by Cosmo Connected is a removable light that can be attached to a helmet or a bike seat and connected to a mobile application. Its features include position lighting (continuous), indicator lights, warning lights and brake lights when installed under the seat. You can set all these modes through the app. The device combines visual safety, fall detection and emergency warnings (via SMS and/or email).

MINIMAL SETUP REQUIRED

Cosmo Ride adapts to most bike/scooter helmets available on the market. To be able to enjoy all the features, you must have a smartphone with the following configuration:

IOS (Apple): Version 10 or higher.

Android: Version 5 or higher. IOS & Android: GSM + GPS + Bluetooth smart 4 SIM.

Even if it meets these requirements, your phone may not work reliably with Cosmo Ride and your remote control as the material and software may differ greatly from one phone to another; however, we've tested the product on an extensive list of phones. If you're not sure, please contact us.

ON/OFF

Once charged, you can begin using your Cosmo Ride. To turn it on, just press the on/off button to the back of the device for 3 seconds. You can turn Cosmo Ride off in 4 ways: with the on/off button, via the app, with the remote control by pressing and holding down the central button (3 seconds) or after 2 min. of inactivity.

For more details, you may download the user's guide at our website: <https://cosmoconnected.com>.

BEFORE THE FIRST USE

- 1.** Plug your Cosmo Ride in using the micro-USB cable that comes with it. The USB port is at the back of the device, the protective strip is at the back to the right. The Cosmo will turn on. The recharge indicator LED (red light on the left side) stays on until fully charged.
- 2.** Unplug it and you can use it.

THE MOBILE APP

- 1.** Download the app from the Apple Store or Google Play Store and then start the app*.
- 2.** Follow the instructions to connect your Cosmo Ride with your remote control.

* Once installed, open the Cosmo Bike app and follow the instructions to create an account. If you already have one, enter your ID and password to log in. You can also create an account at our website cosmoconnected.com. The Cosmo Ride app is free as is creating an account where you can add 3 emergency contacts to be notified by SMS and/or email if an incident is detected by your Cosmo Ride.

MAIN FEATURES

Indicator lights / Fall detection and warning lights* / Position lights / Brake lights.**

These light modes can be manually enabled/disabled via the mobile app and/or via the remote control.* The use of warning lights is regulated in each country; you must observe the laws in effect.

**Attention: the "brake light" mode will not activate when the Cosmo is set to helmet mode.

WIRELESS TECHNOLOGY

The Cosmo Ride is equipped with a Bluetooth 4.0 transmitter-receiver. (Low energy).

Transmitter power: -8.4 dBm/frequency bandwidth: 2400 to 2483.5.

BATTERY

The Cosmo Bike is equipped with a 900 mAh battery that can be recharged with a 5 V micro-USB (included). A fully charged battery lasts around 180 minutes (2 hr 40 min.).

The battery autonomy is 8 hours with continuous lighting (may vary based on the use).

PRECAUTIONS REGARDING THE BUILT-IN BATTERY

- Do not attempt to replace the battery in your Cosmo Ride. It is built-in and cannot be replaced.
- Charge the battery in accordance with the instructions provided in this guide.
- Only use the charger that comes with your product to charge the battery.
- Charge your Cosmo Ride using a computer, a powered docking station or certified power station.
- Do not attempt to open the built-in battery.

CHARGING YOUR COSMO RIDE

Charge your Cosmo Ride using the micro-USB cable that comes with it. A LED indicator will light up to indicate it is charging and will turn off when fully charged. Check the battery level using the Cosmo Ride app.

RECOMMENDATIONS FOR USE

Do not try to replace the battery or open the case or take your Cosmo Ride apart. Each of these actions will void the warranty and may pose safety risks. The substances contained in batteries may be harmful for the environment or cause injury if handled and disposed of inappropriately.

- Do not expose your Cosmo Ride to extreme temperatures (The Cosmo is designed to operate when uncharged: -20 °C to +60 °C, and while charging: 0 °C to +45 °C).

- Do not use any abrasive products to clean your Cosmo Ride or the accessories.
- Do not throw your Cosmo Ride onto a fire. The battery may explode.
- Charge the battery in accordance with the instructions provided in this guide. Only use a computer, a power source or a charger certified by a renowned testing laboratory with a charging cable authorised by COSMO CONNECTED.
- Do not charge your Cosmo Ride when wet.

ATTENTION

Risk of explosion if the battery is replaced with an incorrect battery. The battery included with the Cosmo Ride must not be replaced by anyone other than COSMO CONNECTED or an authorised service centre. It must be recycled or disposed of separately from household waste as per the instructions. This product is not a toy. Do not let children or pets play with your Cosmo Ride. The product contains small parts which can be a choking hazard.

INFORMATION ON WASTE DISPOSAL AND RECYCLING

Make sure you dispose of your product at a recycling centre. Each country and province has its own recycling centres for batteries and electronics. To find out where to dispose of your product, contact the waste management service in your area or the shop where you purchased the product. Do not throw your device into the household waste. The packaging and product must be disposed of in accordance with local regulations. Batteries must not be disposed of with municipal waste and must be separated for collection.

WEIGHT AND DIMENSIONS

50 grams (Cosmo Ride only) 96x36x28.3 mm

POWER/VOLTAGE

Nominal power: 5 V  – 900 mA

DECLARATION OF CONFORMITY

This device was tested to ensure safety certification conformity in accordance with the essential requirements and other provisions of Directive 2014/53/EU. COSMO CONNECTED hereby declares this device complies with the essential requirements and other provisions of Directive 2014/53/EU (RED). The complete Declaration of Conformity for each product is available at our site cosmoconnected.com

COSMO CONNECTED is authorised to affix the CE marking to Cosmo Ride models CB-COB-001-Black which indicates its compliance with the essential requirements and other provisions of Directive 2014/53/EU. Designed in France/Made in China.

WARRANTY

Cosmo Ride is covered by a limited commercial warranty of two (2) years.

COSMO CONNECTED, 10 Rue de l'Amiral Hamelin 75016 Paris, France, guarantees

COSMO CONNECTED BRAND products against material defects and labour when used

in accordance with the recommendations published in the user's guide when they occur within

two (2) years following the date of initial purchase by the end user of a new COSMO CONNECTED product from a professional ("Warranty Period").

The recommendations published particularly include technical specifications, safety instructions and the Cosmo Ride user's guide. COSMO CONNECTED does not guarantee the uninterrupted or error-free operation of Cosmo Ride. Products sold by COSMO CONNECTED comply with the regulations in effect in France and the performance thereof is compatible with non-professional use. The products supplied by COSMO CONNECTED fully benefit without any additional payment, irrespective of the consumer's right to cancel and in accordance with the law, from:

- A legal warranty of compliance for products allegedly defective, damaged, harmed or which do not correspond with the order;
- A legal warranty against hidden vices from a material, conception or manufacturing defect affecting the products delivered and making them unusable under the conditions and in accordance with the provisions below.

The legal warranty of compliance applies independently of any commercial warranty that may cover the product. Customers may decide to enforce the warranty against hidden defects in the product pursuant to article 1641 of the French Civil Code;

In such case, they may choose between a cancellation of the sale or a reduction in the purchase price pursuant to article 1644 of the French Civil Code. Please note that under the scope of the legal warranty of compliance, customers have two (2) years after delivery of the goods to enforce it against the seller; may choose between the repair or replacement of the product ordered, subject to cost conditions, as provided for by article L 217-9 of the French Consumer Code; providing proof of the existence of a compliance defect in the product is waived for the 24 months following delivery of the product.

In order to exercise their rights, customers must inform the company COSMO CONNECTED in writing of any non-conformity in the products or the existence of hidden vices within the periods indicated above and return the defective products in the conditions in which they were received with all accessory elements (packaging, documentation, charger, etc.). COSMO CONNECTED will reimburse, replace or repair the products or parts under the warranty which it believes are non-compliant or defective. Shipping costs will be reimbursed at the rate invoiced and the return shipping costs will be reimbursed upon submission of the corresponding receipts. Reimbursements for products deemed non-compliant or defective will be completed as quickly as possible and no later than fourteen (14) days after COSMO CONNECTED is notified of the compliance defect or hidden vice. Reimbursement will be made to the customer's bank account or by bank cheque payable to the customer.

COSMO CONNECTED will not be liable in the following cases:

- Non-respect of the laws in the country where the products are delivered, which must be verified by the customer;
- Improper use, usage that does not comply with the user's guide, faulty installation, use for professional purposes, negligence or a lack of maintenance by the customer, as well as in the event of normal product wear, an accident or force majeure;
- Faulty operation of the app connected to the product and, more generally, of the warning mechanism due to a lack of access to a telephone network (especially in a non-covered area or an inaccessible network), technical defects or consequences of an accident particularly, the total or partial destruction of the mobile terminal on which the app connected to the product is installed).

Moreover, the warranty will not cover:

- Repairs or replacements of parts due to normal wear;
- Any adaptation to the product in order to comply with technical or safety regulations applicable in a country other than one for which the product was designed and manufactured at the source; in other words, France;
- Deterioration or defects in the product resulting from:
 - improper product use or installation (use which is non-compliant with the intended use, installation or use that is non-compliant with the COSMO CONNECTED instructions or technical or safety standards in effect in the country where it is used, etc.);
 - Maintenance of the product which is non-compliant with COSMO CONNECTED instructions or negligence in the product maintenance;
 - Improper handling or improper use of the product (improper handling, falls, blows, etc.) or an inappropriate environment (exposure to humidity, excessive heat, contact with the sand or any other substance, inadequate electric power, etc.);
 - A modification or repair not completed by a service provider authorised by COSMO CONNECTED.

Furthermore, the customer hereby acknowledges that, based on the circulation and climate conditions, the product may not detect braking situations when set in seat mode and expressly accepts this.

MORE GENERALLY, THERE IS NO WARRANTY EXTENDING BEYOND THE WARRANTY INDICATED HEREIN AND ANY IMPLICIT WARRANTY INCLUDING IMPLICIT WARRANTIES OF CURRENT COMMERCIAL USE OR SUITABILITY FOR CERTAIN PURPOSES IS EXPRESSLY EXCLUDED. NO RESELLER HAS THE RIGHT TO MODIFY THE CONDITIONS AND LIABILITY CLAUSES LISTED ABOVE.

WARNING TO USERS IN THE UNITED STATES

Federal Communication Commission Interference Statement 47 CFR Section 15.105(b).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

This device Cosmo Ride by Cosmo Connected complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NO UNAUTHORIZED MODIFICATIONS

47 CFR Section 15.21 CAUTION: This equipment may not be modified, altered, or changed in any way without signed written permission from COSMO CONNECTED.

 
Unauthorized modification may void the equipment authorization from the FCC and will void the COSMO CONNECTED warranty. This device complies with FCC RF radiation exposure limits set forth for general population (uncontrolled exposure). This device must not be collocated or operating in conjunction with any other antenna or transmitter.

ESP Encuentre la guía del usuario y las condiciones de garantía en nuestro sitio:

ITA Trova la guida dell'utente e le condizioni di garanzia sul nostro sito:

DE Das Benutzerhandbuch und die Garantiebedingungen finden Sie auf unserer Website:

POR Encontre o guia do usuário e as condições de garantia em nosso site:

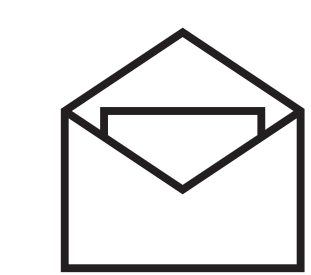


info@cosmoconnected.com




COSMO CONNECTED

 10 Rue de l'Amiral Hamelin 75016 Paris, France



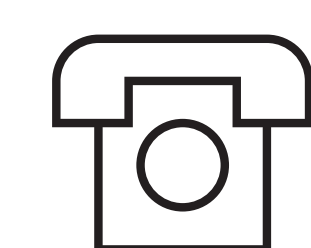




+33 1 83 81 26 74

 (coût d'un appel local en France)


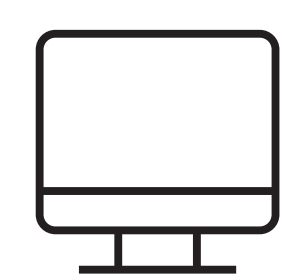


www.cosmoconnected.com

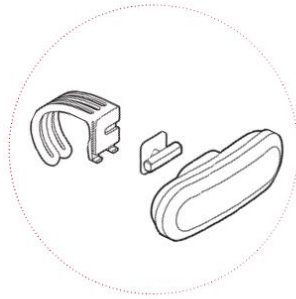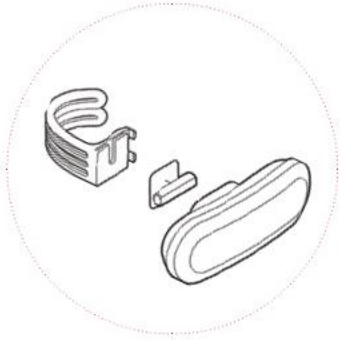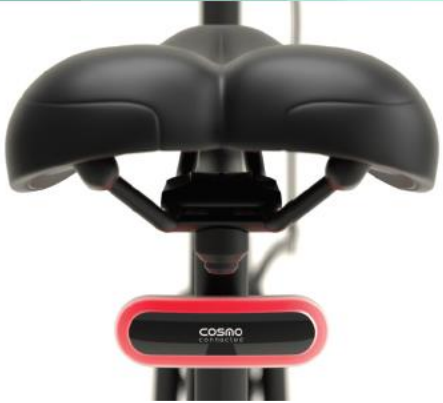   

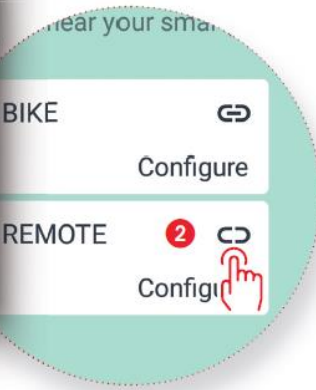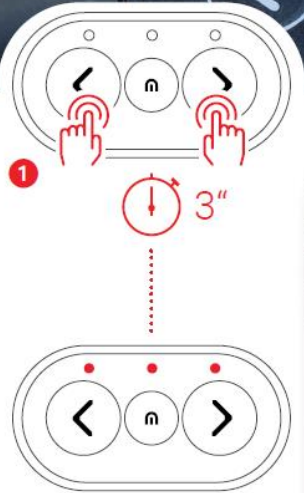  


COSMO REMOTE is connected

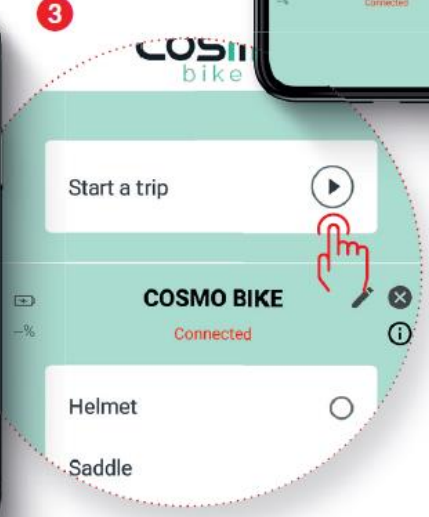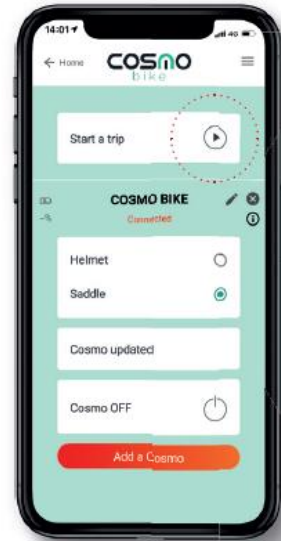  

How to use the remote control (opcional)

Turn left

 Turn right

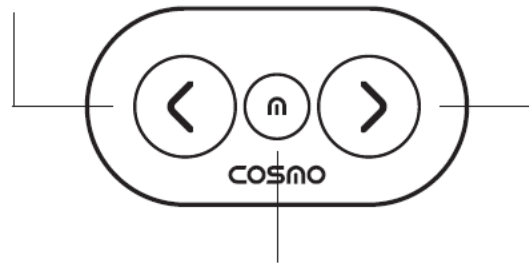

Middle Button : long press to switch off the Cosmo Bike
or short press to change ignition mode
(detail below mode 1,2, 3, 4)

1.
Break light
(in the seatpost
position)

2.
Continious ignition &
brake light (in the
seatpost position)

3.
Continious ignition &
warning

4.
Warning light

USER'S GUIDE

Cosmo Bike by Cosmo Connected is a removable light that can be attached to a helmet or a bike seat and connected to a mobile application. The functions include position lighting (continuous), indicator lights, warning lights and deceleration lights when installed under the seat. The device associates visual safety, fall detection and emergency warnings (via SMS and/or email).

MINIMAL SETUP REQUIRED

Cosmo Bike adapts to most bike helmets available on the market.

To be able to enjoy all the features, you **must** have a next generation smartphone such as: **IOS (Apple):** Version 10 or higher

Android: Version 5 or higher

IOS & Android: GSM + GPS + Bluetooth smart 4 SIM

To connect your Cosmo Bike to your smartphone you **must** download the application and not use the Bluetooth in your settings.

ON/OFF Once charged, you can begin using your Cosmo Bike. To turn it on, you just tap the end of the case twice. You can switch off the Cosmo Bike in 2 ways: by the application, or by the remote control with a long press of 5 seconds on the middle button. After a 2 minutes of total inactivity, the Cosmo Bike will automatically turn off. You can download the user guide on our web site: <https://cosmoconnected.com/en>

BEFORE THE 1ST USE

COSMO BIKE

1. Remove the base of your Cosmo Bike. The USB port is at the back of the Cosmo Bike.
2. Plug your Cosmo Bike in using the micro-USB cable that comes with it. The Cosmo turns on and gradually turns off. The recharge indicator LED (red light on the left side) stays on until fully charged.
3. Unplug and then activate (tap the side twice: The Cosmo turns on)

MOBILE APP

1. Download the app from the Apple Store or Google Play Store and then start the app*
2. Go to the "my Cosmo" menu to select your device (Note: only connects through the app; not through the phone Bluetooth settings).
3. Once the device has connected, an update is suggested. Accept the update.
4. Set up the desired attachment mode ("helmet" or "seat")

* Once installed, open the Cosmo Bike app and follow the instructions to create an account. If you already have one, enter your ID and password to log in. You can also create an account at our site cosmoconnected.com. The Cosmo Connected app is free as is creating an account where you can add 3 emergency contacts to be notified by SMS and/or email if an incident is detected by your Cosmo Bike.

MAIN FUNCTIONS Indicator lights / Fall detection and warning lights* / Position lights / Deceleration lights.** These light modes can be manually enabled/disabled via the mobile app and/or via the remote control (optional accessory).

* The use of warning lights is regulated in each country; you must observe the laws in effect.

**The "deceleration" light mode is not enabled when the Cosmo Bike is attached to a helmet for visual comfort.

WIRELESS TECHNOLOGY The Cosmo Bike is equipped with a Bluetooth 4.0 transmitter-receiver. (Low energy). Transmitter power: -8.4 dBm/frequency bandwidth: 2400 to 2483.5 EIRP maximum = -8.4 dBm

BATTERY The Cosmo Bike is equipped with a 900 mAh battery that can be recharged with a 5 V micro-USB (included). A fully charged battery lasts around 220 minutes (3 hr 40 min.). The battery autonomy is 8 hours with continuous lighting (may vary based on the use).

PRECAUTIONS REGARDING THE BUILT IN BATTERY

- Do not attempt to replace the battery in your Cosmo Bike. It is built in and cannot be replaced.
- Charge the battery in accordance with the instructions provided in this guide
- Only use the charger that comes with your product to charge the battery
- Charge your Cosmo Bike using a computer, a powered docking station or certified power station
- Do not attempt to open the built-in battery.

RECHARGING YOUR COSMO BIKE Charge your Cosmo Bike with the micro-USB cable provided. A LED indicator will light up to indicate it is charging and will turn off when fully charged. Check the battery level using the Cosmo Bike app.

ATTACHING YOUR COSMO BIKE ("HELMET" OR "SEAT" MODE)

A brochure explaining the different ways to attach it is provided in the Cosmo Bike packaging.

RECOMMENDATIONS FOR USE Do not try to replace the battery or open the case or take your Cosmo Bike apart. Each of these actions will void the warranty and may pose safety risks. The substances contained in batteries may be harmful for the environment or cause injury if handled and disposed of inappropriately.

- Do not expose your Cosmo Bike to extreme temperatures (The Cosmo is designed to operate when uncharged: -20 °C to +60 °C, and while charging: 0 °C to +45 °C)
- Do not use any abrasive products to clean your Cosmo Bike or the accessories.
- Do not throw your Cosmo Bike onto a fire. The battery may explode.
- Charge the battery in accordance with the instructions provided in this guide. Only use a computer, a power source or a charger certified by a renowned testing laboratory with a charging cable authorised by COSMO CONNECTED.
- Do not charge your Cosmo Bike when wet.



ATTENTION Risk of explosion if the battery is replaced with an incorrect battery. The battery included with the Cosmo Bike must not be replaced by anyone other than COSMO CONNECTED or an authorised service centre. It must be recycled or disposed of separately from household waste as per the instructions. This product is not a toy. Do not let children or pets play with your Cosmo Bike. The product contains small parts which can be a choking hazard.

INFORMATION ON WASTE DISPOSAL AND RECYCLING Dispose of your product at a recycling centre. Each country and province has its own recycling centres for batteries and electronics. To find out where to dispose of your product, contact the waste management service in your area or the shop where you purchased the product. Do not throw the device into the household waste. The packaging and product must be disposed of in accordance with local regulations. Batteries must not be disposed of with municipal waste and must be separated for collection.

WEIGHT AND DIMENSIONS 40 grams (only the Cosmo Bike) 91x31x24.4 mm

VOLTAGE/POWER Nominal: 5 V  - 900 mA

DECLARATION OF CONFORMITY This device was tested to ensure safety certification conformity in accordance with the essential requirements and other provisions of Directive 2014/53/EU. COSMO CONNECTED hereby declares this device complies with the essential requirements and other provisions of Directive 2014/53/EU (RED). The complete Declaration of Conformity for each product is available at our site cosmoconnected.com
COSMO CONNECTED is authorised to affix the CE marking to Cosmo Bike models CB-001-BLACK/ORANGE/BLUE/GREEN/WHITE - CBA - 02 - 001 et CB+CBA-001-BLACK/ORANGE/BLUE/GREEN/WHITE which indicates it complies with the essential requirements and other provisions in Directive 2014/53/EU.

Designed in France/Made in Vietnam

WARRANTY

ITEM RETURN POLICY AND WARRANTY

COSMO CONNECTED™ limited two- (2-) year commercial warranty:

Copyright Cosmo Connected – All rights reserved 2018

COSMO CONNECTED™ of 6 rue Duret, 75116 Paris, France, shall guarantee its COSMO CONNECTED™ brand hardware against hardware and manufacturing defects whenever it is used per the recommendations in the user manual provided that such are discovered within two (years) of the date of initial purchase from a professional by an end user of a new COSMO CONNECTED™ product (Warranty Period). Published recommendations include such matters as technical specifications, safety advice or operating manuals for Cosmo Bike. COSMO CONNECTED™ does not guarantee that Cosmo Bike will function continuously or without error.

Items sold by COSMO CONNECTED™ are conformant to current French regulations, and their performance is suitable for non-professional applications.

Items supplied by COSMO CONNECTED™ entitle you fully and without additional fees, your right to return such items notwithstanding, and pursuant to the relevant statutes:

- to a legal warranty of conformity for Products that are obviously defective, deficient, or damaged or not as ordered;
- to a legal warranty against hidden defects resulting from material, design, or workmanship defects, affecting products that are already delivered, and rendering them unsuitable for use;
- all subject to the conditions and the terms below

*The legal warranty of conformity shall be applicable apart from the commercial warranty that the Product may possibly be covered by. A Customer may decide to take advantage of the warranty against hidden product defects pursuant to the French Civil Code, Article 1641 in which case he or she may choose between having the sale voided or obtaining a sales price reduction pursuant to French Civil Code, Article 1644.
It is pointed out that pursuant to the legal warranty of conformity, a Customer has a two- (2-) year period from the date of product delivery to take action against the Seller; he or she may choose between a repair or a replacement of the Product ordered subject to the cost provisions in French Consumer Code, Article L 217-9; the obligation to provide proof of Product non-conformity in the 24 months following Product delivery is waived.*

To exercise his or her rights, a Customer will need to inform COSMO CONNECTED™ in writing of Product non-conformity or the existence of hidden defects within the above period of time and return the defective Products in the same condition they were when received with all the accessories (packaging, instruction, charger, etc.).

Under warranty, COSMO CONNECTED™ will reimburse the cost of, replace, or procure the repair of the Products or components that it deems non-conformant or defective. Shipping charges shall be reimbursed based on the rate charged, and the return costs shall be reimbursed upon the presentation of the relevant evidence. Reimbursement for Products deemed non-conformant or defective will take place in the shortest possible time but in no case later than fourteen (14) days after COSMO CONNECTED™ determines that there is a non-conformity or a hidden defect. The reimbursement will be credited to a Customer's bank account or will be in the form of a bank check in the Customer's name.

COSMO CONNECTED™ shall not be held responsible under the following circumstances:

- failure to follow the laws of the country to which products are delivered which it will be the Customer's responsibility to check;
- in the event of improper use or use not as per the operating instructions, faulty installation, professional use, carelessness, or improper maintenance by a Customer as well as in the event normal Product wear and tear, an accident, or force majeure;
- run-time error of the application associated with the Product, and more generally, of the warning device, because of an inability to access the telephone network (namely, in areas without coverage or because of the network being unavailable), a technical failure or a failure related to an accident (namely, in the event the mobile terminal hosting the Product application is completely or partially destroyed).

In addition, the warranty shall not cover:

- repairs or component replacement resulting from normal wear and tear;
- any product modifications required to make the product conform to the applicable technical or safety standards of a country other than the one the product was originally designed and built for, namely, France;
- Product deterioration or failure resulting:
 - from improper Product use or installation (non-design Product utilization, installation or use non-conformant to COSMO CONNECTED™ instructions or technical or safety standards of the country of use, etc.);
 - Product maintenance violating COSMO CONNECTED™ instructions or negligent Product maintenance;
 - improper Product handling or use (incorrect operation, fall, impacts, etc.) or unsuitable environmental conditions (exposure to humidity, excessive heat, contact with sand or any other substance, improper electrical power source, etc.);
 - Product modification or repair made by a service provider not authorized by COSMO CONNECTED™.

On the other hand, the Customer shall duly take into consideration that the Product is a deceleration detector that is complementary to the visual braking indication (stop lights) and that it cannot be used instead of such indication. The Customer shall duly note that the Product may not detect braking situations under certain traffic or weather conditions and shall expressly acknowledge this fact.

IN GENERAL, THERE IS NO WARRANTY EXCEPT AS STATED HEREIN, AND ANY IMPLIED WARRANTY, INCLUDING IMPLIED WARRANTIES OF CURRENT COMMERCIAL USE OR SUITABILITY FOR A SPECIFIC PURPOSE, IS HEREBY EXPRESSLY DISCLAIMED. NO RESELLER SHALL BE AUTHORIZED TO MODIFY THE LIABILITY CONDITIONS OR TERMS STATED ABOVE

WARNING TO USERS IN THE UNITED STATES

Federal Communication Commission Interference Statement 47 CFR Section 15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

This device Cosmo Bike by Cosmo Connected complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NO UNAUTHORIZED MODIFICATIONS

47 CFR Section 15.21

CAUTION: This equipment may not be modified, altered, or changed in any way without signed written permission from COSMO CONNECTED. Unauthorized modification may void the equipment authorization from the FCC and will void the COSMO CONNECTED warranty. This device complies with FCC RF radiation exposure limits set forth for general population (uncontrolled exposure). This device must not be collocated or operating in conjunction with any other antenna or transmitter.

ESP Encuentre la guía del usuario y las condiciones de garantía en nuestro sitio:

ITA Trova la guida dell'utente e le condizioni di garanzia sul nostro sito:

DE Das Benutzerhandbuch und die Garantiebedingungen finden Sie auf unserer Website:

POR Encontre o guia do usuário e as condições de garantia em nosso site:

cosmoconnected.com/



info@cosmoconnected.com



+33 1 83 81 26 74

(coût d'un appel local en France)



COSMO CONNECTED

6 rue Saint Dominique - 75007 Paris France



www.cosmoconnected.com