



RESPECT THE ELEMENTS

Regatta Master Watch_w012

Watch Instructions

This watch comes with a 2 year warranty.
For warranty issues please contact your nearest stockist.
Proof of purchase required.

1.0 Introduction

The watch is carefully designed and produced for outdoor activities. In order to utilize these features of your watch, it is advisable to read the following notes before using the watch:

- Avoid exposing the watch to extreme conditions for an unreasonable time.
- Avoid rough usages or severe impacts to your watch.
- Watch's case should only be opened by a certified service agency because the Watch contains precise electronic sensors and components.
- Occasionally clean your watch with a soft cloth to prolong the working life of your watch.
- Store the watch in a dry place when it is not in use for a long time.

2.0 Buttons Operation Summary

Mode Button [M]

- In function modes: Press to enter to the next modes display
- In any setting display: Press to choose among different settings

ST./LAP/SYNC. Button [S/L/S]

- In Alarm Time Mode: Press to select the Alarm Time between ALM1 and ALM 2.
- In Chronograph Mode: Press to start or make a lap time.
- In Timer Mode : Press to start or synchronize.
- In setting displays: Press to increase the settings or hold it to increase at a high speed.

STP./RESET Button [S/R]

- In Alarm Time Mode: Press it select the Alarm Time ON/OFF.
 - In Chronograph Mode: Press to stop or hold to reset chronograph.
 - In Timer Mode: Press to stop or hold to reset the timer.
- In setting displays: Press to decrease the settings or hold it to decrease at a high speed.

Set Button [S]

- In Real Time Mode, press and hold it for about 2 seconds can enter to the time setting display.
- In Function Mode, press and hold it for about 2 seconds can enter to the functional setting display.
- In functional setting display, press to exit the setting and return to the function mode.

 
Backlight Button [L]

- In any mode/display, press it to turn ON the EL backlight for about 3 seconds.

Note: The button operations are summarized as above, for detailed operating instructions, please continue reading.



3.0 Major Function Modes

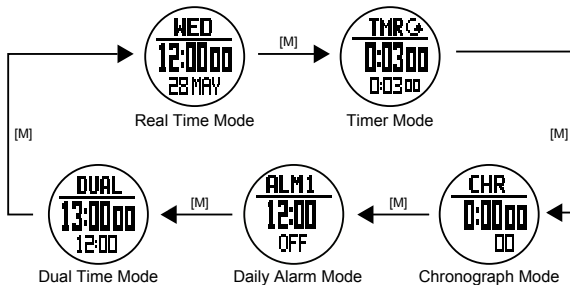


4.0 Real Time Mode

How to set the Real time


- To set the Real time, date, and other settings; In Real Time Mode, press and hold the [S] button for about 2 seconds to enter the setting display (Firstly, the second digits will start flashing).

The Setting Sequence

- When the second digits start flashing, press the [M] button to move the flashing following the setting sequence of the diagram in next page or press the [S/L/S] or [S/R] buttons to reset the second digits to zero.
- When the Minute, Hour is flashing, press the [S/L/S] button to adjust the number.
- When the Format is flashing, press the [S/L/S] or [S/R] buttons to select the 12/24 Hr format.
- When the Year, Month, Day LCD Level is flashing, press the [S/L/S] or [S/R] buttons to adjust the number.
- If one of the settings (Minute, Hour, Year, Month, Day and other settings) is flashing, press the [M] button to move to the next flashing and press the [S/L/S] or [S/R] buttons to adjust the number.
- When the Chime/Keytone ON/OFF digits is flashing, press the [S/L/S] or [S/R] buttons to toggle it ON/OFF.
- When the setting is completed, press the S button once to exit the setting sequence. The setting display will return to Real Time Mode automatically if there is NO Key-stroke for about 1 minute.

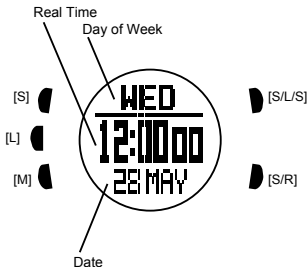

 4.1 Real Time Mode - Setting Sequence

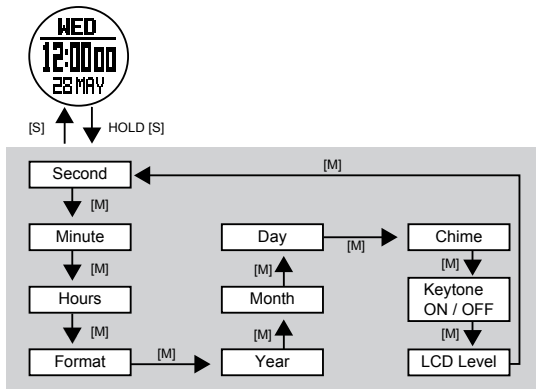


5.0 Timer Mode

How to set the Timer


- In Timer Mode, press and hold [S] button for 2s, the hour will be flashing, press the [S/L/S] or [S/R] buttons to adjust the time which you want. Press the [M] button to change the setting item.
- When the Minute, Second digits is flashing, press the [S/L/S] or [S/R] buttons to adjust the time.
- In SYNC setting, press the [S/L/S] or [S/R] buttons can select between the SYNC Round and SYNC Down. (5.1 Timer Mode - Count Down Running for more details)
- When Alert ON/OFF is flashing, press the [S/L/S] or [S/R] buttons to toggle it ON/OFF. (5.1 Timer Mode - Count Down Running for more details)

Key Lock Function (not operate while timer setting)

- Press and hold [L] button to toggle key lock function ON/OFF, when key lock function is ON,  will be shown at button. The operation of [S/L/S] and [S/R] button will be stopped, in order to prevent mistaken key pressing.



The time which the timer will countdown from (Hour, minute and second).

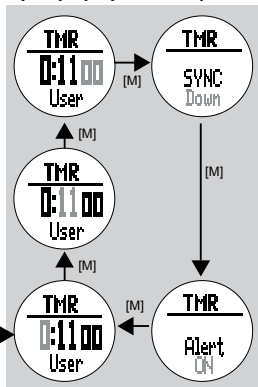


5.1 Timer Mode - Countdown Timer

Countdown Timer

Four Preset Values & One User-defined Value

- This watch's timer has four pre-set values: 5.4.1.0, 5-Min, 3-Min and 1-Min and one user defined value, press [S/R] can change the display among them.

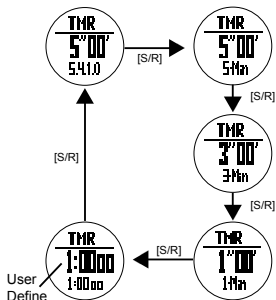


*Remark:
Timer is stopped


Multiples of Present Value

- After you choose one of the present values, you also can multiply those values by pressing the [S] button.

For example: If pre-set timer is 3 Min, press [S] button once the value will multiply one time to 6 Min, if press [S] button twice, the value will keep multiply two times to 9 Min... etc.

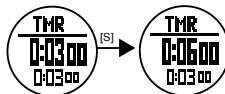

Press [S/L/S] button to start, the countdown icon ↓ will start flashing.

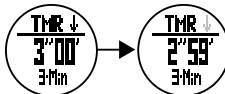


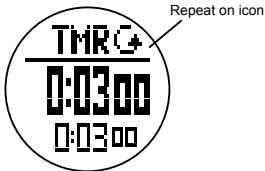
5.2 Timer Mode - Countdown Timer

Synchronization Function

- During timer countdown running, press [S/L/R] button to round up the counting time.
- If the timer is in "SYNC Down" status, the timer will round down to the next full minute.
- If the timer is in "SYNC Round" status, the timer will round down or up to the closest minute.


Repeat Function

- In Timer Mode, press and hold the [M] button for about 2s, to toggle the repeat function ON/OFF.
- When Repeat icon  is on, the timer will repeat counting among the pre-set values.



Alert Indications

- The watch will Beep once for each minute.
- The watch will beep once for last minute of countdown at 50, 40, 30 & 20seconds, and it will beep once for each second of last 10 seconds; Long beep for 3s when reach zero.
- The watch will keep silent when the Alert has been set to OFF.
- For 5.4.1.0 sequence, two beeps will be heard at minutes 4 and 1.

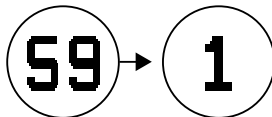


Countdown display from the last 59 seconds to 1 second shows in big digits.

5.3 Timer Mode - Countup Timer & Timer Recall


Timer Countup Running

- When the Timer Countdown runs to zero, the **↓** icon will change to the **↑** icon, enter to the Timer Countup Running.
- If the countup is running, press the [S/R] button can stop countup. If the countup is stopped, press the [S/L/S] button can continue the countup. The Max. Countup Timer is 99 hours 59 minutes 59seconds.
- In Countup Running, press the [S/L/S] button can make a Lap time, it can store up to 20 Laps.
- When countup is stopped, hold [S/R] can reset the timer and go back countdown display.

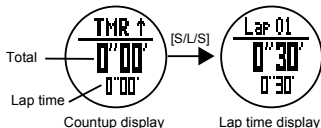

Timer Recall

- In Timer Mode, press [S] button once to enter timer recall display.
- In Timer Recall display, press [S/L/S] or [S/R] buttons to recall the lap time.
- Press [S] button once to return to Timer Mode.

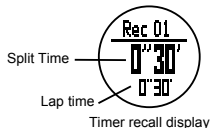



6.0 Chronograph Mode

Chronograph Mode

- In Chronograph Mode, the Hour, Minute, Second appears on middle row of the display.
- The CHR appears on upper row of the display
- The Lap number and 1/100s appears on lower row of the display.

Chronograph Mode - Operation

- In Chronograph Mode, press the [S/L/S] button to start the chrono and enter to Lap 1 time running.
- If the chrono is counting, press the [S/R] button once to stop the counting. If the chrono is stopped, press the [S/L/S] button to re-start the counting.
- The elapsed time between the two start/stop keystrokes will appear on the display.
- During running, press the [S/L/S] button can make a lap time.

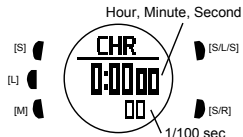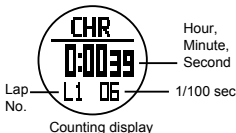

To Reset the Chronograph

- Reset Chronograph, press and hold the [S/R] button for about 2 seconds with Chronograph stopped.

To Recall the Chronograph

- In Chronograph mode, press the [S] button can enter to the Chronograph recall display.
- Press the [S/L/S] or [S/R] buttons recall the each laps time and the Total time.
- In Chronograph recall display, press the [S] button can return to the Chronograph mode.

NOTE: The MAX. counting range of the chronograph is 99 hours 59 minutes and 59.99 seconds, and the MAX. lap is 50 laps.


7.0 Daily Alarm Mode

The Alarm Time Mode


 
- In the Chronograph Mode, press the [M] button to enter Alarm Mode
- The alarm time (hour, minute) shows on the middle row of the display. The alarm status (daily, weekly, OFF) shows on the lower row of the display.

Daily Alarm and Date Alarm

- The alarm can work as a daily alarm or weekly alarm.
- Daily alarm: the alarm will sound at the alarm time every day when the alarm is ON.
- Weekly alarm: the alarm will sound at the alarm time on the designated day of week when the alarm is ON.

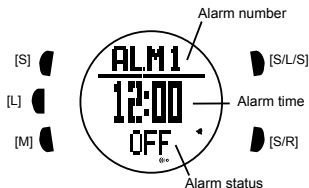


Daily Alarm Mode - To select the Alarm and Chime ON/OFF

- In the Real Time Mode, press and hold the [S] button for about 2s can enter to the time setting, then press the [M] button to change the setting item. When the Chime appears, press the [S/L/S] or [S/R] buttons to toggle the Chime ON/OFF.
- In Alarm Mode, press the [S/L/S] OR [S/R] buttons to set the alarm ON (daily, Mon..Sun)/OFF.
- When the chime indicator  appears, the chime is ON, the watch will beeps once every hour.
- When the alarm indicator  appears, the alarm is ON, the watch will beep for about 30s at the alarm time.
- The alarm sound can be stopped prematurely by pressing any one of the keys, except [L] button.

7.1 Daily Alarm Mode

Daily Alarm Mode - Setting


- To set the alarm time, press and hold the [S] button for about 2s in the Alarm Time Mode, the Hour digit will flash on the display.
- Press the [M] button to change the setting item.
- If one of the numbers (hour, minute) is flashing, press the [S/L/S] or [S/R] buttons to increase/decrease the number or hold the [S/L/S] or [S/R] buttons to increase/decrease the number at a high speed.
- When the setting finishes, press the [S] button to exit the alarm time setting sequence. If no key stroke has been activated for about 1 minute, the setting display will change to the Alarm Time Mode automatically.

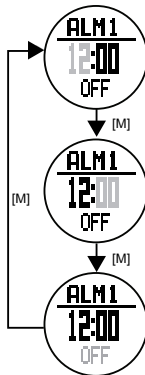

Press [S/L/S] or [S/R]
to select:

- DAILY
- OFF
- MON ...
- SUN

8.0 Dual Time Mode

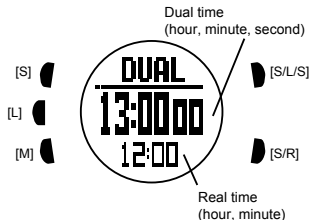

Dual Time Mode

- The Real time (hours, minutes) shows on the lower row of the display.
- The dual time (hours, minutes and seconds) shows on the middle row of the display.

Dual Time Mode-- Setting

- To set the dual time, press and hold the [S] button for about 2s in the Dual Time Mode, the hour number will flash on the display.
- Press the [M] button to change the setting item.
- If one of the numbers (hour, minute) is flashing, press the [S/L/S] or [S/R] buttons to increase/decrease the number or hold the [S/L/S] or [S/R] buttons to increase/decrease the number at a high speed.
- When the setting finishes, press the [S] button to exit the dual time setting sequence. If no key stroke has been activated for about 1 minute, the setting display will change to the Dual Time Mode automatically.

9.0 Power Saving Mode and Battery Low Indication

Power Saving Mode

- This watch includes a Power Saving function. (this function could make the life of the battery can last longer)
- While in the Power Saving Mode, the watch function is still working normally. (i.e. The time keeping function is still running during Power Saving Mode)

How to enter/exit Power Saving Mode

- Hold down the [S/R] button in Real Time Mode for about 5 seconds, then the LCD display will be turned off.
- Press any key can exit the Power Saving Mode, and the LCD display will be resumed.

Standby Mode


- In Real Time Mode, if the user does not press any button for 30 minutes, the screen will go to Standby Mode.

Low Battery Indication



Battery Low Indication

When the battery-low indicator appears on the display, it means that the capacity of the battery is low. It is recommended to replace the battery. However, if the appearance of battery-low indicator is caused by using the watch under very cold conditions, the indicator will be disappeared when normal temperature returns.

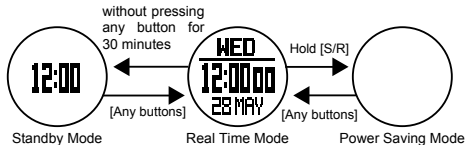

10.0 Specifications

Real Time Mode

- Hour, minute, second, am, pm, month, date, and day of week
- Time System
 - 12-hour or 24-hour format
- Calendar System
 - Auto-Calendar pre-programmed from the year 2000 to 2099

Timer Mode

- Countdown timer present time selection:
 - 5.4.1.0 min, 5,3,1 min & user defined
- Time Synchronization
- Repeat countdown function
- Multiples preset timer
- Key lock function
- 10 laps recall for countup

Daily Alarm Mode

- 2 daily alarms
- Hourly chime

Chronograph Mode

- Resolution
 - 1/100 second
- Measuring Range
 - 99 hours 59 minutes 59.99 seconds
- Lap memory of 50 laps
- Recall lap time and total time

Alarm Sounds

 
- Sounds for 30 seconds at preset alarm time

Dual Time Mode

- Hour, minute, second, am, pm

Others

- Electro-Luminescent (EL) backlight
- Battery
 - Single 3V lithium battery (CR2032)



gillmarine.com