




**HEAD**

**HE-106 Half Pipe Instruction Manual**  
**Digital watch with rubber band**

## REGULAR DISPLAY AND BUTTON OPERATION

E-01

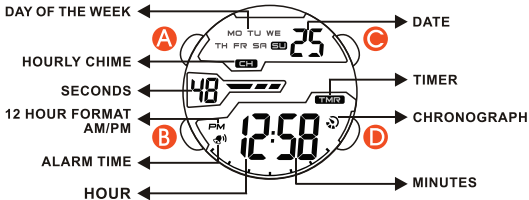


### BUTTON OPERATION

- |               |                             |
|---------------|-----------------------------|
| <b>A</b> SET  | <b>C</b> ADJUST, START/STOP |
| <b>B</b> MODE | <b>D</b> LIGHT              |

## HOW TO CHANGE THE DISPLAY MODE

E-02

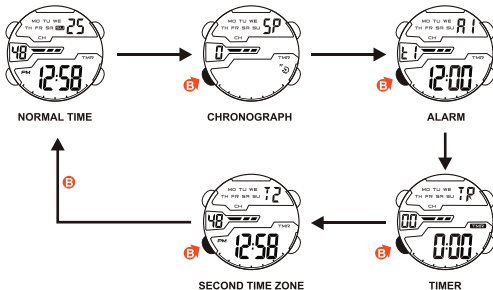

## HOW TO DISPLAY CALENDAR

E-03




NORMAL TIME




CALENDAR

## E-04

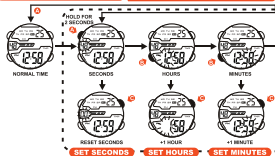

## E-05

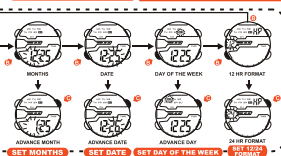




# How to set the alarm, ringing on the hour and key tone

E-08

# How to set the alarm, ringing on the hour and key tone

E-09

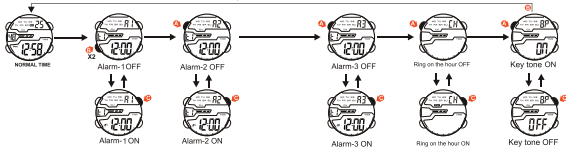

## HOW TO USE THE CHRONOGRAPH

E-10



## HOW TO USE THE CHRONOGRAPH

E-11

 


### BEFORE 30 MINUTES

### AFTER 30 MINUTES



### LAP





## HOW TO USE TIMER

(E-12)

### SET TIMER



HOLD FOR  
2 SECONDS



During the last 10 seconds of the  
countdown, the alarm will beep (BU)  
once per second.


When the timer reaches  
zero, the alarm will sound  
three beeps (BU-BU-BU) per  
second for 10 seconds.  
You can silence the alarm  
by pressing any button.


By pressing C button to start and stop



## HOW TO SET SECOND TIME ZONE

E-14

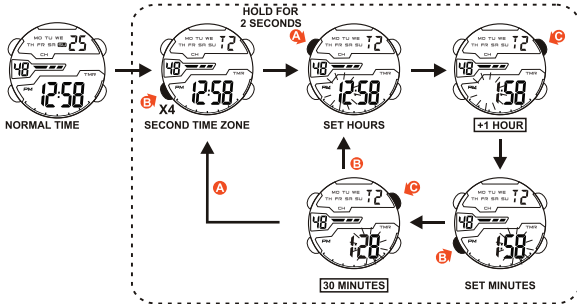

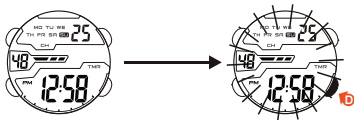

**NOTE:**

1. *This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.*
2. *The illumination provided by backlight may hard to see under direct sunlight.*

1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
2. Do not operate buttons while underwater, or while swimming or diving.
3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
5. Avoid exposing the watch to temperature extremes.
6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
7. Keep your watch away from strong electric fields and static electricity.

## FEATURES AND SPECIFICATIONS

E-17

1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
2. Function:
  - \* Month, Date AM/PM and Electro-Luminescent light.
  - \* Alarm function with buzzer signal output.
  - \* Chronograph function with lap operation.
  - \* Hourly chime.
  - \* 12/24 hour format switch option.
  - \* Timer.
  - \* Second time zone.
3. Accuracy at normal temperature (25°C):  $\pm 30$  seconds a month.
4. Normal operating temperature range: 10°C ~ 40°C.

























