

HEAD

HE-108 Winner Instruction Manual Digital watch with rubber band




E-01)



HOW TO CHANGE THE DISPLAY MODE



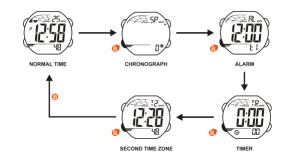


HOW TO DISPLAY CALENDAR






NORMAL TIME

 CALENDAR




HOW TO SET ALARM TIME




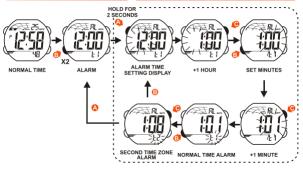



HOW TO USE ALARM AND CHIME DISPLAY



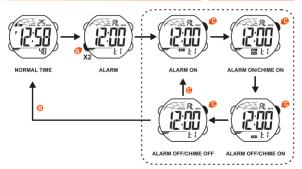


 

 

 

HOW TO USE EL LIGHT

 

E-13

NOTE:

- This watch features an electro-duminescent (EL) backlight, which tends to lose illuminating power after very long use.
- The illumination provided by backlight may hard to see under direct sunlight.

CARE OF YOUR WATCH

E-14

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving.
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes.
- Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- 7. Keep your watch away from strong electric fields and static electricity.

FEATURES AND SPECIFICATIONS

- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- 2. Function:
 - * Month, Date AM/PM and Electro-Luminescent light.
 - * Alarm function with buzzer signal output.
 - * Chronograph function with lap opertaion.
 - * Hourly chime.
 - * 12/24 hour format switch option.
 - * Timer.
 - * Second time zone.
- 3. Accuracy at normal temperature (25°C): ± 30 seconds a month.
- 4. Normal operating temperature range: 10°C ~ 40°C.

