


INSTRUCTION MANUAL

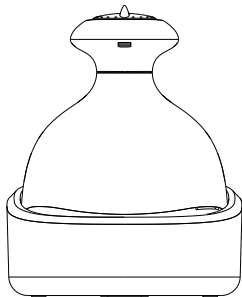

LEMA04

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

MESSAGE CLEANING METHOD

Clean the massager with clean water after use.

1. Pull off 4 silicone points, then take off the plastic piece from snap joints (6).
2. Wash away the hair and stains on the main body of the massager and the brush attachment.
3. Brush the water on the massager body away with dry clothes.
4. Place the massager at a ventilative place and let it completely dry.
5. Please turn off the power first, before cleaning the massager.

PRODUCT SPECIFICATIONS

Scalp Care Massager

Model: OD860

Output Power: 6W

Working Voltage: 5V 1A

PACKING LIST

Massage *1 Usb Cable *1 Manual *1 Adapter *1 (Optional)

Precautions

For proper and safe operation, please read all the safety precautions carefully before use.

warning (For use)

Persons with the following symptoms are suggested not to use the massager. Otherwise, accidents, or skin and body discomfort may be caused. (Consult a doctor before use.)

- ◆Persons with scalp diseases such as inherited dermatitis, seborrheic dermatitis, and eczema.
- ◆Sensitive persons, in particular persons with skin allergies.
- ◆Persons with acute diseases or malignant cancers.
- ◆Persons with infectious diseases.
- ◆Persons with skin problems and health problems caused by silicon products.
- ◆Persons with scalp problems caused by hair washing.
- ◆Persons with blood diseases such as hemorrhagic diseases and hemophilia.
- ◆Persons with high blood pressure.
- ◆Persons with eyes diseases or history of eye diseases.
- ◆Pregnant women.
- ◆Persons taking medication currently (such as anticoagulants or drugs containing blood coagulation components).

DO not operate the massager on the following parts or in the following cases:

- ◆Parts receiving plastic surgery.
- ◆Scalp with dermatitis or sunburn becoming abnormal.
- ◆skin with wounds, eczema, masses or suppurative diseases.
- ◆After drinking alcohol or after being extremely fatigued.
- ◆Physiological period. (unstable hormone level will cause skin damage)


Otherwise, skin or body injury may be caused to rise accidents.

- ◆Discard the package of the massager to avoid accidents such as suffocation of infants.
- ◆Keep the massager out of the reach of the children.
- ◆Never excessively press the massager or move it too fast in use.
- ◆Never put your fingers into the groove of the brush part in use.

Otherwise, skin or body injury may be caused to rise accidents.

- ◆Applicable to scalp care during hair washing.
- ◆If you feel pain or feel sick, please terminate the usage immediately.
- ◆Terminate the usage when there is abnormality or failure.

Structure Description

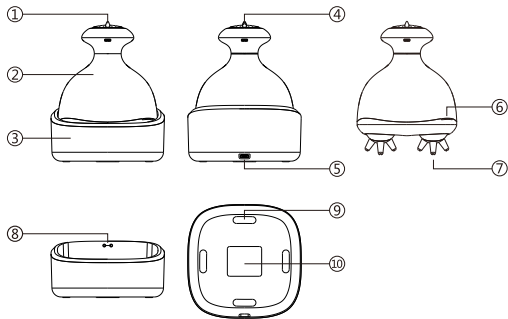

- | | |
|------------------------------------|------------------------------------|
| ① Knob | ② Main body (With waterproof IPX7) |
| ③ Charge base (Without waterproof) | ④ Led indicator |
| ⑤ Charge connection | ⑥ Hook |
| ⑦ Massage pins | ⑧ The charging contact |
| ⑨ Rubber mat | ⑩ Standard Specifications |

Function Description

1. Switch on: switch the knob to clockwise, while hear a "click" sound, the massager is start working. Now the LED indicator turns on with Green light.
2. Massager working: Green Led on, after continually use for 15 minutes the massager will stop working automatically.
3. When the battery power less than 30%, during working, the LED indicator will turns to Red light .
4. Charging indicator: LED indicator is Red light while charging. Indicator turns to Green light after battery full charged.

MESSAGE METHOD OF APPLICATION

1. Rinse hair lightly.
2. Lather hair with shampoo by hands
3. Turn the knob button to a clockwise side, adjust the intensity of the massage power.
4. Slightly press the massager on your skin, let the massager pins touch your skin .Depending on user's requirement to move the massager on the skin. While you are massaging your scalp, please move your hair aside for a better massger.
5. Turn the knob button to anti-clockwise side till you can hear a "click" sound to turn off the power. Continually use the massager for 15 minutes it will turn off automatically.