

GEAR SHED

Assembly Instructions




PACKAGE INCLUDES:

Frame assembly, tent body, stakes


1 PREPARE FOR SETUP

1. Spread out fabric and insert pole into sleeve on Gear Shed vestibule.

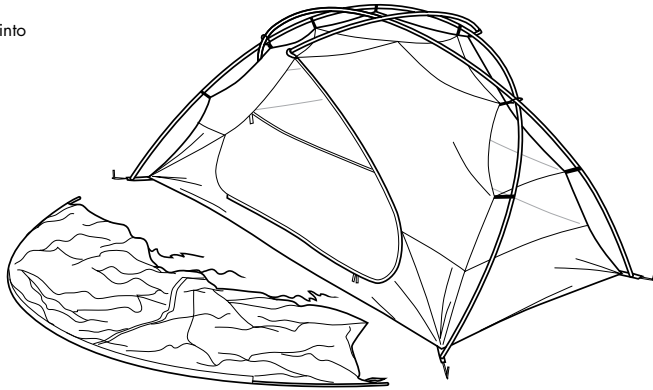

2 SETUP GEAR SHED

1. Attach adjustable loop grommet of Gear Shed vestibule under ends of poles on tent.
2. Attach midpoint grommet to short cross pole on tent. Clip adjustable webbing to tent pole.
3. Attach tent rainfly as normal. Tent rainfly grommet must go on outside of Gear Shed vestibule grommet.

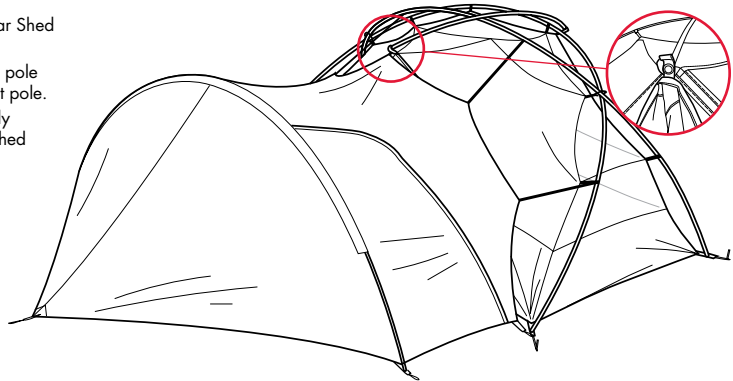

USE TIPS: All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. For complete care and use instructions, refer to the Owner's Manual (available at www.msrgear.com/GearShed).



MOUNTAIN SAFETY RESEARCH®

© 2018 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA
1-800-531-9531 | 1-206-505-9500