

# USER MANUAL

The logo for EVO4K+ WI-FI CINEMA is centered on a black rectangular background. The text "EVO4K+" is in a large, bold, gold-colored sans-serif font. Below it, the words "WI-FI CINEMA" are written in a smaller, white, all-caps sans-serif font.

**EVO4K+**  
WI-FI CINEMA

---

## SUMMARY

---

PREFACE .....	5
PRECAUTIONS .....	5
DESCRIPTION .....	5
TECHNICAL SPECIFICATIONS .....	6
STRUCTURE .....	7
OPERATING INSTRUCTIONS .....	7
Charge .....	7
Inserting and removing the memory card .....	7
METHOD OF USE AND SYMBOLS .....	8
Video Mode .....	8
Car-carrying or dash-cam mode .....	8
Photo mode .....	9
PARAMETER SETTINGS (CAM) .....	10
VIDEO PARAMETERS SETTINGS (CAM) .....	10
Video resolution .....	10
Image stabiliser: .....	11
Upside down .....	11
Slow motion .....	11
White balance: .....	11
PHOTO PARAMETER SETTINGS (CAM) .....	13
Resolution .....	13
Self timer .....	13
Continuous shooting .....	13
SETUP PARAMETER SETTINGS (CAM) .....	14
Power save .....	14
Date and time .....	14
Language .....	14
Timelapse .....	14
Timelapse duration .....	15
Enter date .....	15
System .....	15
Format .....	16

DISPLAY PHOTO, VIDEO AND CAMERA MODES.....	17
LOCK.....	17
Delete file.....	17
CONNECTIVITY .....	18
COMPUTER CONNECTION .....	18
CONNECTION WITH A VIDEO OR TELEVISION .....	18
WI-FI CONNECTION .....	19
Connecting your smartphone and video camera.....	19
VIEWING 4K AND 2.7K FILMS ON SMARTPHONES AND COMPUTERS .....	19
APP AND ANDROID AND iOS FUNCTIONALITIES .....	20
White balance .....	21
Battery level.....	21
Wi-Fi signal strength.....	21
View photos and videos.....	21
Shoot button .....	21
Enable video mode.....	21
Enable photo mode.....	21
Enable timelapse mode .....	21
Video recording duration .....	22
Parameters setting .....	22
Resolution .....	22
Digital zoom .....	22
PARAMETER SETTINGS (WITH APP) .....	23
Video Parameters:.....	23
White balance .....	23
Frequency .....	23
Display date .....	23
Format .....	23
Slow motion.....	23
Upside down .....	23
Photo parameters: .....	24
Continuous shooting.....	24
White balance .....	24
Frequency .....	24

Display date .....	24
Format .....	24
Upside down .....	24
Timelapse duration .....	24
Upside down .....	24
DISPLAY PHOTOS AND VIDEOS (WITH APP) .....	25
Displaying a single photo or video .....	25
Multiple selection .....	26
Download Manager .....	26
PRECAUTIONS .....	27
Precautions for the camera case .....	27
Precautions for the 3M dual-side foam tape .....	27
INCLUDED IN THE PACK .....	28
WARRANTY AND LEGAL NOTES .....	28

---

## PREFACE

---

Thank you for choosing EVO 4K+, the high-definition digital camera. Easy to use, compact and with an integrated design.

With its high-definition and dynamic image capturing technology it can record your daily activities at anytime and anywhere,

so you can remember your experiences and share them with your family and friends.

This manual will clearly explain you how to use and install the video camera, providing detailed information as well as technical specifications.

Please read this Manual carefully before the use and keep it for long-term reference.

---

## PRECAUTIONS

---

Please observe the following points when using the cam:

- Do not drop, hit or shake the camera.
  - Keep the device away from any electromagnetic source, such as magnets or electro motors, or from any other object emitting strong radio waves, like antennas. Strong magnetic fields may cause failures to the camera or damages to image and audio.
  - Do not expose the camera to high temperatures or to sunlight directly.
  - Keep the memory card away from electromagnetic sources, such as TVs, speakers or magnets. Do not put it in any place with potential static, as the data stored may be lost.
  - If the device overheats, smokes or smells in charging, please disconnect the power supply immediately.
  - Keep the camera out of the reach of children in charging, as the power cord may cause accidental suffocation or electric shock.
  - Keep the camera in a cool, dry and dust-free place.
  - Use a lens and screen guard to prevent scratching or permanent damages.
  - Use a cloth and specific products to clean the lens and screen; do not use any organic solvent.
- 

## DESCRIPTION

---

able to perform the following functions:

- ┆ High definition (HD) video recording and photos.
- ┆ Real-time image display.
- ┆ Recorded Video recall function.
- ┆ Photo files recall function.
- ┆ Car-carrying function.
- ┆ 2.0 USB high-speed data transfer (output only).
- ┆ USB cable for battery charging.
- ┆ All accessories are easy to use to facilitate shooting in any place and at any time.

**Supplemented by its accessories, this product is the result of multiple patented technologies and can be used for recording anything, anytime, anywhere.**

---

## TECHNICAL SPECIFICATIONS

---

 
The EVO 4K+ video camera has the following specifications:

- Image sensor: 8.0 mega-pixel CMOS
- Functions: Video recording, photos, preview, car-carrying mode
- Lenses F2.8 f=2.5 mm
- Screen: LCD 2.0"
- 4X digital zoom through app
- Photo resolution: 16M, 8M, 5M, 4M
- Video resolution: 1440P (1920x1440 30fps), FHD (1920x1080 30fps), FHD (1920x1080 60fps), HD (1280x720 120fps), HD (1280x720 60fps)
- External memory: TF card (Maximum 32GB)
- File format: JPEG, MOV H.264
- USB Port: USB 2.0 one direction
- Battery: Internal 3.7V 1200mAh rechargeable lithium battery
- Menu: English, Italian, Spanish, Portuguese, French, German, Czech, Slovak, Greek, Hebrew
- Supported operating systems Windows XP/Vista/7/8 or better, Mac 10.2
- Dimensions: 598x44x22,5 mm

---

## STRUCTURE

---

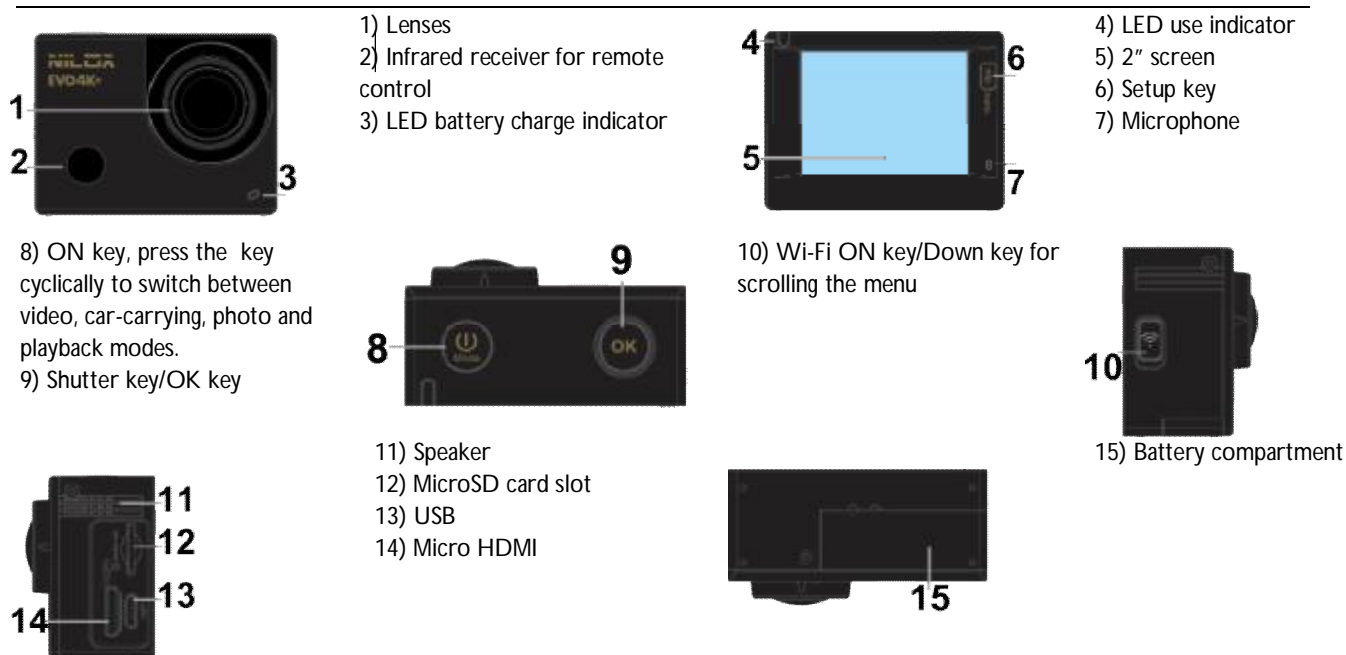

---

## OPERATING INSTRUCTIONS

---

### CHARGE

Turn on the video camera and check battery status; if low, charge it. Either a computer USB port or power adapter (not included) can be used to charge it. Generally, it takes 2-4 hours to complete the charge cycle.

### INSERTING AND REMOVING THE MEMORY CARD

The EVO 4K+ video camera supports TF memory cards with capacity up to 32 GB. Any type of Micro SD card can be used but we recommend high speed cards to optimise performance.



- Installation

1. Make sure the video camera is off.
2. Insert the card in its slot, being careful that it is inserted in the correct direction until a click is heard.

- Removal.

Turn off the video camera.

- 2 Press the centre of the back of the card and release it; then remove it.

---

## METHOD OF USE AND SYMBOLS

---

The camera has 4 operating modes:

- Video recording mode
- Car-carrying or dash-cam mode
- Photo mode
- Video and photo view mode.



Press the  key to switch between the various modes.

The camera is set to video mode by default when turned on.

Following are some of the symbols that most commonly appear on the screen.

### VIDEO MODE



1. Video Mode
2. Frames per second
3. Video resolution
4. Recording time
5. Battery charge level

### CAR-CARRYING OR DASH-CAM MODE



1. Video Mode
2. Frames per second
3. Video resolution
4. Recording time
5. Battery charge level

In this mode, every recorded file will last 3 minutes. When the memory card is full, the first recording will be deleted followed cyclically by the least recent videos.

Set car-carrying mode and turn the cam off; when you restart it, with the car battery charger connected, the cam will automatically start and begin recording.

Note:

If the cam in car-carrying mode is mounted upside down at the top of a car windscreen, the icons for that mode will be rotated by 180°.

 


### PHOTO MODE



1. Photo mode
2. Image resolution
3. Remaining photo indicator
4. Battery charge level

Preview mode

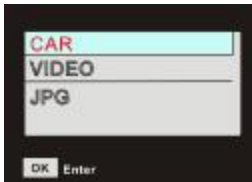


The screen shown on the left will be displayed; if you select CAR, previews of videos made in car-carrying mode will be displayed; VIDEO will show previews of videos made in standard mode while JPG will show previews of photos taken.




---



## PARAMETER SETTINGS (CAM)


---

To set video camera parameters, use the  key and navigate the menu with the  keys.

Confirm selections by pressing .

If the EVO 4K+ is in video mode before the  key is pressed, video and general settings can be edited; the following symbol will appear on the top bar  .

Vice versa, if the EVO 4K+ is in photo mode, photo and general settings can be edited; in this case, the   symbol will appear.

Press  to switch between the 2 modes.

ATTENTION: The  only functions downwards in cyclic mode.

---

## VIDEO PARAMETERS SETTINGS (CAM)

---

These settings are valid for videos recorded in standard and car-carrying modes.

 and .

The  key will take you where you want to go;  will take you back to the previous menu.



### VIDEO RESOLUTION

It allows to select the desired resolution for the video recording.

Go to:

**Movie size**

Press  to confirm

Select with  and confirm with 

The choices for the video resolution are the following:

- 4k (25fps)
- 2,7k (30fps)
- 1440p (30fps)
- 1080p (60 fps)
- 1080p (30 fps)
- 720p (120 fps)
- 720p (60 fps)

**ATTENTION: WHEN RECORDING IN 4K AND 2,7K MODE PLEASE USE HIGH SPEED MICROSD CARD**



### IMAGE STABILISER:

Lets you turn on the image stabiliser.

Go to:

Image stabiliser:

Press  to confirm

Select with  and confirm with 

The choices for the stabiliser as are follows:


- OFF
- ON



### UPSIDE DOWN

It lets you fully overturn the video camera; videos will be rotated 180 degrees.

Go to:

Upside down

Press  to confirm

Select with  and confirm with 

The choices for the stabiliser as are follows:


- OFF
- ON



### SLOW MOTION

Lets you record videos in slow motion

Go to:

Slow motion

Press  to confirm

Select with  and confirm with 

The choices for the stabiliser as are follows:

- OFF
- ON



### WHITE BALANCE:

This lets you achieve higher brightness and colour saturation according to the weather and lighting conditions.

Go to:

White balance:

Press  to confirm

Select with  and confirm with   
Possible choices are:

- Automatic
- Daylight
- Cloudy
- Fluor
- Tungsten

---

## PHOTO PARAMETER SETTINGS (CAM)


---



### RESOLUTION

It lets you set photo resolution.

Go to:

Resolution

Press  to confirm

Select with  and confirm with 


Possible choices are:



- 16 M (4640x3480)
- 10 M (3648x3480)
- 8 M (3264x2448)
- 5M (2592x1944)
- 4M (2304X1728)

### SELF TIMER

Go to:

Self timer

Press  to confirm

Select with  and confirm with 


Possible choices are:



- OFF, 2s, 10s, Double

### CONTINUOUS SHOOTING

Go to:

Type of shot:

Press  to confirm

Select with  and confirm with 

Possible choices are:

- Off,
- 3 photos
- 5 photos
- 10 photos
- Continuous shooting

---

## SETUP PARAMETER SETTINGS (CAM)

---



### POWER SAVE

Lets you deactivate the screen after a time that you set.

Go to:

Power save

Press  to confirm

Select with  and confirm with 


Possible choices are:



- Off, 1 minute, 3 minutes, 5 minutes

### DATE AND TIME

Go to:

Date Time

Press  to confirm

Select with  and confirm with 

Use the  keys to select and confirm by pressing  to move to the next step; once settings are complete, confirm by pressing .



### LANGUAGE

This lets you set the EVO 4K+ display language.

Go to:

Language

Press  to confirm

Select with  and confirm with 

Possible choices are:

- English, French, Spanish, Italian, Portuguese, German, Czech, Slovak, Greek, Hebrew

### TIMELAPSE



This lets allows you to enable the length of time between photos:

Go to:

Timelapse

Press  to confirm



Select with  and confirm with 

Possible choices are:

Off, ½ second, 1second, 3second, 5 seconds, 10 seconds, 30 seconds, 1 minute.

The resulting video will be a more or less accelerated video depending on the setting parameter used.

A normal video has a reproduction of 30 or 60 frames per second.

For example, if you set the parameter at 10 seconds, the result is 6 frames in one recording minute and 30 frames in 5 minutes.

If set to display 30 frames per second, the final video will last one second; a five-hour video will last about 60 seconds in play mode.

Obviously during this mode the camera must be fixed on a tripod or be positioned on a stable support.

**Note:** this function is mostly used to display long events in quick sequence (blossoming flower, rising sun, moving clouds, etc.)

### TIMELAPSE DURATION

See the operation described above.

Once you have decided on the number of photos to shoot, you then need to define the time that the EVO 4K+ will record in that mode.

Go to:

[Timelapse duration](#)



Press  to confirm



Select with  and confirm with 

Possible choices are:

- Unlimited (stopped by user), 5 minutes, 10 minutes, 15 minutes, 20 minutes, 30 minutes, 60 minutes.

### ENTER DATE

Lets you print the date and time on the video or photo



Go to:

[Enter date](#)



Press  to confirm



Select with  and confirm with 

Possible choices are:

- Off, date, date and time

**Note:** if you enable this function, make sure that the time and date are set correctly on the cam.

This function is available when the image stabilizer is not active.



### SYSTEM

Lets you see information about the cam and memory card. You can also do a factory reset from here.

Go to:

[System](#)

Press  to confirm

Select with  and confirm with 

Possible choices are:

- Reset everything (reset original cam settings)
- System information (shows cam firmware version)
- MicroSD information (shows the size of the memory card and the space available)

**Note:** if the cam is reset to its original settings, the menu will go back to English.



#### FORMAT

Lets you format the microSD card.

Go to:

[Format](#)

Press  to confirm

Select with  and confirm with 

Possible choices are:

- No, Yes

**Note:** Formatting the MicroSD will delete all saved data. You will not be asked to confirm.



---

## DISPLAY PHOTO, VIDEO AND CAMERA MODES

---



Press  repeatedly until  appears. Select the item you want to see:

- Car: videos recorded in car-carrying mode
- Video: videos recorded in standard video mode
- Jpg: photos taken in standard mode

The photos and videos taken appear.



enables the menu for the photo and video modes.



### LOCK

It lets you protect photos or videos against being accidentally deleted.

Go to:

**Protect**

Press  to confirm

Select with  and confirm with 

Possible choices are:




- Lock/Unlock I: to lock or unlock a single photo or video
- Lock all: to protect all files in the memory against being deleted
- Unlock all: the opposite of the operation described above.

### DELETE FILE

It lets you delete photos or videos.

Go to:

**Delete**

- Press  to confirm
- Select with  and confirm with 
- Possible choices are:
- Delete one, Delete all.

**NOTE:** Further confirmation is required for both before permanently deleting items.

---

 
## CONNECTIVITY

---

### COMPUTER CONNECTION

The EVO 4K+ camera has 1 USB micro port.

Use this port to connect the camera to a computer to charge or download photos and videos from the memory card.

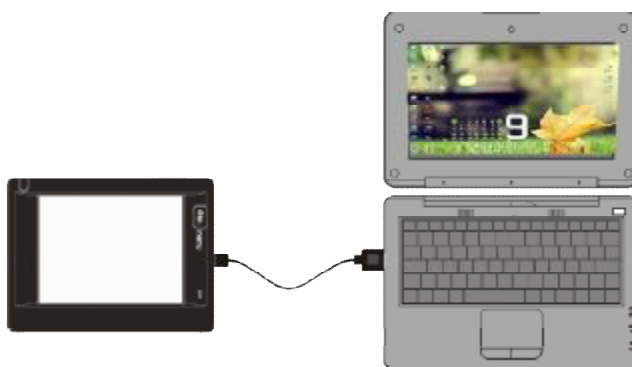

MSDC appears on the screen when connected to the computer.

The internal EVO 4K+ card is displayed as an external disk drive.


**NOTE: the USB outlet is unidirectional.**

 You can download photos and videos from cam to computer but not the other way round.

### CONNECTION WITH A VIDEO OR TELEVISION

The EVO 4K+ camera has 1 HDMI port.

You can use the HDMI port to connect the camera to a television or video using a suitable cable (not provided).

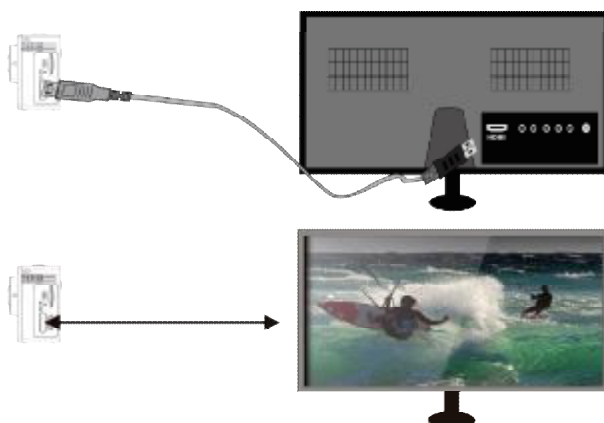

The signals from the cam are automatically displayed and show your photos and videos in Full HD.

---

## WI-FI CONNECTION

---


Thanks to the built-in Wi-Fi module, EVO 4K+ can be connected to Apple or Android Smartphones and Tablets and remotely controlled.

Just download the free EVO 4K+ App to connect the device in Wi-Fi.

Open the App-Store or Google-Play Store, search for the NILOX F-60 RELOADED App and download it; the following icon will be displayed:



### CONNECTING YOUR SMARTPHONE AND VIDEO CAMERA

- Press  on the right side of the cam
- Wait until the red led starts to blink
- "Wi-Fi ON" will appear at the same time
- The name of the network and the password will appear next
- The network (SSID) is EVO 4K+
- The default password is *Nilox1234*
- Connect the cam and smartphone
- At this point, start the App you previously downloaded on your phone.

---

## VIEWING 4K AND 2.7K FILMS ON SMARTPHONES AND COMPUTERS

---

Films shot in 4k and 2.7k have very high resolution, take up a lot of memory and involve the transfer of huge amounts of data from the memory card to the device.

This means that to view them using an APP or a PC, you need a Smartphone or a high performance PC.

With an older generation or inadequate computer or Smartphone, the film you want to see may be jerky or incomplete.

If this is the case, we recommend that you use a HDMI cable to connect the cam with a TV or monitor for a more fluid viewing experience.

## APP AND ANDROID AND iOS FUNCTIONALITIES

Once the EVO 4K+ and Smartphone are connected and you have started the application, you can manage the cam from your smartphone or tablet.

The display modes for Android and iOS are very similar.

The display modes for Android and iOS are as follows:

Android:



- 1 White balance:
- 2 Battery level
- 3 Wi-Fi signal strength
- 4 Viewing photos and videos
- 5 Photo/video recording button
- 6 Enable video mode

- 7 Enable photo mode
- 8 Enable timelapse mode
- 9 Recording length
- 10 Resolution
- 11 Parameters setting

iOS:



- 1 White balance
- 2 Battery level
- 3 Viewing photos and videos
- 4 Photo/video recording button
- 5 Enable video mode

- 6 Enable photo mode
- 7 Enable timelapse mode
- 8 Recording length
- 9 Resolution
- 10 Parameters setting

### WHITE BALANCE

Shows which mode the cam is operating in given the light conditions.

### BATTERY LEVEL

Shows the remaining charge

**NOTE:** How long the battery lasts depends on the video resolution, the Wi-Fi connection and the stability of the signal.

A very weak Wi-Fi signal drains the battery more quickly.

Under normal conditions with HD video resolution, the battery lasts about 1 hour; if the Wi-Fi connection is not used, it will last more than twice that.

### WI-FI SIGNAL STRENGTH

Shows the quality of the signal between the cam and smartphone.

### VIEW PHOTOS AND VIDEOS

Lets you see the photos and videos saved on the cam memory.

Details of this function will follow below.

### SHOOT BUTTON

Lets you take videos (in normal or Time Lapse mode) and photos; pressing the same button again stops video recording.

If the cam is in photo mode, the icon at the top of the screen changes to one of a camera.

### ENABLE VIDEO MODE

Press this button to put the cam into video mode, the shoot button in the middle will be a small red dot as shown in the figure.

### ENABLE PHOTO MODE

Press this button to put the cam into photo mode, the shoot button in the middle will become a camera.

### ENABLE TIMELAPSE MODE

Press this button to put the cam into Time Lapse mode, the shoot button in the middle will be a small red dot, which signifies that a video is being made.

**NOTE:** This function is only available if the Time Lapse parameters are set properly; otherwise an error message will appear.

### VIDEO RECORDING DURATION

Shows how long the video you are taking lasts; if you are in photo mode, you will see a self-timer. In the latter case, pressing the symbol lets you reset the self-timer parameters:

- Off, 2 seconds, 10 seconds

### PARAMETERS SETTING

This lets you set a series of additional parameters on your EVO 4K+. Details to follow below

### RESOLUTION

Lets you set the resolution: video in a video environment and photo in a photo environment.

Video resolution:

- 4k, 2.7k, 1440P 30fps, 1080P 60fps, 1080P 30fps, 720P 120fps, 720P 60fps

Photo resolution:

- 16M, 10M, 8M, 5M, 4M

4k and 2,7k video resolution are not available by App

### DIGITAL ZOOM

Does not appear as an icon, but for both apps, when you press any point on the smartphone or tablet screen, the 4X digital zoom works.

Scrolling the green dot increases and decreases the degree of zoom.



---

## PARAMETER SETTINGS (WITH APP)

---

Some parameters of the EVO 4K+ can be set using the app.

### VIDEO PARAMETERS:

#### **White balance**

This lets you achieve higher brightness and colour saturation depending on the light conditions.

Possible choices are:

- Automatic
- Daylight
- Cloudy
- Fluor
- Tungsten (internal traditional incandescent bulb)

#### **Frequency**

Lets you define the transmission frequency to an external device.

Possible choices are:

- 50 HZ, 60 HZ

#### **Display date**

Lets you print the date and time previously set on the cam for the video or photo.

Possible choices are:

- Off, date, date and time

#### **Format**

This lets you format the EVO 4K+ MicroSD card

#### **Slow motion**

Lets you enable the slow motion mode

Possible choices are:

- Off, On

#### **Upside down**

Lets you print the date and time previously set on the cam for the video or photo.

Possible choices are:

- Off, On

### PHOTO PARAMETERS:

#### **Continuous shooting**

Lets you set the number of shots to be taken in sequence.

Possible choices are:

- off, 3 photos, 5 photos, 10 photos

#### **White balance**

This lets you achieve higher brightness and colour saturation depending on the light conditions.

Possible choices are:

- Automatic
- Daylight
- Cloudy
- Fluor
- Tungsten (internal traditional incandescent bulb)

#### **Frequency**

Lets you define the transmission frequency to an external device.

Possible choices are:

- 50 HZ, 60 HZ

#### **Display date**

Lets you print the date and time previously set on the cam for the video or photo.

Possible choices are:

- Off, date, date and time

#### **Format**

This lets you format the EVO 4K+ MicroSD card.

#### **Upside down**

Lets you turn the view of videos upside down.

Possible choices are:

- Off, On

#### **Timelapse duration**

Once the 2 above-mentioned parameters have been defined, set how long the cam will continue shooting photos for a Timelapse.

Possible choices are:

- 5 minutes, 10 minutes, 15 minutes, 20 minutes, 30 minutes, 1 hour, unlimited (stop by pressing the shoot button again)

#### **Upside down**

Lets you turn the view of videos upside down.

Possible choices are:

- Off, On





---

## DISPLAY PHOTOS AND VIDEOS (WITH APP)


---

As previously seen, you can access the photo and video archive on the MicroSD at any time in both applications.

Press the  icon at the bottom left. Videos are identified by the  symbol which appears at the bottom right in preview.



When you select an individual photo or video, it is automatically displayed.

The  icon at the bottom left lets you select one or all the files.

These files can now be deleted or downloaded from the cam MicroSD card to a smartphone or tablet

### DISPLAYING A SINGLE PHOTO OR VIDEO

As seen above, when you select a single photo it is displayed on the full screen; the arrows at the sides let you scroll back and forth through all the images saved on your EVO 4K+.


The symbol at the bottom left lets you delete single photos while the symbol at the bottom right lets you download to a smartphone.

 
If instead, you decide to display a video, it will be buffered before being shown. This means that when you watch the video it will always be played smoothly.



The same method applies for deleting and downloading videos as for photos.



### MULTIPLE SELECTION


From the start screen, touch the  symbol at the bottom left to access multiple selection mode. This will let you select one or more of the files saved on the cam.

Touch  at the top right automatically selects all the photos and videos. Touching a single photo or video selects or deselects it (if already selected). The possible actions

are deletion  or downloading .



### DOWNLOAD MANAGER

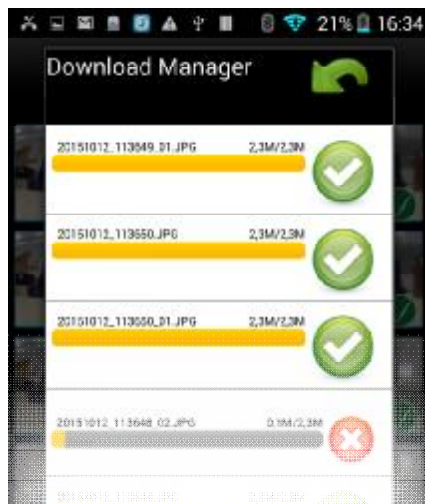 

The Download Manager comes into action when you download one or more files.

Your photos and videos will be transferred from the camera memory card to the connected Smartphone or tablet and will be saved to the smartphone photowall and videowall.

---

## PRECAUTIONS

---

### PRECAUTIONS FOR THE CAMERA CASE

The waterproof case is a precision component. Please use the following precautions:

- Do not randomly dismount and mount the O-ring of the case, keys and lens cover, otherwise the waterproof performance deteriorates.
- Do not put the case in a place where it is exposed to corrosive acid or alkaline gases and keep it away from chemical or corrosive substances.
- To prevent deformation, do not store the product for long periods in a place where temperatures are high (over 50°C) or low (-10°C).
- Do not expose to direct sunlight for long periods to prevent deterioration of waterproofing.
- Before every use, ensure that the O-ring is intact, that there are no foreign bodies on the seal, that the case is properly sealed and that the seal is watertight.
- After use in salt water, immediately rinse the case under running water.
- Use a dry cloth to dry the surface and store the device in a dry and ventilated place.

### PRECAUTIONS FOR THE 3M DUAL-SIDE FOAM TAPE

When using the 3M dual-side foam tape, adhere to the following precautions:

- Before fixing the 3M dual-side foam tape, select a proper surface to ensure proper contact between the foam tape and the surface.
- Before using the 3M dual-side foam tape, clean the surface and heat the foam tape, using for instance an electric blower, especially in a place where temperature is lower than 0°C.

**Before using EVO 4K+ video camera, pay attention to the following notice information:**







- During continuous use, the body temperature of EVO 4K+ video camera increases. The situation is normal. The camera surface may be hot after prolonged use.
- If the video camera is not used for a long time, remove and keep the battery properly and recharge it every three months to ensure the battery performance.
- Shooting view angles are slightly different in different working modes of the video camera.
- If a video file is large in size, a computer or other professional players are preferred for a smooth playback.
- Cyclic recording and frequent recording/deleting operations may leave data fragments in the SD card, causing failure to file recording or saving. To solve this problem, just backup the data on an external storage and format the SD card.

---

## INCLUDED IN THE PACK

---

The articles included in the pack are the following:

1 EVO 4K+ complete with underwater case		1 underwater case open	
1 hook support		1 support	
1 bike mounting bracket		1 flat plate and 1 curved plate	

---

## WARRANTY AND LEGAL NOTES

---

EVO 4K+ is equipped with a rechargeable lithium polymer battery. To reduce the risk of fire, please avoid tampering, falls, contact with water or fire.

To avoid personal injury, electric shock, fire or damage to various parts of the product, please follow the following instructions: **Do not immerse the product without its waterproof case into water**

### **Personal Safety.**

Do not disassemble, repair, alter or modify any part of the O-ring of the product. Do not touch the product with metallic objects or chemicals.

Any failure to comply with what above can cause risks to the person and other people.

In case of malfunctioning of the product, please contact the technical service or a qualified supplier.

### **Technical support.**

This product is warranted in accordance with current legislation and therefore please contact your dealer in case of need of technical assistance and / or warranty service.

## INSTRUCTIONS FOR THE ENVIRONMENT



This product may contain substances that can be harmful to the environment and to the human health, if not disposed of properly. We therefore provide you the following information in order to prevent the release of such substances and to optimize use of natural resources. The electrical and electronic products should not be disposed of in the normal household waste, but should be properly collected in order to be correctly treated. The symbol of the crossed bin shown on the product and in this page reminds the need to properly dispose of the product at the end of its life. In this way you can avoid that a non-specific treatment of the substances contained in these products, or an improper use of parts of them can lead to harmful consequences for the environment and human health. Moreover, you can contribute to the recovery, recycling and reuse of many of the materials composing these products. This is why the manufacturers and distributors of Electrical and Electronic Equipment (EEE) organize proper collection and disposal of the equipment themselves. At the end of the product's lifespan, please contact your dealer for instructions regarding disposal. When purchasing this product your distributor will inform you of the possibility to replace your old device with a new one, on condition that the type of product and its functions are the same. If the dimensions are not over 25 cm, the EEE (Electrical and Electronic Equipment) can be returned without any equivalent product purchase obligation. Disposal of the product in any other way will be liable to the penalties foreseen by the laws in force in the country where the product is disposed of. Moreover, we suggest adoption of the following additional measures to protect the environment: recycling the inner and outer packaging and disposing of any used batteries correctly. With your help, we can reduce the amount of natural resources used in the manufacture of EEE(Electrical and Electronic Equipment), minimize use of landfills for product disposal and improve quality of life by preventing the release into the environment of potentially dangerous substances.

## INSTALLING AND REPLACING BATTERIES



The product contains a battery that could be replaced during the lifetime of the product itself. Dispose of the battery contained in the product correctly at the end of their useful lifespan (thus when it can no longer be charged) by placing it in appropriate battery disposal container separate from generic unsorted waste. Collection and recycling of batteries helps protect the environment and preserve natural resources, allowing recovery of valuable materials.

## WARRANTY VALIDITY

- One year if the product is purchased by a natural or legal person who uses it in business as an entrepreneur, sales representative, craftsman or professional or his/her intermediary.
- Two years if the product is purchased by a consumer or user (the natural person who does not use it in business as an entrepreneur, sales representative, craftsman or professional).
- Six month on the battery, regardless of the occupation of the product purchaser.
- The warranty covers factory or material defects.
- Product support and warranty: visit [www.nilox.com](http://www.nilox.com) to learn more.

## WARRANTY RESTRICTIONS

The warranty is null and void in the following cases:

- No proof of purchase (invoice or receipt).
- Tampering or alteration of hardware parts and the display.
- Other defects due to: inappropriate use, unauthorized hardware/software changes, operations or storage not in accordance with technical product specifications; incorrect maintenance; defects due to use of software other than that supplied and all elements (hardware and software) not designed to be used with the product; technical work performed by unauthorized personnel.

The above refers to consumer goods warranty principles pursuant to Directive 1999/44/EC.

## BRIEF DECLARATION OF CONFORMITY



This equipment has been comply to directive 2014/53/EC of the European Parliament and the European Commission, referring to radio equipment and telecommunications and their mutual recognition. The declaration of conformity is available on-line to the following link: [ftp:\\ftp.hellatron.it](ftp://ftp.hellatron.it) (user name:

declaration@hellatron - password: hellatron).

This equipment may be used in all European Union countries and in all countries applying Directive 2014/53/EC, without restriction, with the exception of the following countries:

Italy (IT): this peripheral complies with the National Radio Interface and meets Frequency Assignment requirements. The use of this equipment outside areas where the owner operates requires general authorization.

Norway (NO): equipment not to be used in a geographical area within a radius of 20 km from the center of Ny Alesund

For more info, consult the website [www.comunicazioni.it](http://www.comunicazioni.it)



CE (  ) logo and/or WEEE (  ) logo, in some devices, isn't fully compliant with minimum dimensions requirement to European Directive due to limited sticker area.

We recommend you keep the original packaging