 




EN Instruction manual

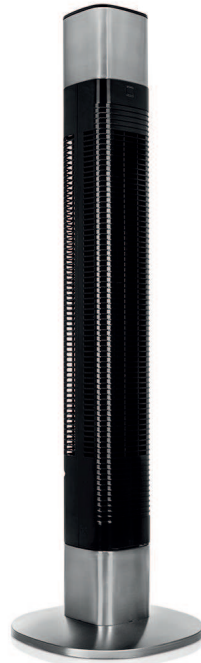


Smart tower fan

01.350000.02.001




**PARTS DESCRIPTION**

 - 1 BUTTON PANEL
- 2 DISPLAY
- 3 FAN BODY

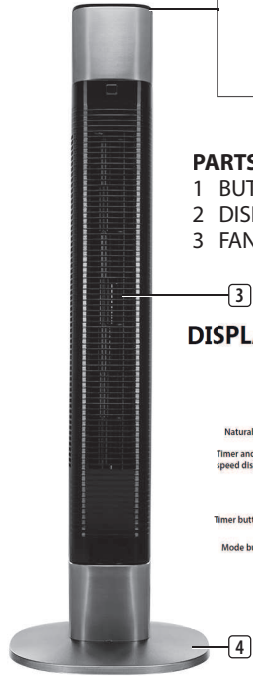

**DISPLAY/BUTTON DESCRIPTION**

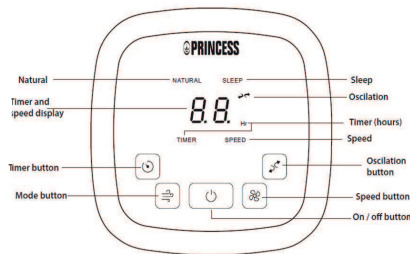 

**SAFETY**

 
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.

- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.


**BEFORE THE FIRST USE**

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Note: The appliance is not compatible with 5GHz WiFi, it will only work on 2.4GHz WiFi.
- Plug the power cable into a 13A socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50Hz).


### Assembly instructions

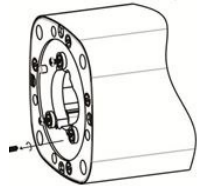


Picture 1

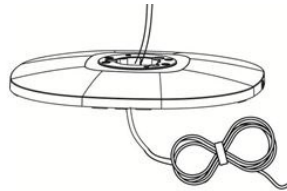 

Picture 2

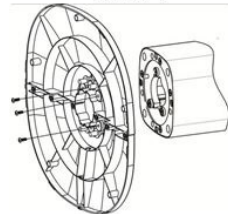 

Picture 3

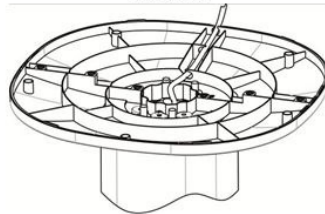 

Picture 4

- Remove the 3 screws out of the turnplate (Picture 1).
- Pull the power cord through the hole of the base (Picture 2).
- Align the base with the turnplate and use the 3 screws to secure them together (Picture 3).
- Press the power cord into the cable slot.(Picture 4).

## USE

### USING BUTTONS ON FAN

- Press the on/off button to turn the device on or off.

- Press the speed button to choose the desired speed setting. Press repeatedly to select one of the three different speed settings.
- Mode button: Choose from 3 different breeze patterns: Normal, Natural (randomly cycle through different speed settings to recreate an outdoor natural breeze) and Sleep (slows the fan speed down so you can still feel the air flow but you don't hear the fan as much). The natural and sleep function are shown on the display when they are selected.
- Press the oscillation button to turn on the swing function, press again to turn off.
- Press the timer button to activate the timer. Push repeatedly to increase the timer. The timer can be set to automatically turn off the fan after 1-8 hours.



### USING THE FAN WITH CLIMATE APP

- The fan can be used manually with its built-in controls or you can use a smart phone to control it. Before you begin, ensure the Homewizard Climate app is downloaded. The Homewizard Climate app is available on Android and iOS.

### Pair your fan to HomeWizard Climate app

- Make sure your fan is powered.
- Open HomeWizard Climate APP.
- Create an account or if you already have a HomeWizard account, please log in using those details.
- Click "Add new Climate Device" to add a new device.
- Follow the instructions on the app to connect the fan.

## CLEANING AND MAINTENANCE

- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.

## PRODUCT SPECIFICATIONS

Item	Detail
Height	41 inches
Timer function range	1-8 h
Number of speed settings	3
Speed	950-1150-1300 rpm
Airflow	1488 m <sup>3</sup> /h
Wind modes	3 different wind modes: normal, natural, sleep
Noise level	54,7 dB
Oscillating range	80°
Integrated handle(s)	Yes
Overheat protection	Yes
Power	50 W
Frequency	Only 2.4Ghz, it will not work on 5Ghz WiFi
Button type of main body	Touch buttons

## DECLARATION OF CONFORMITY

- Hereby, Smartwares Europe declares that the radio equipment type 350000 is in compliance with Directive 2014/53/EU
- The full text of the EU declaration of conformity is available at the following internet address: [www.princesshome.co.uk/doc](http://www.princesshome.co.uk/doc)

## ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its life, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recycling.

### FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

#### Support

You can find all available information and spare parts at <http://www.princesshome.co.uk>

[WEEE Logo]



Wireless technology: Wi-Fi  
Operating frequency: 2,4 Ghz  
Max. radio-frequency power: 20.5dBm



[www.princesshome.co.uk](http://www.princesshome.co.uk)

© Princess 2019