# RAM EZ-STRAP™ ASSEMBLY GUIDE

### PARTS INDEX:

1-QTY. EZ-STRAP™ BASE

1-QTY. RUBBER O-RING (PRE-INSERTED IN BASE)


- 1-QTY. RAM EZ-STRAP™ ADJUSTABLE STRAP
- D. 1-QTY. ADHESIVE PAD FOR ADJUSTABLE STRAP 1-QTY. ADHESIVE PAD FOR EZ-STRAP™ BASE
- 1-QTY. STAINLESS STEEL PIN INSERT

#### **TOOLS NEEDED:**

8.164"

- -PLIERS
- -SCREWDRIVER

 1. ATTACH (D) ADHESIVE RUBBER PAD TO (C) STRAP. SLOTS IN ADHESIVE PAD MUST FIT OVER BUMPS ON



2. CUT OUT MEASURING STRIP SHOWN ON LEFT. WRAP STRIP AROUND AREA WHERE STRAP CLAMP IS TO BE ATTACHED. ALIGN "START HERE" LINE WITH COMPATIBLE SEGMENT TO DETERMINE APPROPRIATE STRAP LENGTH. ONCE CORRECT SEGMENT IS DETERMINED, CUT ONLY ALONG ONE OF THE SHOWN REFERENCE LINES USING **SCISSORS** 



**MEDIUM CUT** 

SHORT CUT






TRIM ANY EXCESS PLASTIC BEHIND STRAP HINGE.

3. WITH (D) ADHESIVE PAD FACE UP, INSERT (F) PIN INSIDE HINGE OF (C) STRAP. PIN MUST PROTRUDE FROM RIGHT SIDE OF HINGE AS SHOWN.



4. POSITION (A) BASE AS SHOWN, INSERT (C) STRAP AND (F) PIN INSIDE PIN HOLE OF (A) BASE, POSITIONING (F) PIN INSIDE RIGHT SLOT OF BASE.

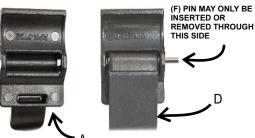

5. WHILE PRESSING (C) STRAP HINGE AGAINST (A) BASE (PLIERS MAY BE NEEDED), PRESS (F) PIN INSIDE HINGE USING SCREWDRIVER UNTIL (F) PIN SNAPS INTO (A) BASE.



START **HERE** 

6. ADHERE (E) ADHESIVE PAD TO BOTTOM OF (A) EZ-STRAP™ BASE (OVER "RPR-373B" TEXT).



7. ATTACH SNAP-LINK PORTION OF MOUNT TO (A) EZ-STRAP™ BASE. SNAP LINK COMPONENTS MAY VARY BASED ON PRODUCT PURCHASED

RAP-SBA-RRU RAP-SBA-RRLU RAM BALL RAM BALL





RAM BALL



RAP-SBA-RGU



RAP-SBA-RGLU

**VERIFY THAT (B) RUBBER** O-RING IS PROPERLY **INSERTED IN (A) BASE** PRIOR TO INSTALLATION.

# PROPER EZ-STRAP™ ADJUSTMENT

### TO TIGHTEN EZ-STRAP™

PLACE EZ-STRAP™ ON SURFACE. FEED STRAP THROUGH (A) BASE UNTIL STRAP CLICKS IN BASE. WHILE PRESSING ÈZ-STRAP™ BASE AGAINST SURFACE, PULL STRAP BACK WITH FOREFINGER UNTIL TIGHT.



## TO LOOSEN/REMOVE EZ-STRAP™

PULL RELEASE LEVER TOWARD SNAP-LINK MOUNT WITH THUMB. FEED STRAP FORWARD TO LOOSEN AND/OR REMOVE



### REPLACING STRAP FROM BASE

FOLLOW THIS STEP IF YOU NEED TO REPLACE YOUR CURRENT STRAP WITH A LONGER OR SHORTER STRAP.

FOLLOW STEPS 5 AND 4 ON REVERSE SIDE. USE SCREWDRIVER ON **OPPOSITE** SIDE OF BASE TO PRESS (F) PIN OUT THE SAME SIDE IT WAS INSERTED.

WHEN (F) PIN PROTRUDES FROM RIGHT SIDE OF BASE. WEDGE HINGE OF (C) STRAP OUT OF BASE TO REMOVE.



National Products Inc., 8410 Dallas Ave S, Seattle, WA 98108 206-763-8361 www.ram-mount.com RMR-INS-SB-187