



**RokPak**

**Pioneer Series**

---

**USER MANUAL**

# WELCOME



To download this user manual in a different language Visit : [www.rokpak.com/manuals](http://www.rokpak.com/manuals).



Pour télécharger ce manuel de l'utilisateur dans une autre langue, rendez-vous sur: [www.rokpak.com/manuals](http://www.rokpak.com/manuals).



Para descargar este manual de usuario en otro idioma, [www.rokpak.com/manuals](http://www.rokpak.com/manuals).



Per scaricare questo manuale utente in un'altra lingua, visita : [www.rokpak.com/manuals](http://www.rokpak.com/manuals).



Para baixar este manual do usuário em outro idioma, acesse [www.rokpak.com/manuals](http://www.rokpak.com/manuals).



Wenn Sie dieses Benutzerhandbuch in einer anderen Sprache herunterladen möchten, besuchen Sie [www.rokpak.com/manuals](http://www.rokpak.com/manuals).

Visit our website [www.RokPak.com](http://www.RokPak.com) or our social media pages



[facebook.com/officialrokpak](https://facebook.com/officialrokpak)



[twitter.com/officialrokpak](https://twitter.com/officialrokpak)



[instagram.com/officialrokpak](https://instagram.com/officialrokpak)

# TABLE OF CONTENTS

 
Accessories .....	4
Pioneer Series Features.....	5
LCD.....	6
How to Charge Your Pioneer Series .....	7
Charging USB Devices .....	8
Interior and Exterior Flashlights.....	9
SOS Function .....	10
LED Notification system .....	11
Storage and Cleaning .....	12
Warranty and Support .....	13

# ACCESSORIES



- 1. Carabiner
- 2. 3ft. Buckle Strap

# PIONEER SERIES FEATURES

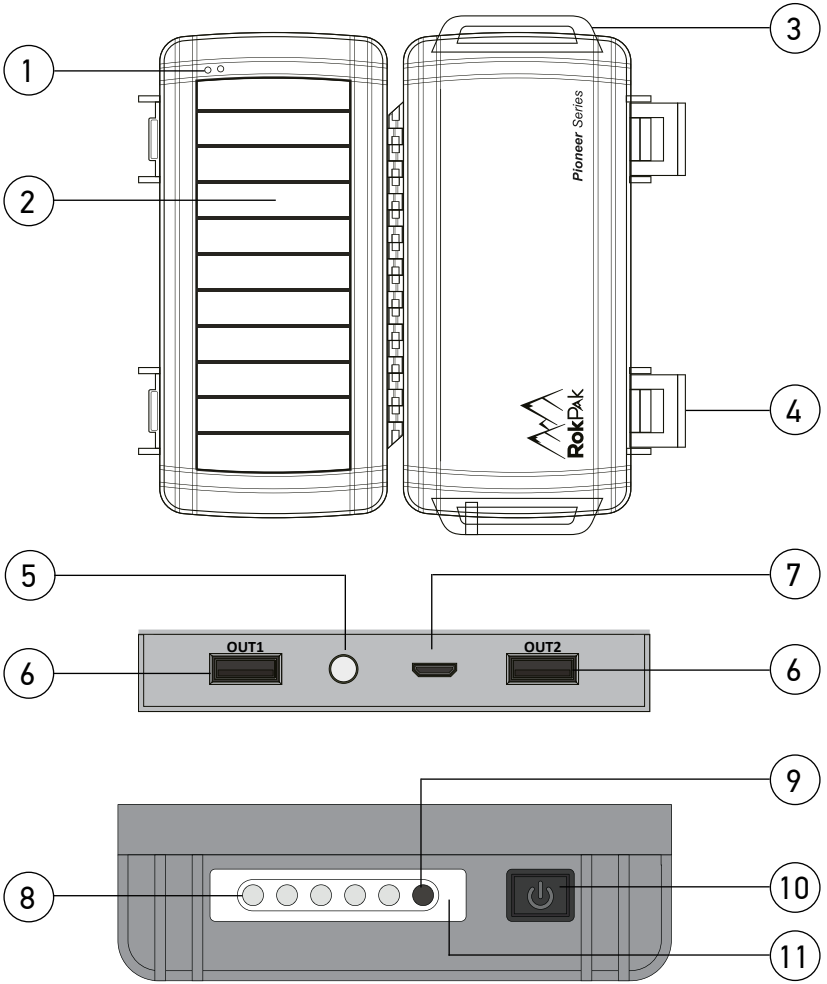


- 1. Water Detection System
- 2. Ultra Fast Solar Panel
- 3. Multiple Points for Securing
- 4. Easy Open Latches
- 5. LED Flashlight

- 6. Smart USB
- 7. Micro USB
- 8. 5 LED Flashlight
- 9. Blue LED Solar Charging Indicator

- 10. Soft Touch ON/OFF Button Exterior Flashlight
- 11. Electroplated Reflector System

# LCD

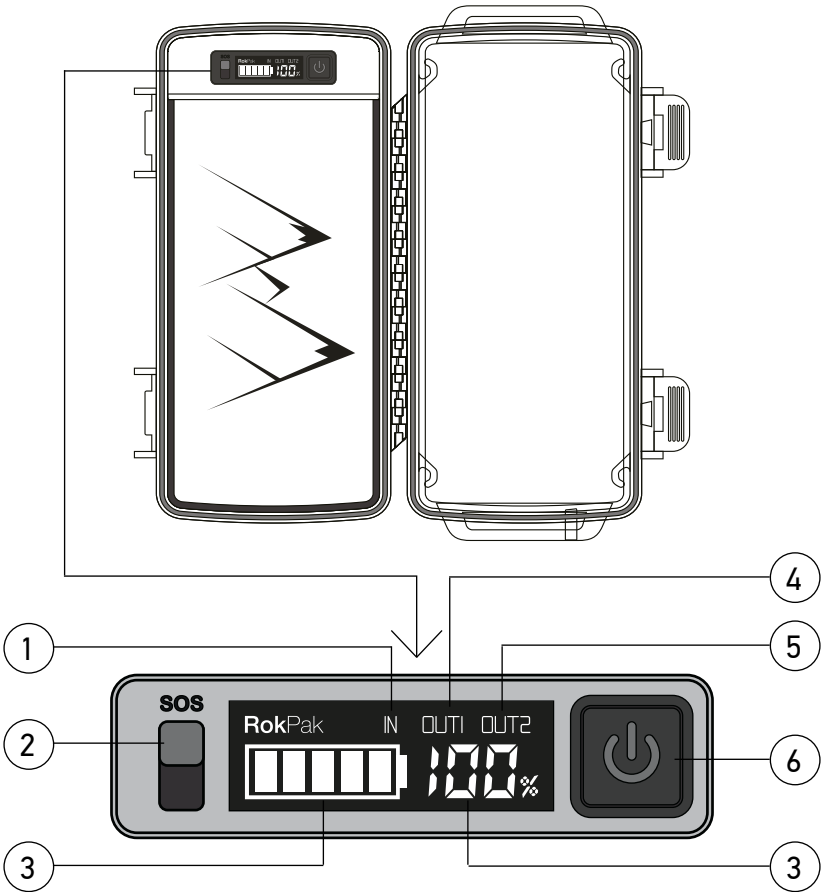

On / Off Button activates LCD backlight, charging and interior flashlight

\*See page 7 for charging function / \*See page 8 for operation of LCD / \*See page 9 for operation of flashlight

1. Input Status
2. SOS Automatic / Manual Switch
3. Battery Power Indicators

4. Output 1 Status
5. Output 2 Status
6. ON/OFF Button Interior Flashlight

# HOW TO CHARGE YOUR PIONEER SERIES




## To Charge Via USB Cable:

Connect the included USB cable to your RokPak and connect the other end of the cable to a power source such as wall charger, auto charger, or computer. If IN on the LCD screen is visible the battery is charging.

## To Charge Via Solar Panel:

Expose the Solar Panel to any light source. The Blue LED Indicator on the outside of the box will activate once the solar panel is exposed to sunlight or almost any other light source.

Check Battery Life by viewing the LCD. Press the On / Off button to activate the LCD backlight.

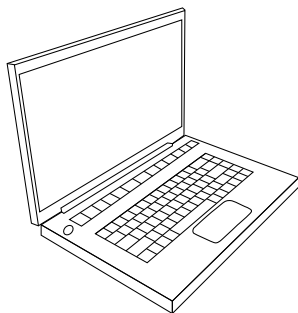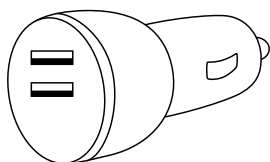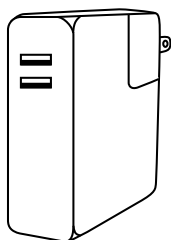

TIP: The RokPak Pioneer series will charge under almost any light source, but sunlight is the fastest.

# CHARGING USB DEVICES

There are 2 USB ports for charging. Simply plug in your compatible USB device and charging will start automatically.

Each USB port is labeled OUT1 and OUT 2. When a USB port is in use the LCD will show which USB port is in use.

## SMART USB PORTS

---

Each USB port is capable of determining how much power is needed to charge your device.

## COMPATIBLE DEVICES

---

Almost any USB device can be charged with the RokPak. Compatible devices include but not limited to smartphones, tablets, GPS devices, cameras, MP3 players, smart watches, fitness trackers, etc.

For more information visit [www.rokpak.com](http://www.rokpak.com) to see specification sheets for specific products.



# FLASHLIGHTS

## INTERIOR LED FLASHLIGHT

---

To Activate: Hold down On/Off button located next to the LCD. This will activate the interior flashlight.

To Deactivate: Hold down On/Off button located next to the LCD until the flashlight turns off.

---

## EXTERIOR 5 LED FLASHLIGHT

To Activate: Press the On/Off button located on the outside of the RokPak next to the flashlight.

### **Functions:**

This flashlight has 4 functions (Low, High, Strobe, SOS). Press the On/Off button once to activate High setting. Each time the On/Off button is pressed the function will switch to the next function.

### **To Deactivate:**

Press the On/Off button located on the outside of the RokPak next to the flashlight until it turns off. User must cycle through all settings before it turns off.

# SOS FUNCTION

The RokPak is equipped with a water activated sensor that activates the 5 LED Flashlight to its SOS setting. The international distress signal flashing will continue as long as the sensor is submerged in water.

On a full charge the SOS signal will last for over 200 hours. If there is sunlight to recharge the battery the SOS signal can last longer.

The SOS function can also be activated by pressing the exterior On/Off button 3 times (3X).

This is very useful for many situations including being stranded in the wilderness or on the side of the road. The LED SOS function will allow the user to be spotted easily. Allowing searchers or people passing by to the users location and alert help.

## **Manual Option :**

The Automatic SOS function can be deactivated. There is an On/Off switch located to the left of the LCD.

# LED NOTIFICATION SYSTEM

When a smartphone is connected to the RokPak Pioneer Series for charging, there is a secondary feature. This feature allows the unit to communicate with your smartphone.

When the connected smartphone receives a notification it will trigger the exterior flashlight to activate the strobe setting. This will alert the user that there is a notification on their smartphone.

To ignore the notification and turn off the flashlight: Press the flashlight button once (1x).

Note: Any notification that is enabled on the smartphone will trigger the LED notification system when a notification is received.

# STORAGE AND CLEANING

## STORAGE

---

The RokPak is designed to operate in temperatures between **-20° C and 80° C**.

To ensure the longest life of your RokPak battery store in temperatures between -5° C and 45° C when not in use.

## CLEANING

---

To clean the LCD, use a lint-free cloth. Avoid getting moisture in openings. Don't use window cleaners, household cleaners, aerosol sprays, solvents, alcohol, ammonia or abrasives to clean LCD.

Clean LCD screen immediately if it comes into contact with any contaminants that may cause stains, such as inks, dyes, makeup, dirt, food, oils or other.

# WARRANTY AND SUPPORT

## WARRANTY

---

This product comes with a 1 Year Limited Warranty from date of purchase. Please visit [www.rokpak.com/warranty](http://www.rokpak.com/warranty) for more information. Keep a copy of your purchase receipt as proof of purchase. Be sure to register your product at RokPak.com. Failure to register your product and/or provide proof of purchase may void the warranty.

## HANDLING

---

Do not disassemble, crush, bend, deform, or puncture the product. Do not use the RokPak if it has been damaged. For example, if the product is cracked, punctured or damaged by water.

The RokPak is waterproof up to 1m for 30 minutes when closed properly. The latches must be closed with a perfect seal. If the seal is broken or damaged do not use around water.

## USE WITH OTHER USB DEVICES

---

Do not charge USB devices if they are damaged in any way.

### Regulatory Information

This product is compliant with the following standards:

