



SENA

R1

SMART CYCLING HELMET

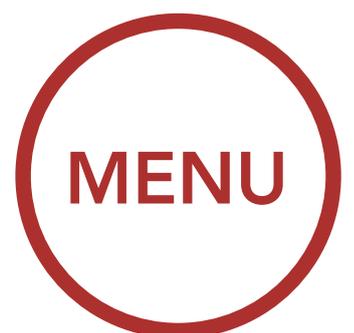


**CLICK
ANY
SECTION
TO
BEGIN**

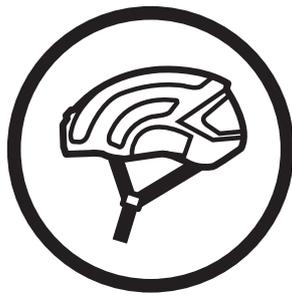

**ABOUT THE
HELMET**



**GETTING
STARTED**

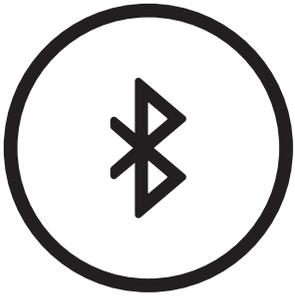

**PAIRING WITH
DEVICES**



**MOBILE
PHONE USAGE**




**STEREO
MUSIC**



**INTERCOM
SETUP**



**USING THE
FM RADIO**

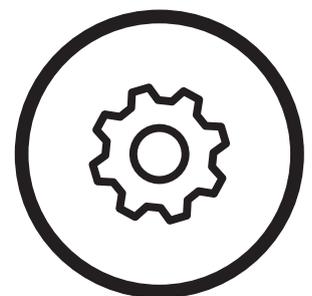

**GENERAL
SETTINGS**



**REMOTE
CONTROL**




**TROUBLE-
SHOOTING**



**MAINTENANCE
AND CARE**

LEGEND:

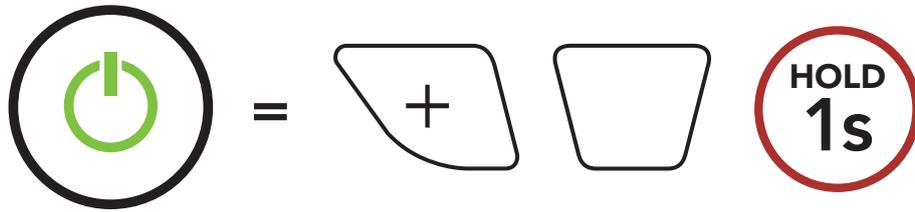

Function = Button(s) to **Tap or Hold**



Tap button the specified number of times



Press and Hold button for the specified amount of time



"Hello"

Audible prompt

TABLE OF CONTENTS

SAFETY PRECAUTIONS	7
<hr/>	
1. ABOUT THE R1 SMART CYCLING HELMET	12
<hr/>	
1.1 General Information	12
1.2 Product Details	14
1.3 Package Contents	14
1.4 Wearing the Helmet	15
1.4.1 How to Wear The Helmet	15
1.4.2 Helmet Fitment Check	19
2. GETTING STARTED: BUILT-IN BLUETOOTH SYSTEM	20
<hr/>	
2.1 Button Function	20
2.2 Powering On and Off	21
2.3 Charging	21
2.4 Checking the Battery Level	22
2.5 Volume Adjustment	24
2.6 Downloadable Sena Software	25
2.6.1 Sena Device Manager	25
2.6.2 Sena Smartphone App	25
2.7 Configuration Menu	26
3. PAIRING THE BLUETOOTH SYSTEM WITH OTHER BLUETOOTH DEVICES	29
<hr/>	
3.1 Mobile Phone	29
3.2 Additional Mobile Phones or MP3 Player	31
3.3 Advanced Selective Pairing: Hands-Free or A2DP Stereo	32
3.3.1 Phone Selective Pairing — Hands-Free Profile	32
3.3.2 Media Selective Pairing — A2DP Profile	33

4.	MOBILE PHONE USAGE	35
4.1	Making and Answering Calls	35
4.2	Speed Dialing	35
4.2.1	Assigning Speed Dial Presets	35
4.2.2	Using Speed Dial Presets	38
5.	STEREO MUSIC	40
5.1	Playing Music with Bluetooth Devices	40
5.2	Music Sharing	41
6.	INTERCOM SETUP	42
6.1	Intercom Pairing	42
6.2	Two-Way Intercom	44
6.3	Multi-Way Intercom	45
6.3.1	Starting a Three-Way Intercom Conference	45
6.3.2	Starting a Four-Way Intercom Conference	47
6.3.3	Ending Multi-Way Intercom	47
6.4	Three-Way Conference Phone Call with Intercom Users	47
6.5	Group Intercom	48
6.6	Universal Intercom	50
6.7	Advanced Noise Control™ (Default: Enable)	52
7.	USING THE FM RADIO	53
7.1	FM Radio On/Off	53
7.2	Seek and Save Radio Stations	53
7.3	Scan and Save Radio Stations	55
7.4	Temporary Station Preset	56
7.5	Navigating Preset Stations	57

7.6	Region Selection (Default: Worldwide)	57
7.7	Radio Data System(RDS) Alternative(AF) Setting (Default: Enable)	58
7.8	FM Station Guide (Default: Enable)	59
8.	HEADSET CONFIGURATION SETTINGS	60
8.1	Function Priority	60
8.2	Firmware Upgrades	60
8.3	Voice Prompts	60
8.4	Deleting All Bluetooth Pairing Information	62
9.	REMOTE CONTROL	63
9.1	Pairing with the Remote Control	63
10.	TROUBLESHOOTING	65
10.1	Fault Reset	65
10.2	Factory Reset	66
11.	MAINTENANCE AND CARE	67
	CERTIFICATION AND SAFETY APPROVALS	68
	LIMITED PRODUCT WARRANTY DISCLAIMERS, AND LIMITATIONS	71

SAFETY PRECAUTIONS

Please ensure that the product is properly used by observing the safety precautions below to prevent any risk of serious injury, death and/or damage to property.

Hazard alert signal words

The following safety symbols and signal words are used in this manual.

⚠ WARNING: Indicates a potential hazardous situations that, if not avoided, could result in death or serious injury.

⚠ CAUTION: Indicates a potential hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE: Indicates information considered important, but not hazard-related. If not avoided, it could cause damage to your product.

Product Use

Observe the following precautions to avoid injury or damage to your product while using the product.

⚠ WARNING

- Bicycling is associated with particular risks and dangers for the rider. These risks and dangers can be reduced, but not eliminated completely, by wearing a helmet. It is impossible to state precisely what the protective effect of a helmet will be in the event of an accident. Safe riding techniques, adapted to the particular road and weather conditions, are essential for your safety.
- Do not wear a helmet while climbing trees, in play areas, on playground equipment, or, at any time while not riding a bicycle. Failure to follow this warning could result in serious personal injury, death or death by strangulation.
- Your helmet will not protect against injury in all types of accidents. Even while wearing a helmet, low speed accidents may result in serious head injury or death.
- Careless use of the product on the road is risky and may result in serious injury, death or damage. You must heed all safety precautions in all documents that come with this product. This will help minimize the chance these risks may occur while riding.

⚠ CAUTION

- For maximum protection, this helmet must be fitted and attached properly to the rider's head according to the User's Guide.
- Position the helmet on your head with the front covering your forehead. If the helmet is tipped back and is not covering your forehead then the helmet is not in the proper position.



- The protective capability of your helmet will diminish over time, dependent upon many factors such as physical damage, exposure to pollution, harmful chemicals and long term exposure to the sun. Sena recommends that the helmet be replaced after five years. Although the shell is in principle capable of a longer service life, the occurrence of material fatigue and wear to other components, as well as the overall action of the helmet and the unknown conditions in which the helmet has been used, make it advisable for your own safety to replace the helmet after this period of use.
- Do not use product for extreme uses such as downhill racing at high speeds, jumping or leaping with a fully suspended bicycle, snow sports, water sports, motor sports, street hockey, playground activities, or other activities where face, ear, or greater protection or coverage is desired.
- The safety helmet is designed to absorb only one impact and damage from an impact is rarely visible from the outside. It is therefore essential to replace the helmet after a fall, accident or other violent impact. Such helmet should be returned to original place of purchase for inspection, or destroyed and replaced. In the event of any impact, do not use this helmet.
- Any helmet that has been subjected to a violent impact should be replaced.
- To provide maximum protection, the helmet must fit properly on the head and its chinstrap securely fastened under the chin.
- Always fasten the chinstrap before setting off and check that the buckle system and straps are correctly in position.
- Never ride with the buckle unfastened or incorrectly adjusted. The chinstrap must be correctly positioned and must not come loose when pulled.
- No helmet provides absolute protection from all conceivable impacts. This helmet has been specially developed for bicycle riding and is unsuitable for other purposes.
- Examine the helmet for damage at regular intervals. Small scratches will not impair the protective function of your helmet.
- Check for proper fit and adjustment often, including each time you wear it, and periodically during use.
- Always make sure the buckle is properly fastened and the loose end of the chinstrap is tucked through the rubber "O" ring before you ride. Failure to follow this instruction could result in serious personal injury.
- The helmet safety mechanism described above can also cause small cracks in the shell when the helmet is dropped from a small height (less than 1 meter).
- Use of the product at a high volume for a long period of time may damage your eardrums or hearing ability.
- Do not wear anything underneath your helmet, such as a cap, hood, bundled hair, headphones, or barrettes, as the helmet may loosen or come off. Do not wear anyone else's helmet and don't loan your helmet to anyone else.
- When relevant, follow all regulations regarding the use of the camera.
 - (1) Do not use your camera in an aircraft, unless permitted.
 - (2) Turn off the camera when you are near medical equipment. Your camera can cause interference with medical devices in hospital or healthcare facilities.

- The camera generates a low level magnetic field. Keep a safe distance between the camera and cardiac pacemakers to avoid potential interference. Turn off the camera immediately if your camera indicates interference with a pacemaker and contact the pacemaker manufacturer or a physician.
- Avoid interference with other electronic devices. Your camera generates a low level magnetic field that may interfere with unsealed or improperly shielded electronic equipment in homes or vehicles. Consult the manufacturers of your electronic devices to resolve any interference problems you experience.
- Never use a damaged memory card. This may result in electric shock, camera malfunction, or fire.

NOTICE

- In some regions, it is prohibited by law to ride bicycles while wearing headsets or earbuds. Therefore, be certain you are aware of all relevant laws in the region where you are using the product and are sure that you comply with them.
- Do not use the product in high-temperatures or apply heat to the product as this may cause damage, explosion, or fire.
- Do not use heat damaged helmets. Heat damaged helmets will appear to have uneven or have bubbly surfaces.
- If the product emits an unusual smell, feels hot, or appears abnormal in any other way while using or charging, stop using it immediately. It may cause damage, explosion, or fire. Contact your sales location if any of these problems are observed.
- Do not attach anything to your helmet, including mirrors or lights.
- Keep product away from pets or small children. They may damage the product.
- Do not cause impact to the product or touch it with sharp tools as this may damage the product.
- In any place where wireless communication is prohibited, such as hospitals or airplanes, turn off the power. In a place where wireless communication is prohibited, electromagnetic waves may cause hazards or accidents.
- Do not use the product near hazardous explosives. When it is near any explosion hazards, turn off the power and heed any regulations, instructions, and signs in the area.
- Any changes or modifications to the helmet not expressly approved by the party responsible for compliance could void the limited warranty to operate the helmet.
- High internal temperature may result in noisy photos. This is not a malfunction and does not affect your camera's overall performance.
- Check that the camera is operating properly in advance. Any file loss or camera damage caused by camera malfunction or improper use is not covered under warranty.

Battery

Your product has a built-in battery. Be careful to heed all safety information in this guide. Failure to carefully observe the safety precautions can cause battery heat generation, bursting, fire and serious personal injury.

⚠ WARNING

- Do not use the product in direct sunlight for a long period of time. Doing so can damage the product and generate heat that can cause burns.
- Do not use or store the product inside cars in hot weather. It may cause the battery to generate heat, rupture, or ignite and cause serious injury.
- Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to become hot, explode, or ignite and cause serious injury.
- Do not leave the product near open flames. Do not dispose of the product in a fire. It may cause the battery to become hot, explode, or ignite and cause serious injury.
- Never attempt to charge a battery with the charger which has been physically damaged. It may cause explosion and/or accidents.

NOTICE

- Battery life may vary depending on conditions, environmental factors, functions of the product in use, and devices used with it.

Product Storage and Management

Take the following precautions to avoid personal injury or damage to your product while storing and maintaining the product.

⚠ CAUTION

- Do not dispose of the product with household waste. The built-in battery is not to be disposed of in municipal waste stream and requires separate collection. Disposal of the product should be done in accordance with the local regulations.
- Never leave the product with the lens facing the direct sunlight. Doing so may result in a fire due to the sunlight being concentrated by the lens.

NOTICE

- Keep the product free of dust. Dust may damage mechanical and electronic parts of the product.
- The product should be stored at room temperature. Do not expose the product to extremely high or low temperature as this may reduce the life span of electronic devices, damage the battery, and/or melt plastic parts of the product.
- Do not clean the product with motor fuel, thinners, cleaning solvents, toxic chemicals, or strong detergents as this may damage the product. Make sure the helmet does not come into contact with such substances, even for cleaning purposes as these substances can destroy the structure of the shell.
- Do not paint the product. Paint may obstruct moving parts or interfere with the normal operation of the product.
- Do not drop or otherwise shock the product. It may damage the product or its internal electronic circuits.
- Do not disassemble, repair or modify the product as this may damage the product and invalidate the product warranty.
- Do not store the product in humid environments, especially for long periods of time. It may damage the internal electronic circuits.

- Original components should not be altered or removed. The fitting of additional parts from other manufacturers that have not been recommended can reduce the protective effect and renders the certification specified under the section labeled “Helmet Certification” and all warranty and insurance claims invalid.
- Battery performance will deteriorate over time if stored for a long period of time without being used.
- Do not store the camera in proximity to magnetic fields. Doing so may result in camera malfunction.
- Be careful to protect the lens by avoiding rough handling or physical shock.
- Wipe the surface of the lens with a soft cloth in the following situations:
 - (1) When there are fingerprints on the lens surface.
 - (2) When the lens is used in hot or humid environments, such as near oceans or rivers.
- Store the product in a well-ventilated room to protect the lens from dirt and dust.

1. ABOUT THE R1 SMART CYCLING HELMET

1.1 General Information

This product is a bicycle helmet. Do not use it for any other purpose than riding a bicycle. If you use the helmet for anything else, it may not provide sufficient protection in an accident.

Sena recommends that you choose a helmet which provides the most coverage, as a helmet that covers more of your head may provide additional protection. Always wear your bicycle helmet low in the front to protect the forehead, as this area is most likely to be impacted in a bicycle crash. Make sure the helmet fits comfortably and is tightly fastened at all times.

⚠ WARNING

- Your helmet will not protect against injury in all types of accidents. Even while wearing a helmet, low speed accidents may result in serious head injury or death. A bicycle helmet will not protect against injuries to the spine, neck or face. In the event of any impact, do not use this helmet. There may be damage invisible to you, which may reduce the ability of the helmet to reduce the harmful effects of a blow to the head. Such helmet should be returned to Sena for inspection, or destroyed and replaced.
- Do not modify or remove any original part of the helmet. Do not use heat damaged helmets. Heat damaged helmets will appear to have uneven or have bubbly surfaces.
- This User's Guide and the stickers inside your helmet contain many instructions and warnings about your helmet. It is important for you to understand everything communicated in them before your first ride. If you do not, please contact your authorized Sena Retailer with any questions you may have. Failure to follow any of the provided instructions or warnings could void your warranty, and most importantly, could result in severe personal injury or death. If you are a parent or guardian and this helmet is for your child, please take the time to read this manual as you should make sure your child understands everything in this User's Guide.

⚠ WARNING

- For maximum protection, the helmet must fit properly on the head and its chinstrap securely fastened under the chin. With the retention system comfortably but firmly adjusted, the helmet should allow sufficient peripheral vision when secured. If the helmet is too large, it may move on your head while riding. If the helmet can be moved when pulled from the back in an upward and forward direction, then the helmet is not fitted properly. This could cause the helmet to obstruct your vision while riding or come off in an accident, resulting in personal injury or death. Please refer to **Section 1.4: "Wearing the Helmet"** for more details about properly securing and wearing your helmet.
- The contents of this helmet User's Guide are subject to change without notice. Its illustrations may differ from the actual product. The copyrights for the User's Guide belong to Sena Technologies, Inc. Reproduction or copying of the User's Guide without permission is strictly prohibited.


For United States Consumers, this helmet has been tested and certified to meet and exceed the Bicycle Safety Standard for Bicycle Helmets, 16 CFR Part 1203. A copy of this regulation can be obtained by visiting CPSC.gov. For European Consumers, this helmet has been tested and certified to meet and exceed European Committee for Standardization, CE EN1078. A copy of this regulation can be obtained by visiting CEN.eu.

1.2 Product Details



No.	Name
1	Microphone
2	Speakers
3	Bluetooth System's Button

1.3 Package Contents

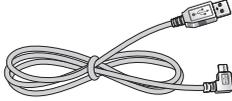R1 Helmet	
USB Power & Data Cable (Straight Micro USB type)	
R1 Pouch	

1.4 Wearing the Helmet

1.4.1 How to Wear The Helmet

For proper use, the helmet must sit level on the head and low on the forehead. The Sena helmet uses a simple, quick-release buckle system that, once adjusted, can be buckled and unbuckled without changing the adjustment. For proper use, the straps must be tight and evenly tensioned.

To properly wear your helmet:

1. Position the helmet on your head with the front covering your forehead. If the helmet is tipped back and is not covering your forehead then the helmet is not in the proper position.



⚠ WARNING: Always wear the helmet in the proper position on your head with the front of the helmet covering your forehead for maximum protection. Never wear the helmet tipped back as the helmet will be in the improper position causing your forehead to be exposed. All fitment adjustments need to be made with the helmet in the proper position.


2. Position the strap adjuster centered, just below your ears.

3. Position the helmet low on your forehead with the buckle under the chin and back against the throat. The straps should fit comfortably around both ears.



No.	Name
1	Buckle
2	Strap Adjuster

4. With the strap adjuster in the proper position, adjust the chinstrap tension at the buckle. Adjust the tension so the chinstrap is tight and comfortable by pulling the chinstrap end through the buckle to either tighten or loosen as needed. Use the "O-Ring" to secure the excess strap. Always wear the helmet with the chinstrap buckle fastened and the chinstrap pulled tight and positioned back against the throat. With the strap buckled and the helmet positioned, you should feel the chinstrap pull firmly against your chin as you open your mouth. When properly adjusted the helmet will wrap around your head and cradle it with firm, but comfortable pressure.

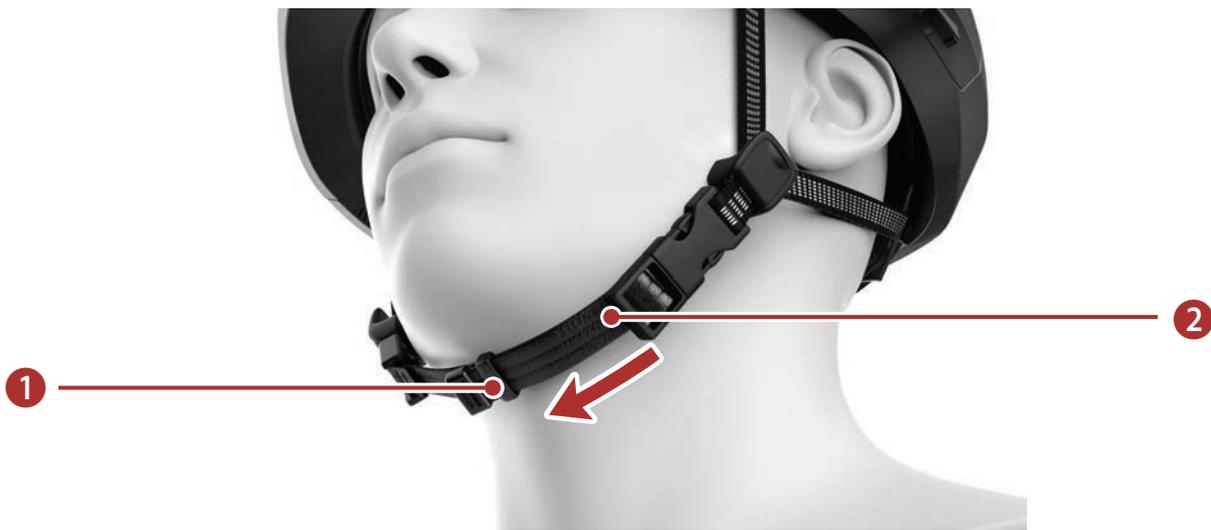

No.	Name
1	O-Ring
2	Chinstrap

5. Your helmet is equipped with an adjustable retention system which helps stabilize the helmet in the correct position when you ride. When wearing the helmet, turn the retention system knob clockwise to tighten the helmet or counterclockwise to loosen the helmet.



No.	Name
-----	------

- | | |
|---|-----------------------|
| 1 | Retention System Knob |
|---|-----------------------|

6. To change the height of the retention system, firmly pull or push the retention system upward or downward to a different position.



No.	Name
-----	------

- | | |
|---|------------------|
| 1 | Retention System |
|---|------------------|

⚠ WARNING: For maximum protection, this helmet must be fitted and attached properly to the wearer's head in accordance with the following instructions. If after adjustment the helmet does not fit properly, do not use the helmet. Return it to the retailer or Sena.

1.4.2 Helmet Fitment Check

With the retention system knob turned clockwise until comfortably tight and the chinstrap buckled under the chin and back against the throat, grab the helmet with both hands and try to remove it by rolling the helmet forward and backward as far as you can. This is an important test to ensure that the helmet fits correctly. When you do this, you should feel the chinstrap pull against the underside of your chin and the helmet will resist any movement. If this isn't the case, tighten the chinstrap and try it again until this happens. If you cannot achieve the proper fit, **DO NOT USE THIS HELMET**. Replace it with a different size until the correct fit is achieved.

Also, for a proper **Helmet Fitment Check** if you can roll the helmet forward such that it blocks your vision or if you can roll the helmet backwards such that your forehead is not covered, tighten the chinstrap and the retention system and try again until you cannot roll the helmet forward or backwards.


WARNING

- Do not wear anything underneath your helmet, such as a cap, hood, bundled hair, headphones, or barrettes, as the helmet may loosen or come off. Do not wear anyone else's helmet and don't loan your helmet to anyone else.
- Always make sure the buckle is properly fastened before you ride. Failure to follow this instruction could result in serious personal injury, as the helmet may not stay in position while riding or during a fall. For proper use, make sure the loose end of the chinstrap is tucked through the rubber "O" ring.
- Check for proper fit and adjustment often, including each time you wear it, and periodically during use.
- This helmet has been designed for recreational bicycling. This helmet has not been approved and is not intended for extreme uses such as downhill racing at high speeds, jumping or leaping with a fully suspended bicycle, snow sports, water sports, motor sports, street hockey, playground activities, or other activities where face, ear, or greater protection or coverage is desired.
- Always wear a helmet when bicycling. When you get off your bicycle, remove your helmet. Do not wear a helmet while climbing trees, in play areas, on playground equipment, or, at any time while not riding a bicycle. Parents: Instruct children to follow this warning. Failure to follow this warning could result in serious personal injury, death or death by strangulation.

2. GETTING STARTED: BUILT-IN BLUETOOTH SYSTEM

2.1 Button Function

Bluetooth System's Buttons

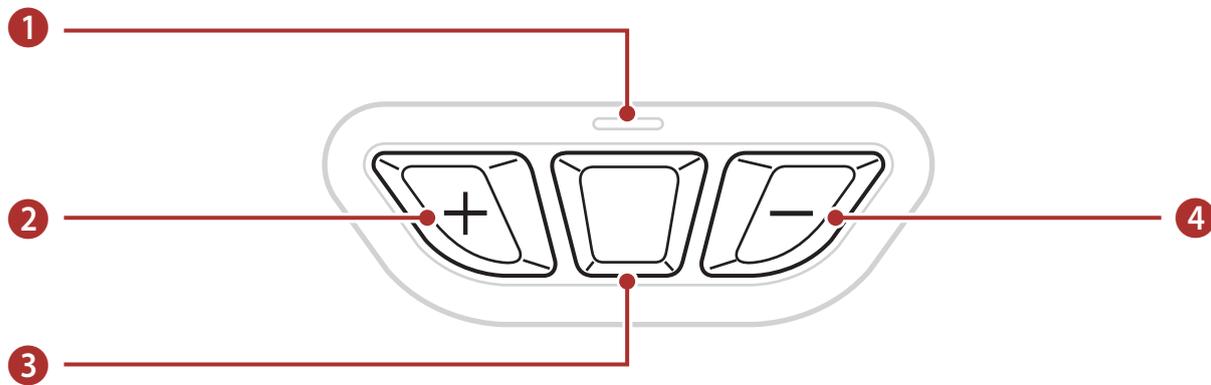


No.	Name	Function
1	Blue, Red and Green LED Lights	
2	(+) Button	<ul style="list-style-type: none"> • Increase Volume • Track Forward • Scan Radio Stations • Speed Dial
3	Center Button	<ul style="list-style-type: none"> • Answer/End Phone Call • Reject an Incoming Phone Call • Start/End Intercom Conversation • Play/Pause Music • Enter Intercom Pairing Mode • Enter Voice Configuration Settings
4	(-) Button	<ul style="list-style-type: none"> • Decrease Volume • Track Back • FM Tuner On/Off

2.2 Powering On and Off

Press and hold the **Center Button** and the **(+) Button** at the same time for **1 second** to turn the Bluetooth system on or off.

Powering On/Off

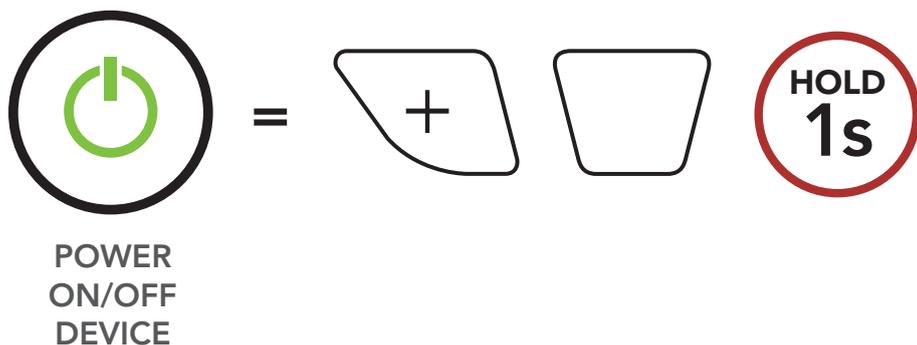

2.3 Charging

⚠ WARNING: When charging the battery, use only the approved charger provided by the manufacturer. Use of a non-approved charger may cause fire, explosion, leakage, and other hazards which may also reduce the life time or performance of the battery.

The Bluetooth system can be charged using many common methods via the supplied USB power & data cable:

1. Plugged into a computer's USB port.
2. With a USB-equipped AC adapter via a wall-outlet charger.

Note:

- Please make sure to take off your helmet while charging. The Bluetooth system automatically turns off during charging.
- Any 3rd party USB charger can be used with Sena products if the charger is approved by either the FCC, CE, IC or other locally approved agencies that Sena accepts.

Charging the Bluetooth System







Depending upon the charging method, the Bluetooth system will be fully charged in about 2.5 hours.


2.4 Checking the Battery Level

There are two ways to check battery level:

1. Visually, with LEDs when powering on.

Battery Level - Visual Method

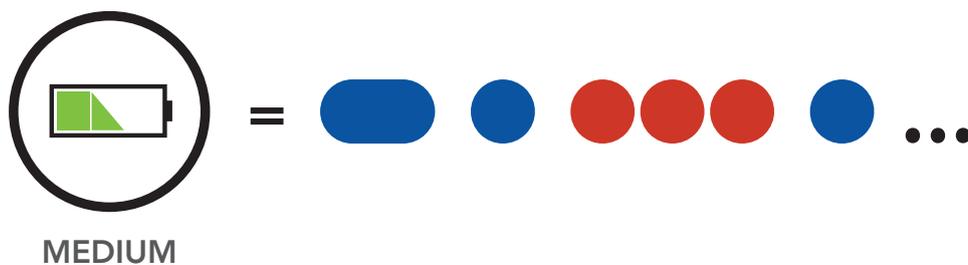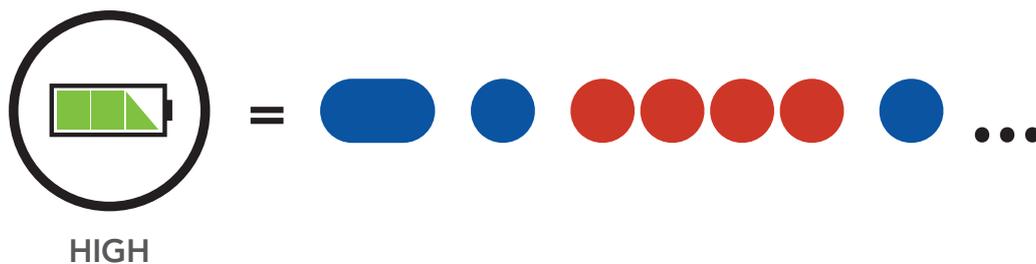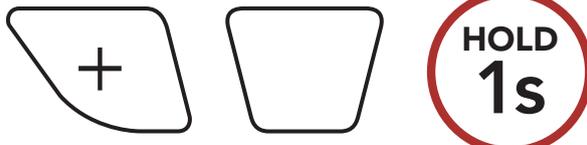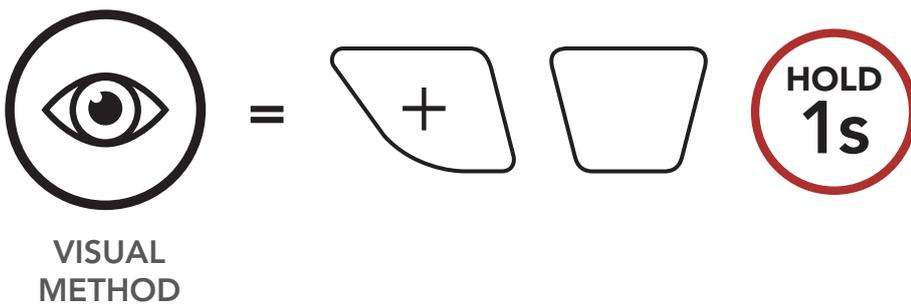


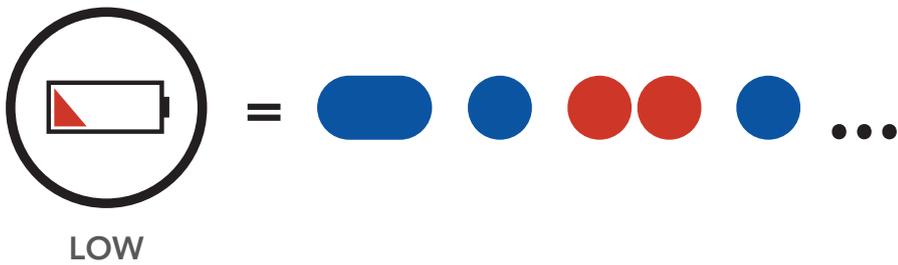


Note:

1. The battery performance may be reduced over time with usage.
2. Battery life may vary depending on conditions, environmental factors, functions of the product in use, and devices used with it.

2. Audible method: press and hold the **Center Button** and the **(+) Button** for **3 more seconds** as the Bluetooth system powers on. A prompt will announce the remaining battery level.

Audible Method

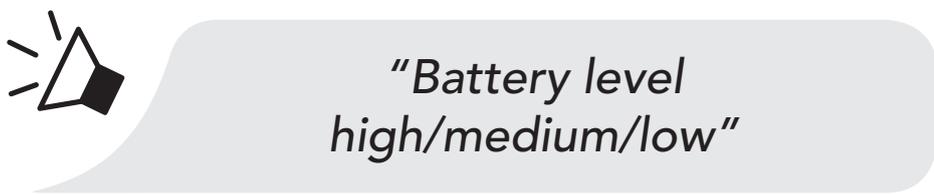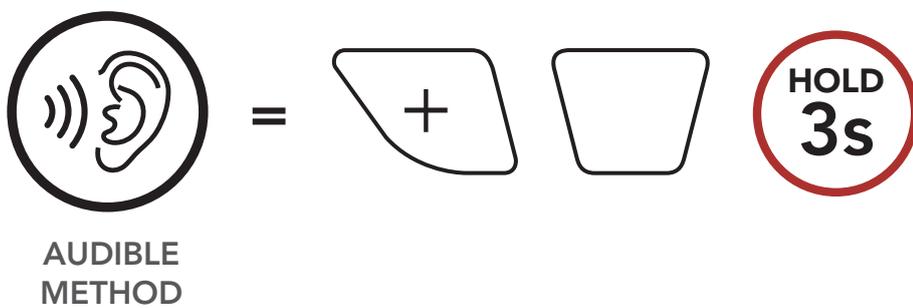


Note:

- Blinking LEDs alternate from blue to red when battery power is low.
- When the battery is low while in use, you will hear a voice prompt saying **“Low battery”**.

2.5 Volume Adjustment


You can raise or lower the volume by tapping the **(+) Button** or the **(-) Button**. Volume is set and maintained independently at different levels for each audio source (i.e. phone, intercom), even when the Bluetooth system is rebooted.

Volume up

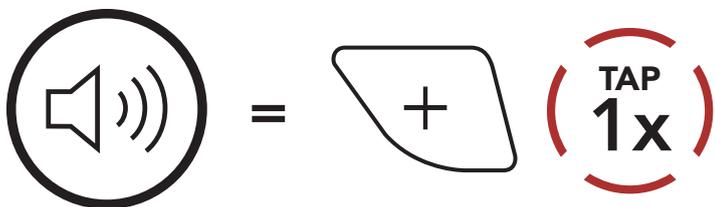

VOLUME UP

Volume down

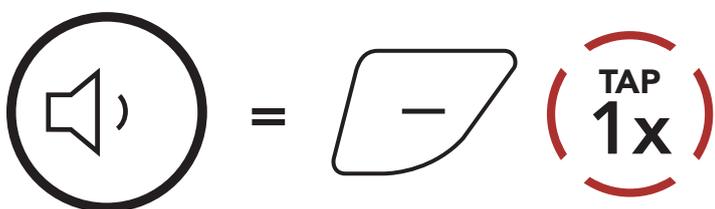

VOLUME
DOWN

⚠ WARNING: Use of the product at a high volume for a long period of time may damage your eardrums or hearing ability. Keep the volume at a modest level to prevent damage.

2.6 Downloadable Sena Software

2.6.1 Sena Device Manager

The **Sena Device Manager** allows you to upgrade the Bluetooth system's firmware and configure its settings directly from your PC or Apple computer. Using this software, you can assign speed dial presets, FM radio station presets and more. For more information on downloading the **Sena Device manager**, please visit **sena.com**.

[Click Here to Visit sena.com](#)

2.6.2 Sena Smartphone App

The **Sena Smartphone App** allows you to configure the Bluetooth system's settings, as well as access the User's and Quick Start Guides. To do so, pair your mobile phone with your Bluetooth system (please refer to **Section 3: "Pairing the Bluetooth System with other Bluetooth Devices"** for more details). Run the **Sena Smartphone App** and configure the settings directly from your smartphone. You can download the **Sena Smartphone App** for Android and Apple operating systems.




2.7 Configuration Menu

The Bluetooth system can be configured by following a series of voice prompts. Further details about each of these settings will be explained on the following pages.

1. To access the **Bluetooth System Configuration Menu**, press and hold the **Center Button** for **10 seconds** until you hear the voice prompt, **"Configuration menu"**.


Accessing the Bluetooth System Configuration Menu

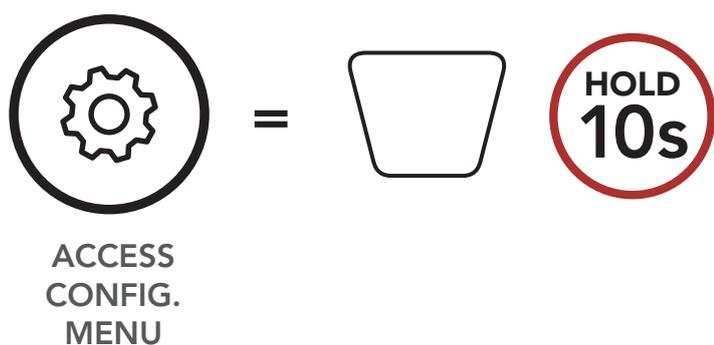

"Configuration menu"



2. Tap the **(+) Button** or the **(-) Button** to navigate between the menus. You will hear voice prompts for each menu item. The list of functions is shown in the **Bluetooth System Configuration Menu** on page 27.

Navigating Forward through the Menu

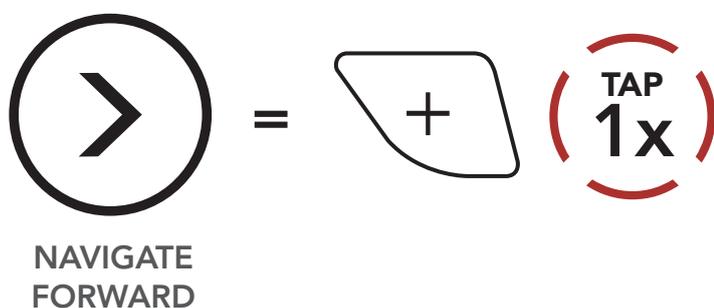


"[Menu prompt]"

Navigating Backward through the Menu


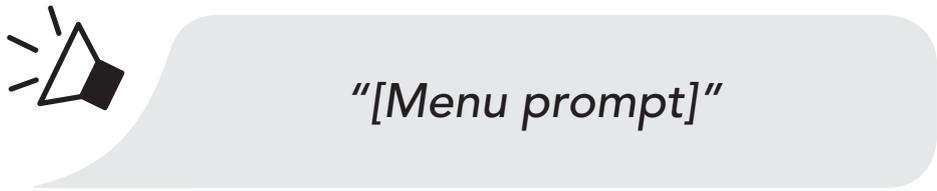
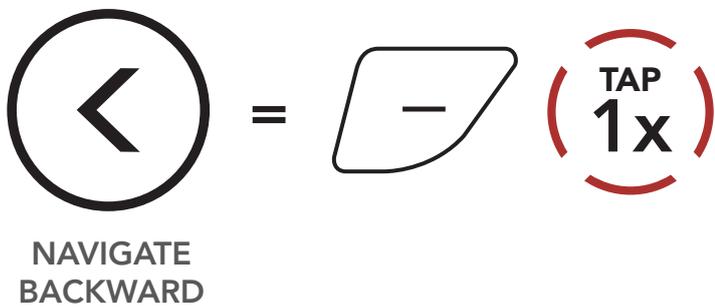


3. You can enable/disable the feature or execute the command by tapping the **Center Button**.



Enable/Disable or Execute a Feature

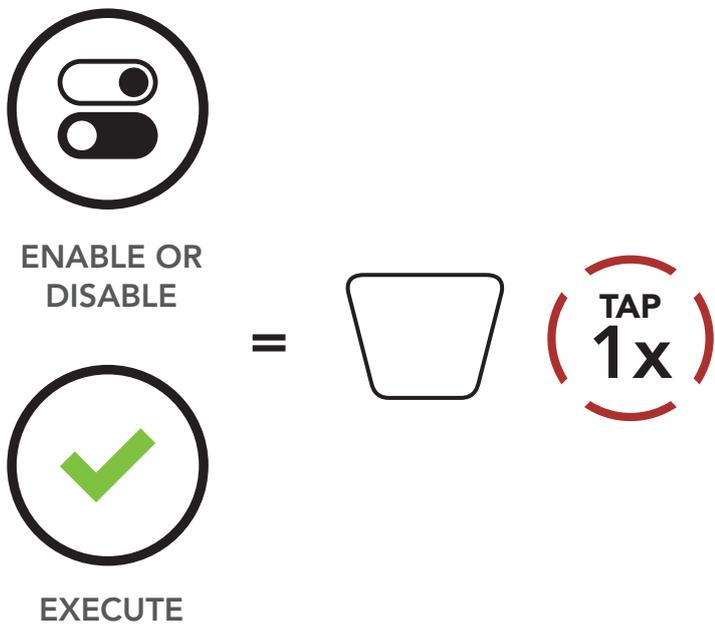

Bluetooth System Configuration Menu

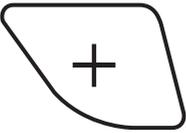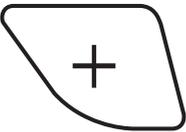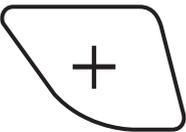Tap the (+) Button or (-) Button the specified number of times		Tap the Center Button
 	Phone Pairing	Execute
 	Second Mobile Phone Pairing	Execute
 	Phone Selective Pairing	Execute

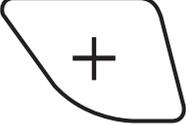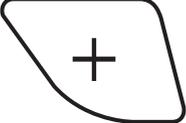


Tap the (+) Button or (-) Button the specified number of times		Tap the Center Button
 	Media Selective Pairing	Execute
 	Speed Dial	Execute
 	Voice Prompt	Enable/Disable
 	RDS AF Setting	Enable/Disable
 	FM Station Guide	Enable/Disable
 	Advanced Noise Control	Enable/Disable
 	Delete All Pairings	Execute
 	Remote Control Pairing	Execute
 	Universal Intercom Pairing	Execute
 	Factory Reset	Execute
 	Exit Configuration	Execute

3. PAIRING THE BLUETOOTH SYSTEM WITH OTHER BLUETOOTH DEVICES

Before using the Bluetooth system with other Bluetooth devices for the first time, they'll need to be "paired". This enables them to recognize and communicate with one another whenever they're within range.

The Bluetooth system can pair with multiple Bluetooth devices such as mobile phone, MP3 player, GPS or Sena SR10 Two-Way Radio Adapter via **Mobile Phone Pairing**, **Second Mobile Phone Pairing** and **GPS Pairing**. The Bluetooth system can also be paired with up to three other Sena headsets or Bluetooth systems.

Pairs with up to three Sena Headsets

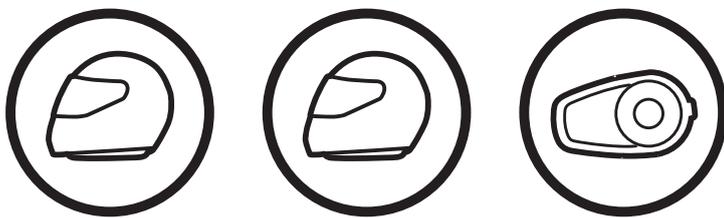

Also pairs with:



Mobile Phone

MP3 Player


GPS Devices

Sena SR10



3.1 Mobile Phone

1. Execute **Phone Pairing** in the **Bluetooth System Configuration Menu**.


Access Phone Pairing in the Bluetooth System Configuration Menu

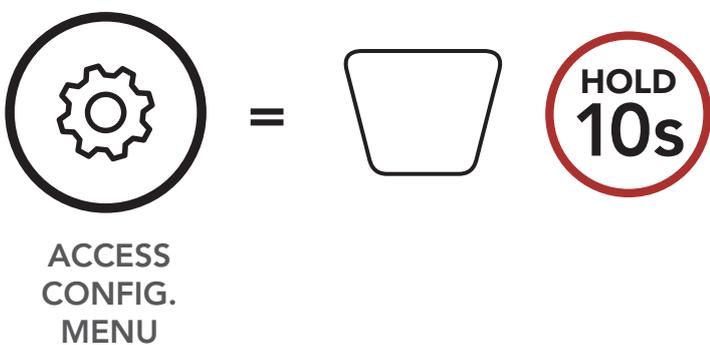

"Configuration menu"

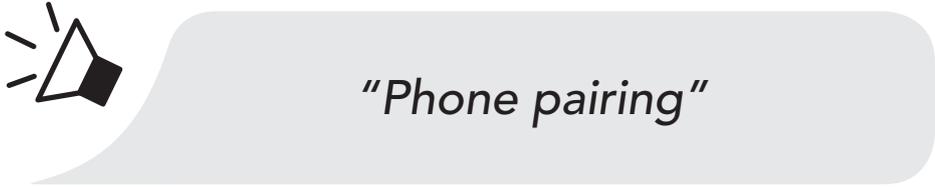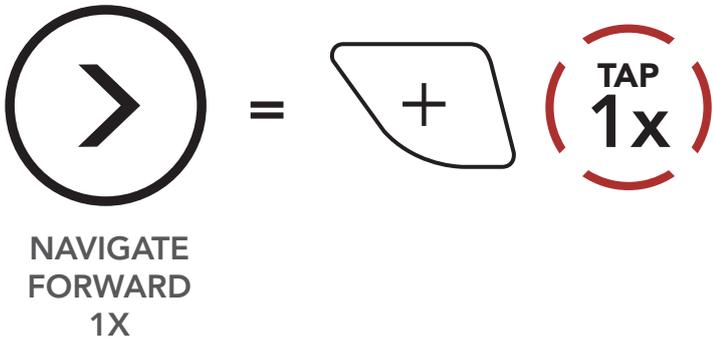

2. With your mobile phone in Bluetooth-pairing mode, select Sena R1 in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

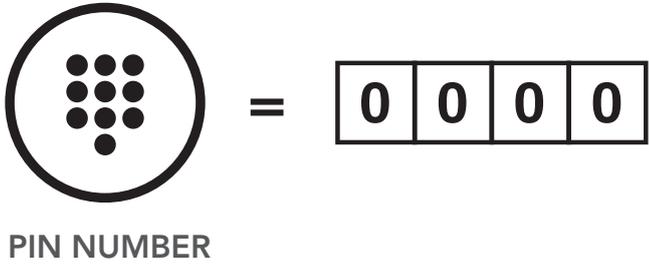


3.2 Additional Mobile Phones or MP3 Player

Before using Bluetooth system with other Bluetooth devices for the first time, they'll need to be "paired." This enables them to recognize and communicate with one another whenever they're within range.


The Bluetooth system can pair with multiple Bluetooth devices such as a mobile phone, for hearing navigational directions from a GPS app or health and training information from apps such as Strava and Cyclometer, or an MP3 player via **Mobile Phone Pairing** and **Second Mobile Phone Pairing**. The Bluetooth system can also be paired with up to three other Sena headsets.

1. Execute **Second Mobile Phone Pairing** in the **Bluetooth System Configuration Menu**.


Access Second Mobile Phone Pairing in the Bluetooth System Configuration Menu

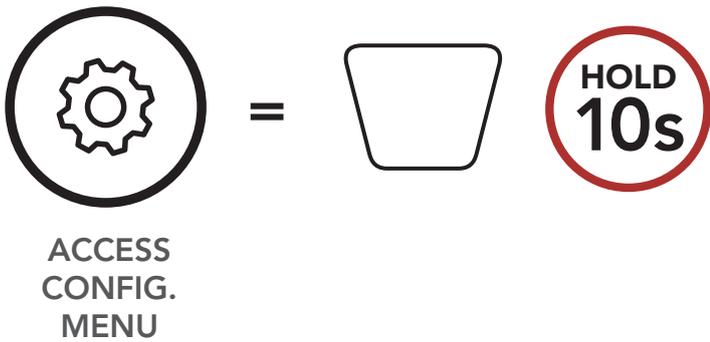


"Configuration menu"

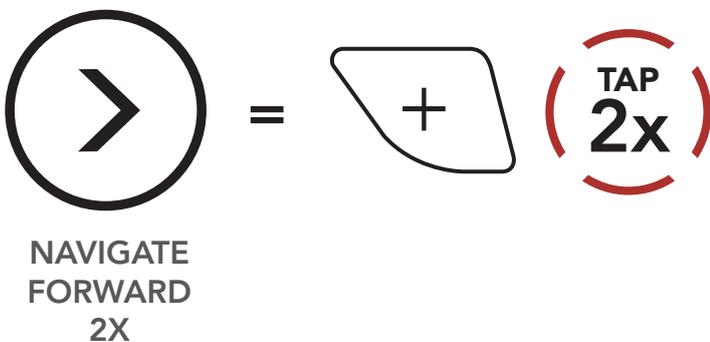

"Second mobile phone pairing"

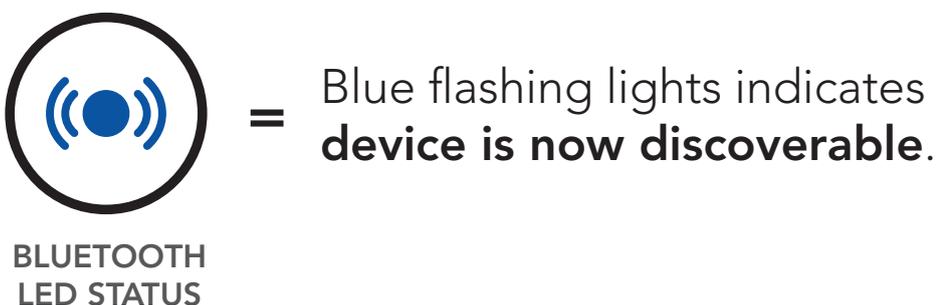

2. With your mobile phone in Bluetooth-pairing mode, select Sena R1 in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

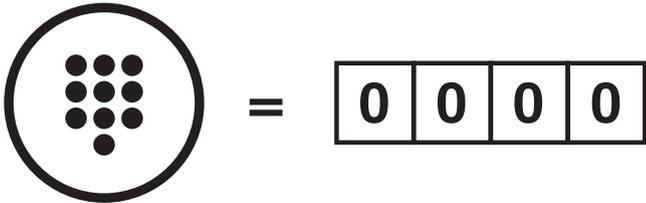

PIN NUMBER


3.3 Advanced Selective Pairing: Hands-Free or A2DP Stereo

Phone Pairing allows the Bluetooth system to establish two Bluetooth profiles: **Hands-Free** or **A2DP Stereo**. **Advanced Selective Pairing** allows the Bluetooth system to separate the profiles to enable connection with two devices.


3.3.1 Phone Selective Pairing — Hands-Free Profile

1. Execute **Phone Selective Pairing** in the **Bluetooth System Configuration Menu**.

Access Phone Selective Pairing in the Bluetooth System Configuration Menu

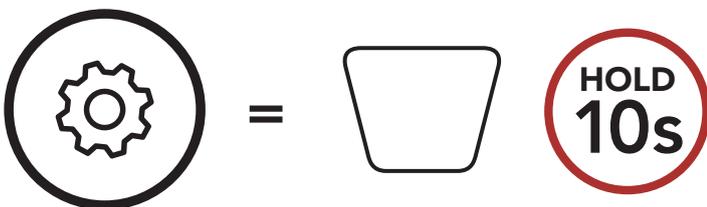ACCESS
CONFIG.
MENU

"Configuration menu"

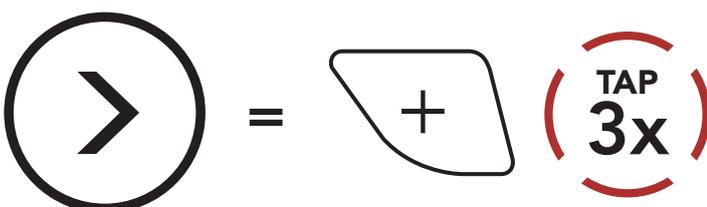NAVIGATE
FORWARD
3X




"Phone selective pairing"



= Blue flashing lights indicate **device is now discoverable.**

BLUETOOTH LED STATUS

2. With your hands-free device in Bluetooth-pairing mode, select Sena R1 in the list of devices detected.
3. If it asks for a PIN, enter 0000.

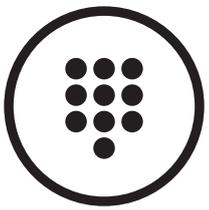

=


0	0	0	0
---	---	---	---

PIN NUMBER


3.3.2 Media Selective Pairing — A2DP Profile

1. Execute **Media Selective Pairing** in the **Bluetooth System Configuration Menu**.

Access Media Selective Pairing in the Bluetooth System Configuration Menu

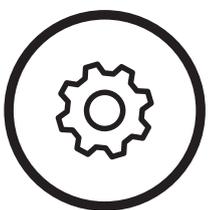


=

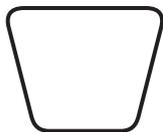


ACCESS CONFIG. MENU



"Configuration menu"

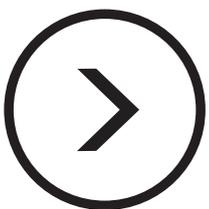

=

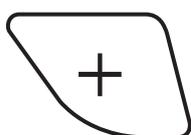

NAVIGATE FORWARD 4X




"Media selective pairing"



= Red flashing lights indicate **device is now discoverable.**

BLUETOOTH
LED STATUS

2. With your A2DP device in Bluetooth-pairing mode, select Sena R1 in the list of devices detected.
3. If it asks for a PIN, enter 0000.

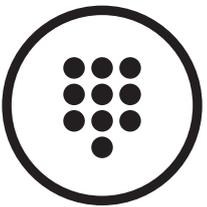

=


0	0	0	0
---	---	---	---

PIN NUMBER


4. MOBILE PHONE USAGE

4.1 Making and Answering Calls


Answer a Call

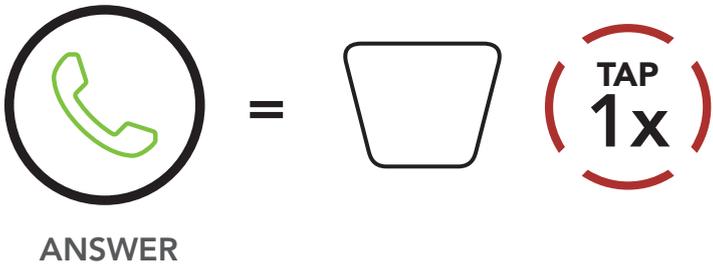

End/Reject a Call

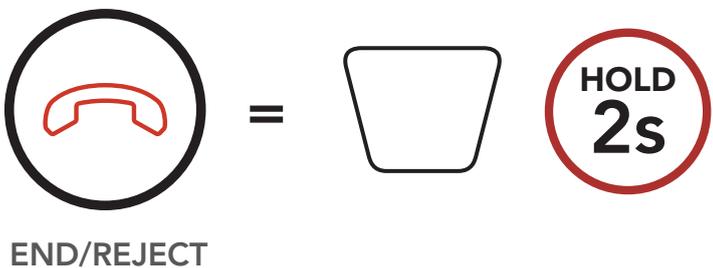

Make a Call with Voice Dialer

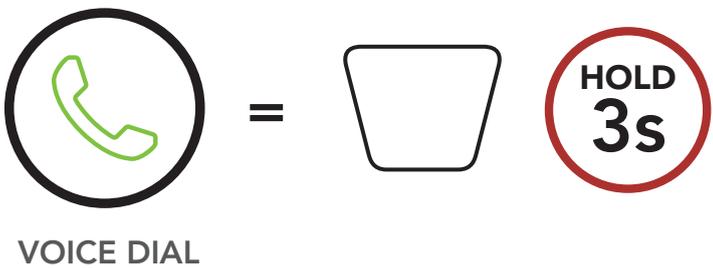


Note: If you have a GPS device connected, you will not hear its voice navigations during a phone call.

4.2 Speed Dialing


4.2.1 Assigning Speed Dial Presets

1. Execute **Speed Dial** in the **Bluetooth System Configuration Menu** by holding down the **Center Button** for **10 seconds**, then using the **(+)** and **(-)** **Buttons** to scroll through the menu. Please refer to **Section 2.7: "Configuration Menu"** for more details.


Assigning Speed Dial Presets

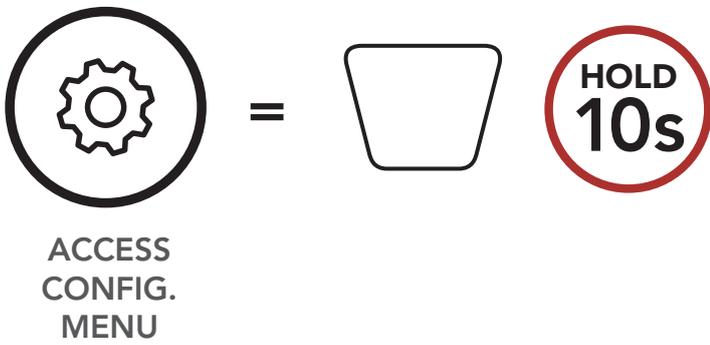

"Configuration menu"

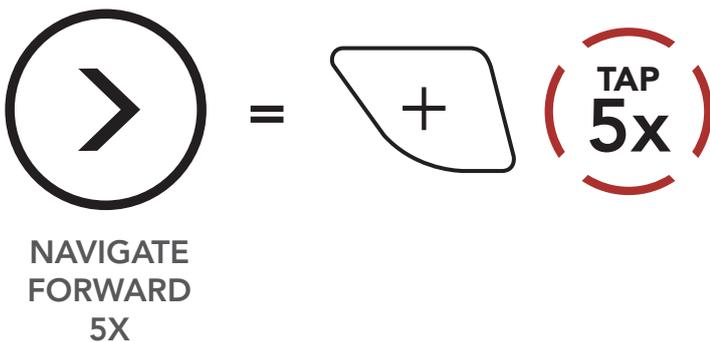


"Speed dial"

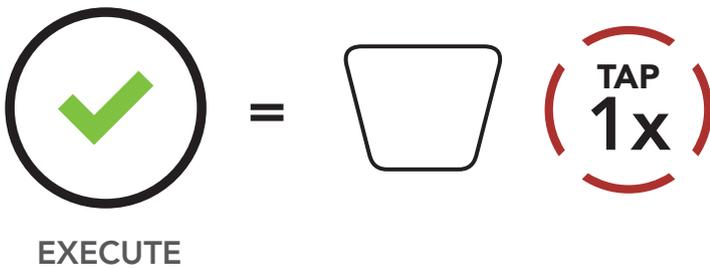


2. Tap the **(+) Button** or the **(-) Button** to set up the three available **Speed Dial Presets**. You will hear the voice prompt, **"Speed dial"** followed by the preset number.

Navigate Forward through Preset Numbers

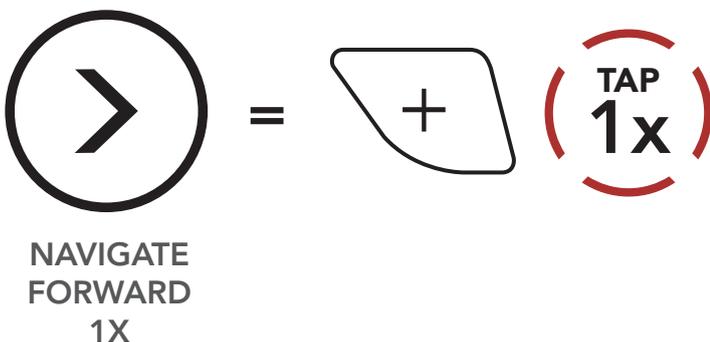

"Speed dial (#)"


Navigate Backward through Preset Numbers

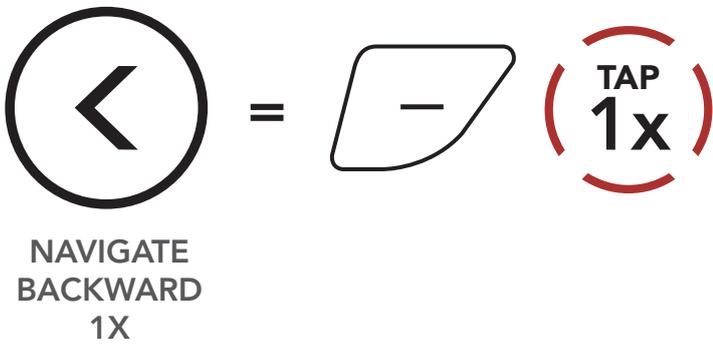

"Speed dial (#)"

- On your mobile phone, call the number to which you want to assign a **Speed Dial Preset**. The call will be terminated immediately. Then, you will hear the voice prompt, **"Save speed dial (#)"**. This confirms that the number was saved.


On Your Mobile Phone, Dial Number

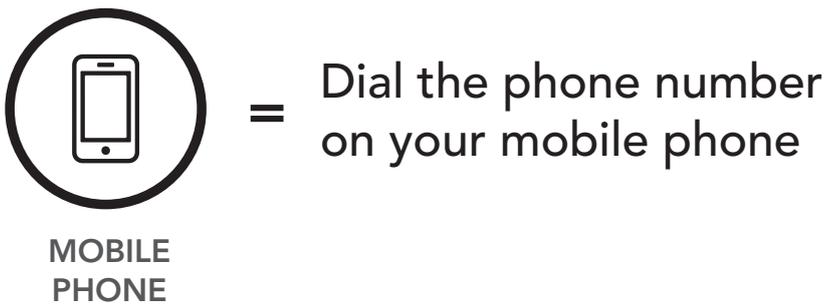


"Save speed dial (#)"

- Use this procedure to save other **Speed Dial Presets**.
- To exit the menu, tap the **(+) Button** or the **(-) Button** until you hear the voice prompt, **"Cancel"**, then tap the **Center Button** to confirm.

Exit Menu

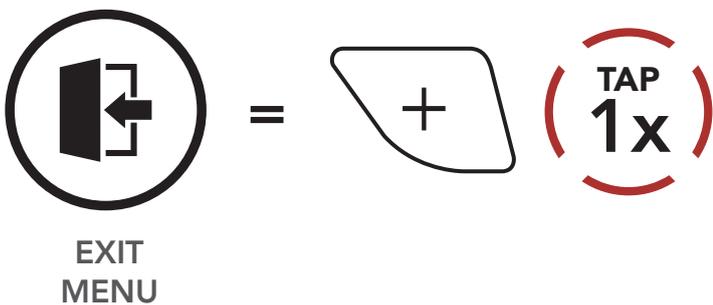


"Cancel"

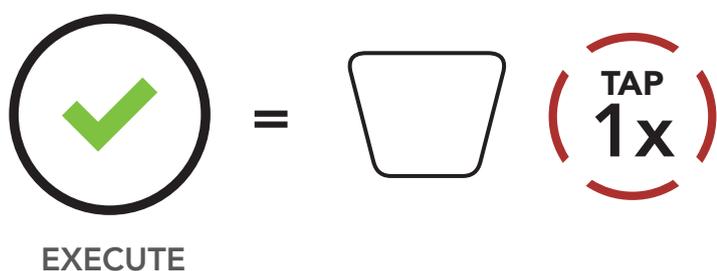

4.2.2 Using Speed Dial Presets

1. Press and hold the **(+) Button** for **3 seconds** to enter into the **Speed Dial** menu. You will hear the voice prompt, **"Speed dial"**.


Enter Speed Dial Mode

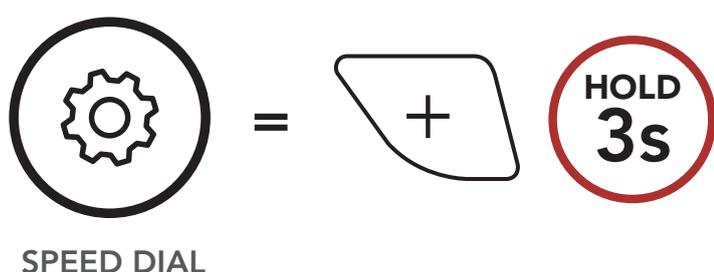


"Speed dial"

2. Tap the **(+) Button** or the **(-) Button** to navigate between the **Speed Dial Presets**.

Navigate Forward through Speed Dial Preset Numbers

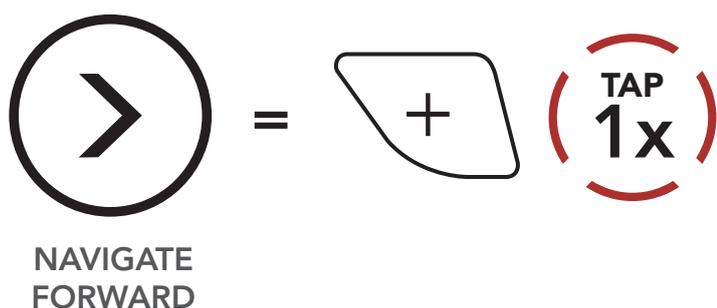


Navigate Backward through Speed Dial Preset Numbers

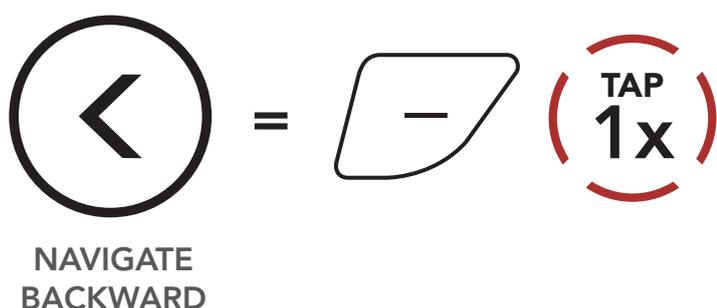

3. To redial the last number called, tap the **Center Button** when you hear the prompt, **"Last number redial"**.


Redial Last Number

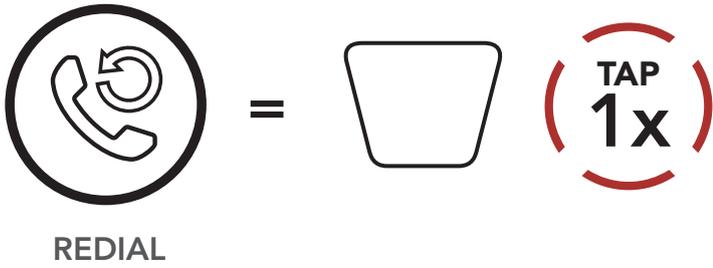

"Last number redial"

4. To call one of your **Speed Dial Presets**, tap the **Center Button** when you hear the prompt, **"Speed dial (#)"**.

Call a Speed Dial Preset Number

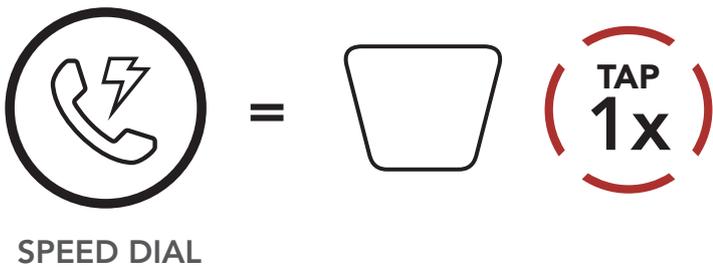


"Speed dial (#)"

5. STEREO MUSIC

5.1 Playing Music with Bluetooth Devices


1. To play or pause music, press and hold the **Center Button** for **1 second** until you hear a double beep.

Play/Pause Music

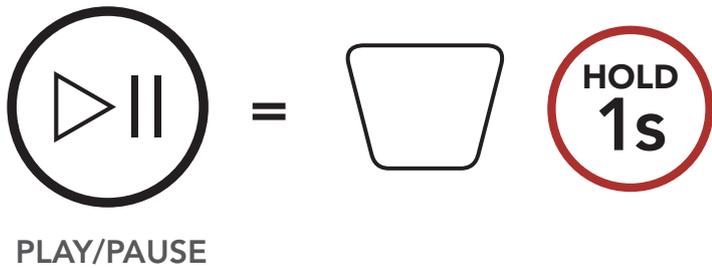


2. To adjust the volume, tap the **(+) Button** or the **(-) Button**.

Volume Up

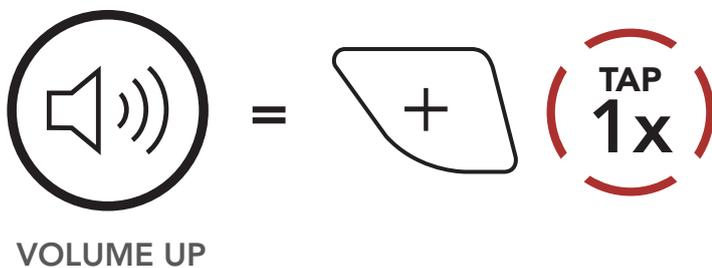


Volume Down

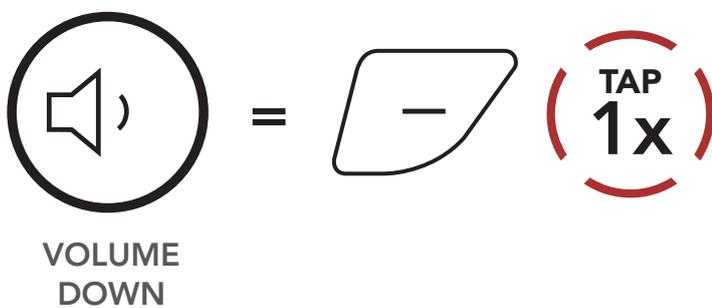


3. To track forward or back, press and hold the **(+) Button** or the **(-) Button** for **1 second**.

Next Track

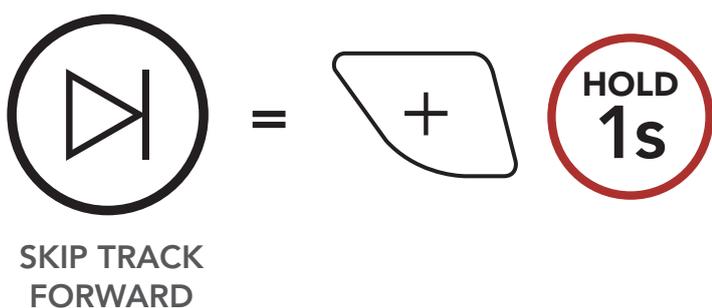

Previous Track

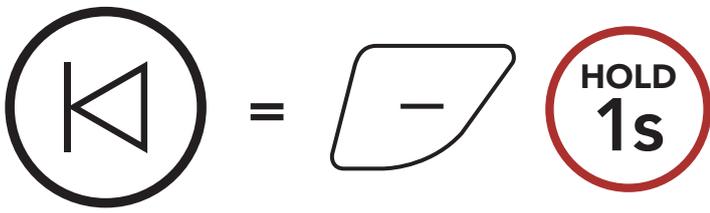


SKIP TRACK
BACKWARD

5.2 Music Sharing

You can share the music you're listening to with an **Intercom Friend** during an intercom conversation. To start or terminate sharing music, press the **Center Button** for **1 second** during an intercom conversation until you hear a double beep. Both you and your **Intercom Friend** can control music playback.

Sharing Music with an Intercom Friend during Intercom Conversation

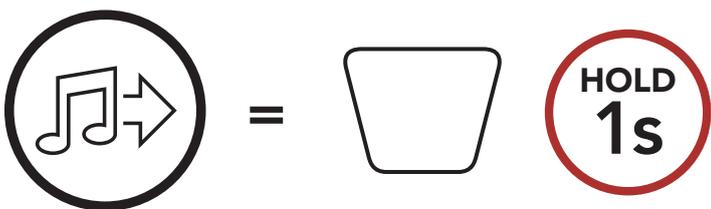

SHARE
MUSIC




"[Beep, Beep]"

6. INTERCOM SETUP

6.1 Intercom Pairing



Up to three other people can be paired with the helmet for Bluetooth intercom conversations.

Pairing with Intercom Friends

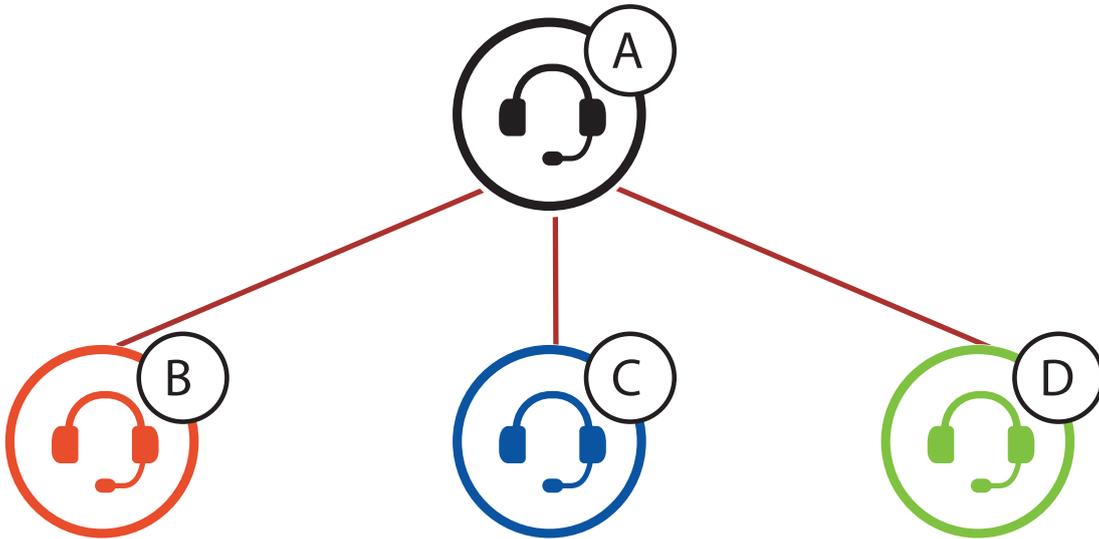


1. Press and hold the **Center Button** on two Bluetooth systems for **5 seconds** until you hear the voice prompt, **"Intercom pairing"**.

Pairing with Intercom B

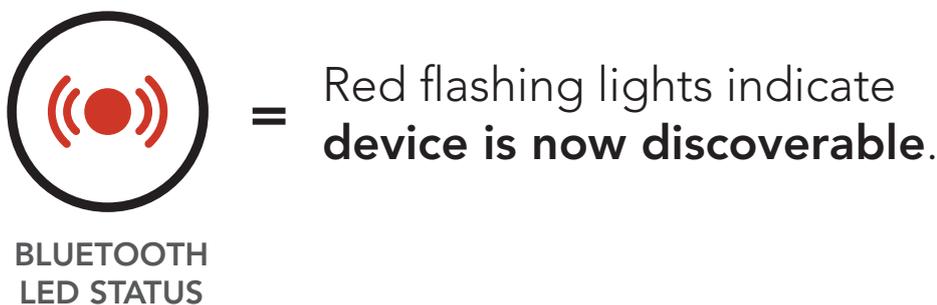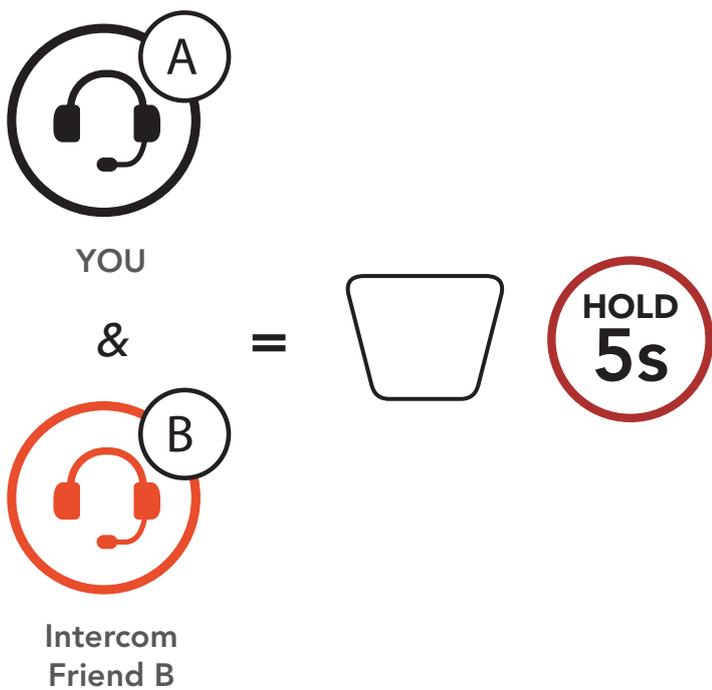



2. Tap the **Center Button** on either Bluetooth system and wait until the LEDs of both turn blue.

On Either One of the Devices

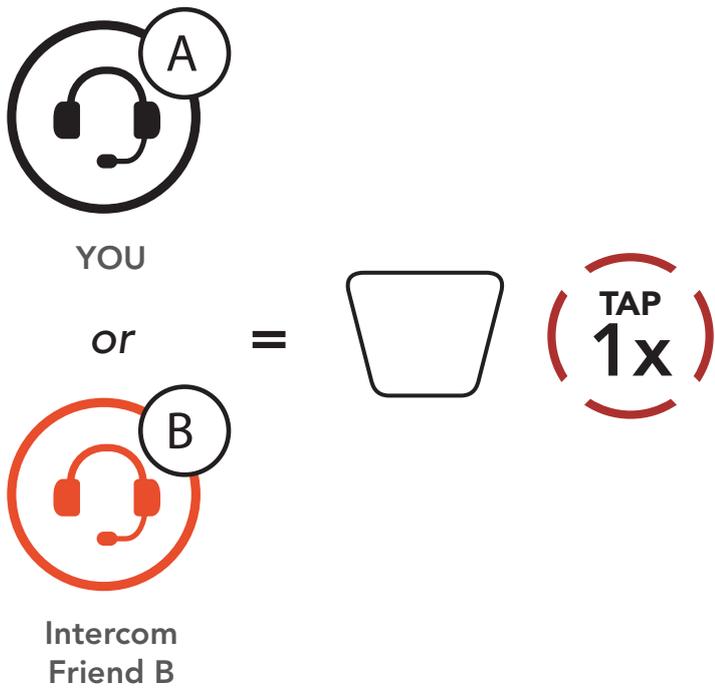

3. Repeat steps 1 and 2 to pair with **Intercom Friends C & D**.

Last-Come, First-Served

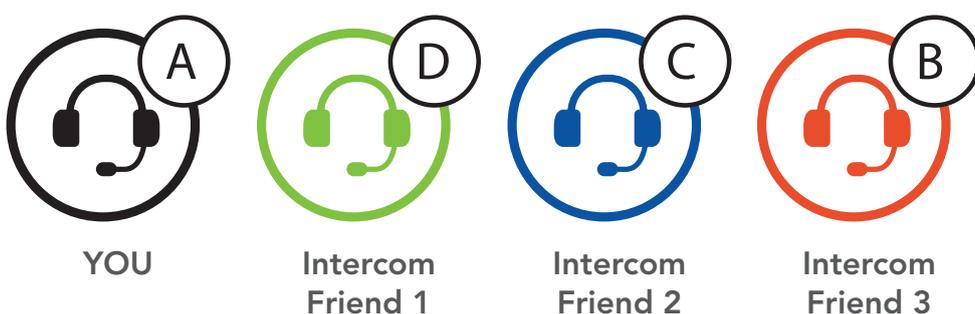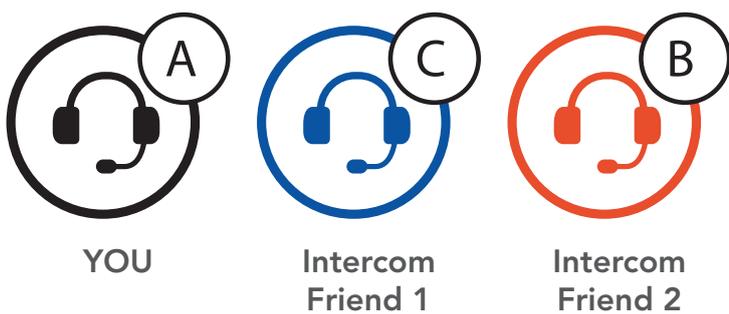


6.2 Two-Way Intercom

You can start or end an intercom conversation with an **Intercom Friend** by tapping the **Center Button**.


1. Tap one for **Intercom Friend 1**.

Start/End Two-Way Intercom with Intercom Friend 1

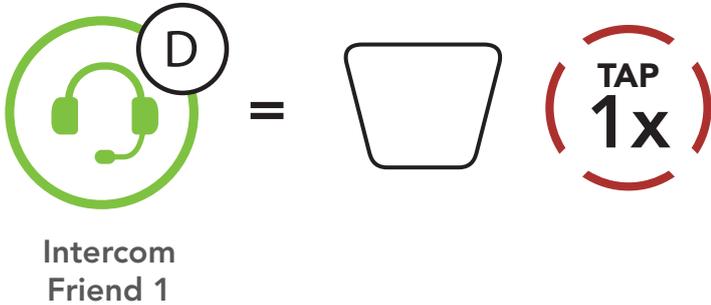


2. Tap twice for **Intercom Friend 2**.

Start/End Two-Way Intercom with Intercom Friend 2

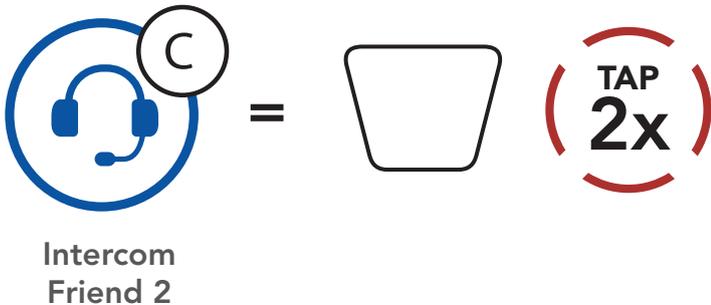

3. Tap three times for **Intercom Friend 3**.

Start/End Two-Way Intercom with Intercom Friend 3

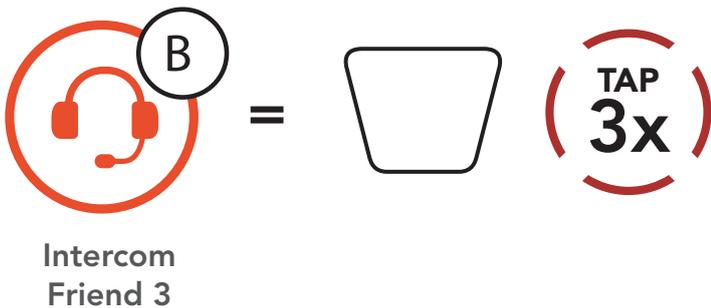

6.3 Multi-Way Intercom


Multi-Way Intercom enables conference-call-style conversations with up to three **Intercom Friends** at the same time. While **Multi-Way Intercom** is in progress, mobile phone connection is temporarily disconnected. However, as soon as **Multi-Way Intercom** terminates, the mobile phone connection will be reestablished.

6.3.1 Starting a Three-Way Intercom Conference

You (A) can have a **Three-Way intercom Conference** with two other **Intercom Friends (B & C)** by establishing two intercom connections simultaneously.


1. Pair your Bluetooth system (A) with those of two other **Intercom Friends (B & C)**. Please refer to **Section 6.1: "Intercom Pairing"** for pairing instructions.

Pair with Intercom Friends B & C

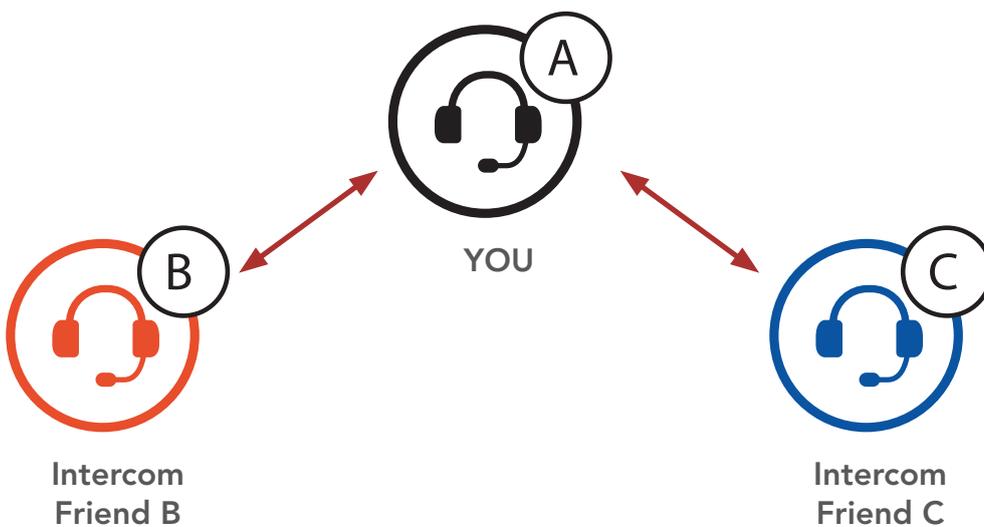


2. Start an intercom conversation with one of the two friends in your intercom group. For example, **you (A)** may start an intercom conversation with the **Intercom Friend (B)**. Or, **Intercom Friend (B)** may start an intercom call with **you (A)**.

Starting an Intercom Conversation with Intercom Friend B

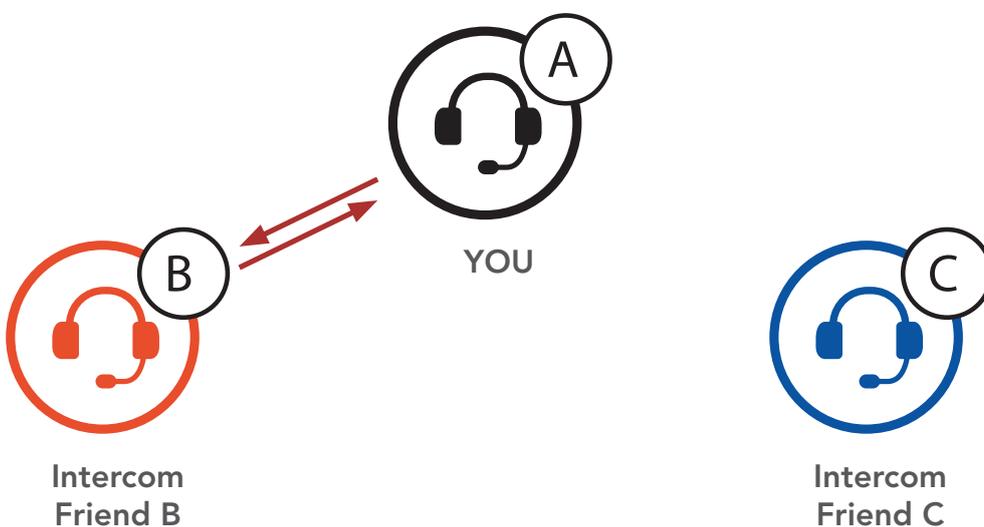


3. Then, **you (A)** can call the second **Intercom Friend (C)**, or the second **Intercom Friend (C)** may join the intercom by making an intercom call to **you (A)**.

Starting an Intercom Conversation with Intercom Friend C

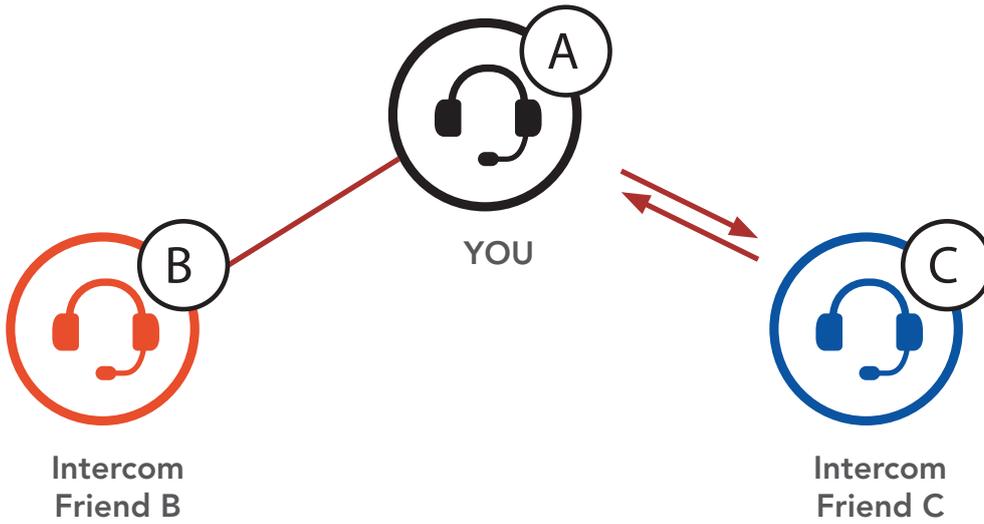

4. Now **you (A)** and two **Intercom Friends (B & C)** are having a **Three-Way Intercom Conference**.


Three-Way Intercom

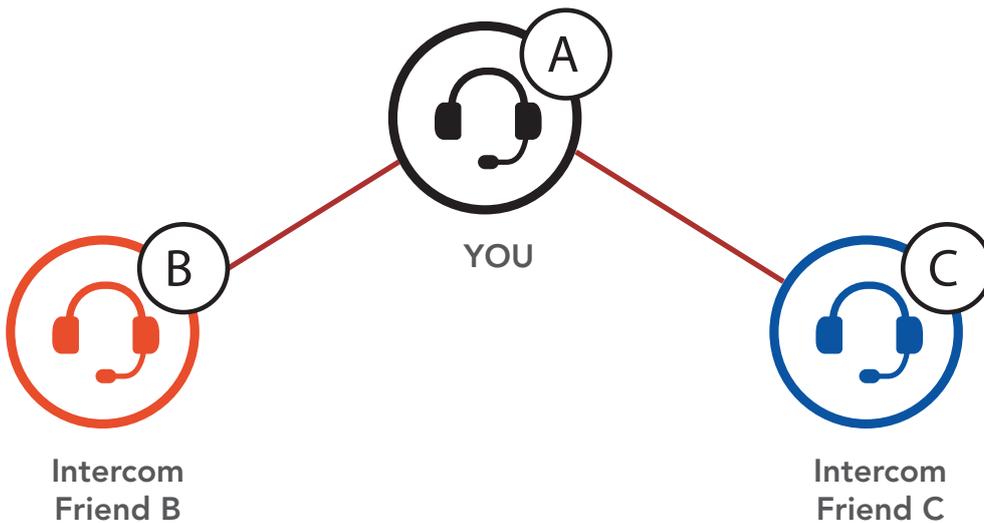

6.3.2 Starting a Four-Way Intercom Conference

With three **Intercom Friends** connected, a new participant (**D**) can make it a **Four-Way Intercom Conference** by making an intercom call to either (**B**) or (**C**).

Starting a Four-Way Intercom

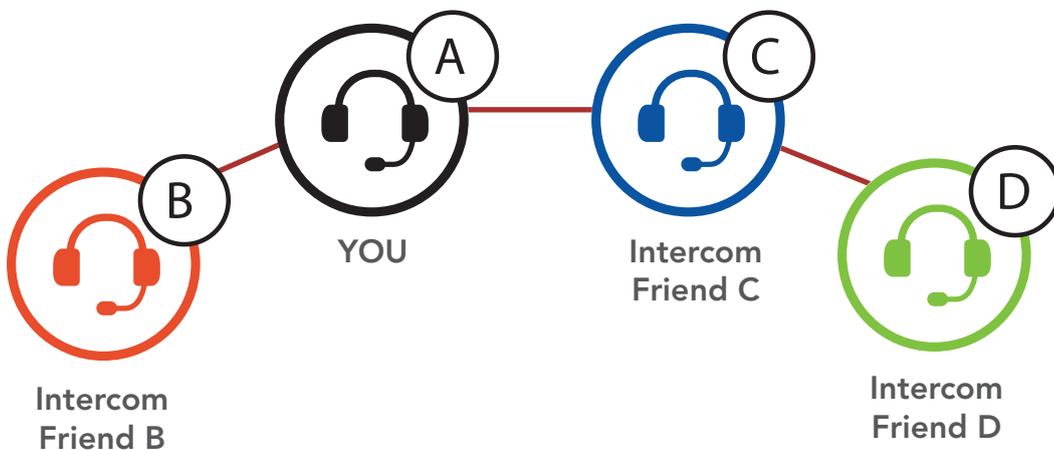

6.3.3 Ending Multi-Way Intercom


1. Press the **Center Button** for **1 second** until you hear a beep to terminate all intercom connections.
2. Tap the **Center Button** to disconnect from your first **Intercom Friend**. Double tap the **Center Button** to disconnect from your second **Intercom Friend**.

6.4 Three-Way Conference Phone Call with Intercom Users

You can have a **Three-Way Conference Phone Call** by adding an **Intercom Friend** to the mobile phone conversation.


1. During a mobile phone call, tap the **Center Button** to invite one of your **Intercom Friends** to the conversation.

Invite an Intercom Friend into Phone Conference

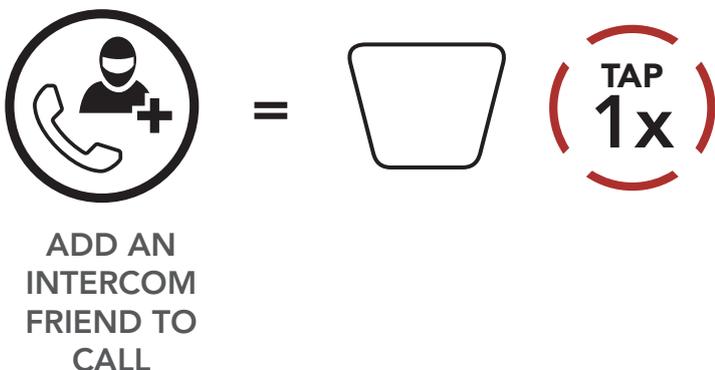

- To disconnect the intercom during a conference phone call, tap the **Center Button**.


Disconnect Intercom Friend from Conference

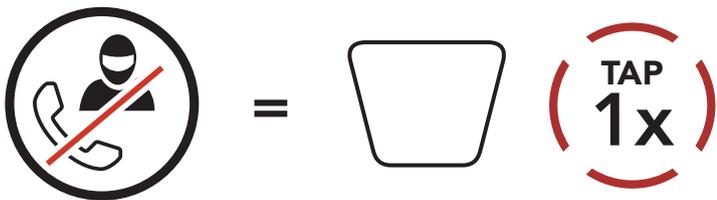

DISCONNECT
INTERCOM

- To disconnect the mobile phone call during a conference phone call, press the **Center Button** for **2 seconds**.

End Phone Call

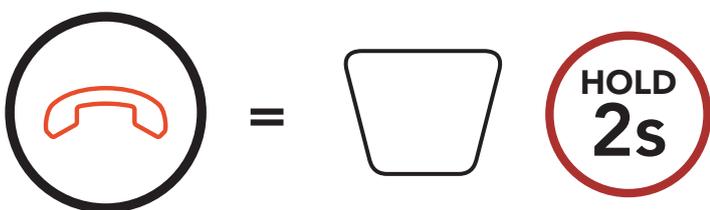

END MOBILE
CALL


Note: When you have an incoming intercom call during a mobile phone call, you will hear a voice prompt, **"Intercom Requested."**

6.5 Group Intercom

Group Intercom allows you to instantly create a **Multi-Way Conference Intercom** with three of the most recently paired headsets.

- Pair intercoms with up to three people you want in the **Group Intercom**.
- Tap the **(+) Button** and the **(-) Button** simultaneously to begin **Group Intercom**. The alternating blue and red flashing lights indicate that the device is now in Group Intercom mode and you will hear a voice prompt, **"Group intercom"**.


Start Group Intercom

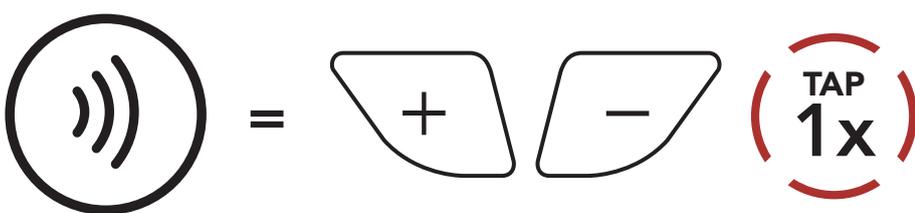


START
GROUP
INTERCOM



BLUETOOTH LED STATUS

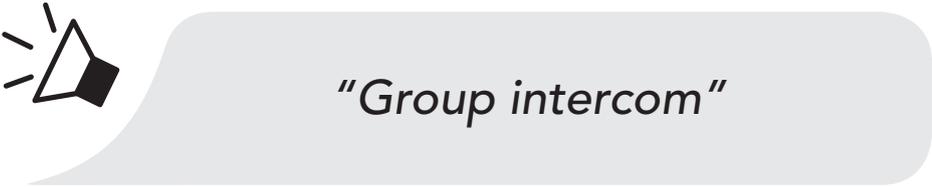


3. When all of the headsets are connected together, everyone will hear the voice prompt, **"Group intercom connected"**.

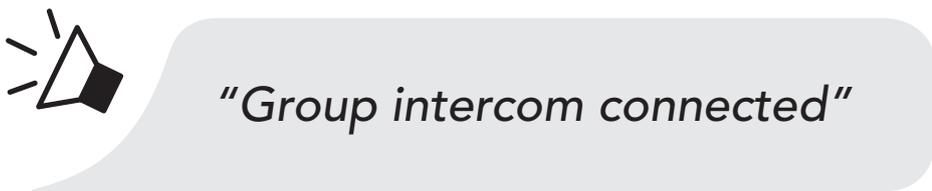


4. To terminate **Group Intercom**, press the **Center Button** for **1 second** during **Group Intercom**. You will hear a voice prompt, **"Group intercom terminated"**.

End Group Intercom

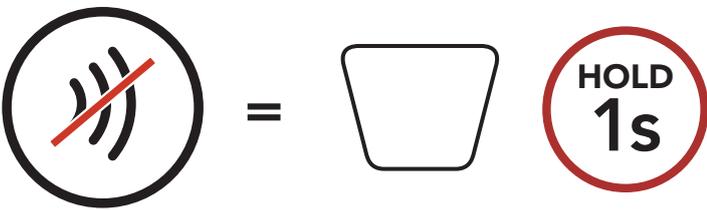

END GROUP INTERCOM





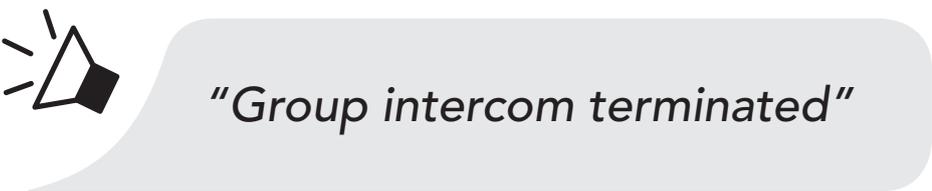


6.6 Universal Intercom

Universal Intercom allows you to have intercom conversations with users of non-Sena Bluetooth headsets. You can pair the Bluetooth system with only one non-Sena headset at a time. The intercom distance depends on the performance of the Bluetooth headset to which it's connected. When a non-Sena Bluetooth headset is paired with the Bluetooth system, if another Bluetooth device is paired via **Second Mobile Phone Pairing**, it will be disconnected.


1. Execute **Universal Intercom** in the **Bluetooth System Configuration Menu**. Please refer to **Section 2.7: "Configuration Menu"** for more details.

Access Universal Intercom in the Bluetooth System Configuration Menu

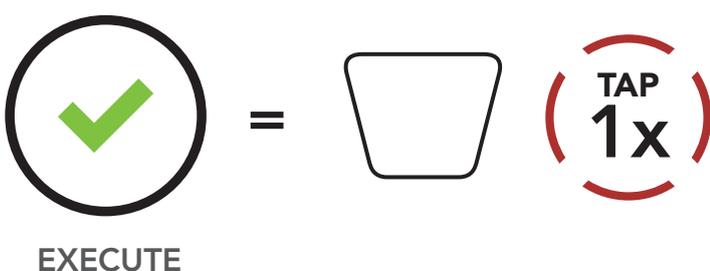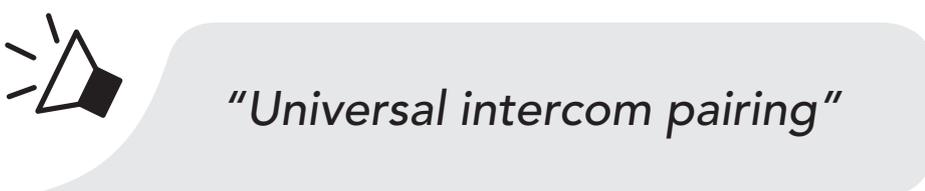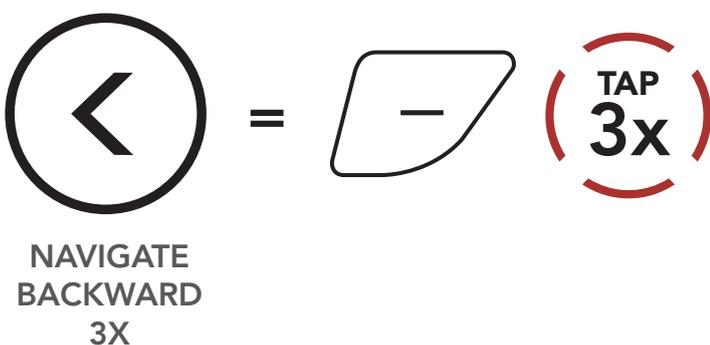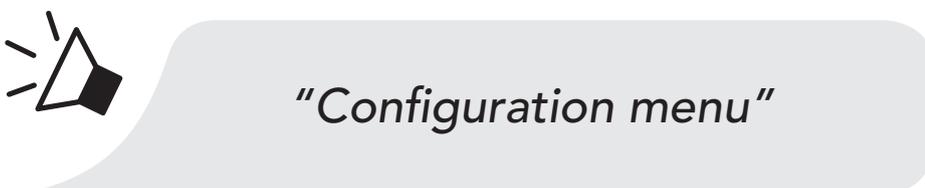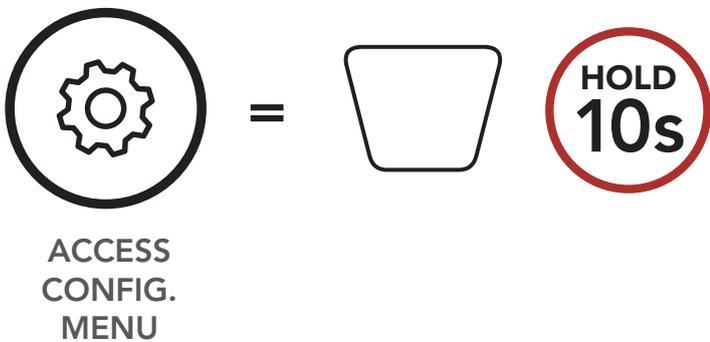


- Put the non-Sena Bluetooth headset in Pairing Mode. The Bluetooth system will automatically pair with a non-Sena Bluetooth headset.
- You can have **Two-Way Intercom** or **Multi-Way Intercom** communication with up to three **Intercom Friends** using non-Sena headsets by following the procedures described below.

Example of a Three-Way Universal Intercom

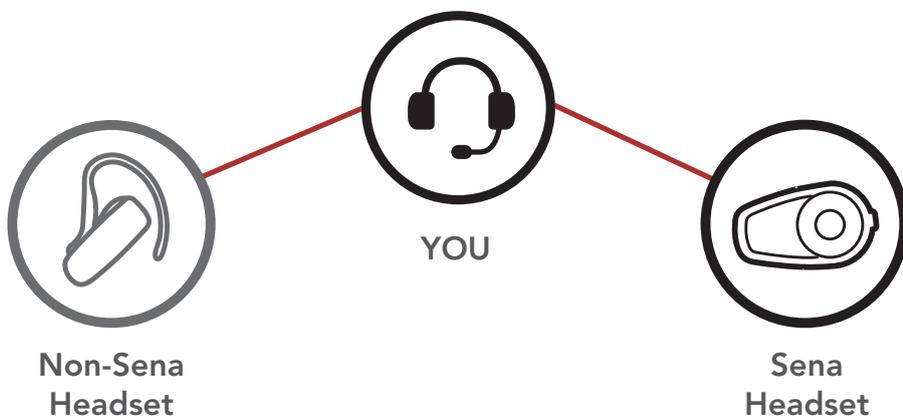

Example of a Four-Way Universal Intercom

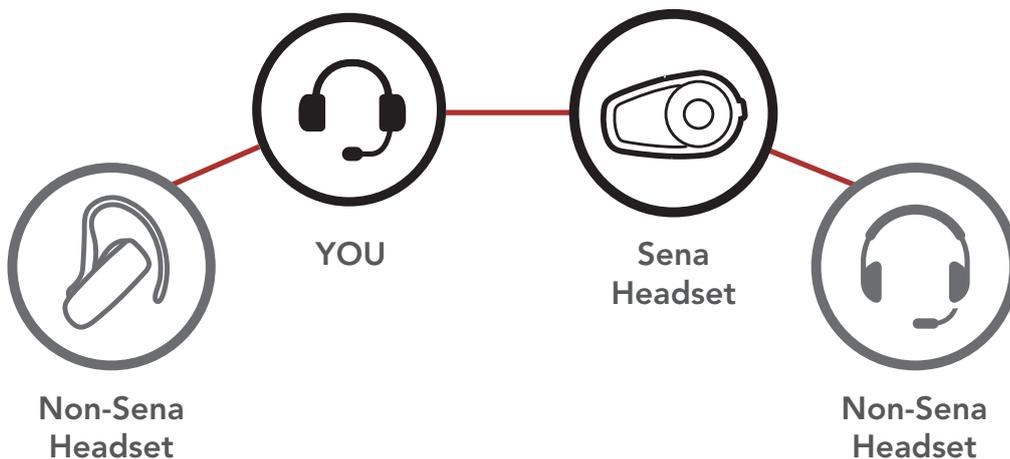


6.7 Advanced Noise Control™ (Default: Enable)

An **Advanced Noise Control** setting can be found in the **Bluetooth System Configuration Menu**. Please refer to **Section 2.7: "Configuration Menu"** for more details.


If **Advanced Noise Control** is enabled, background noise is reduced during intercom conversations.

If **Advanced Noise Control** is disabled, the background noise is mixed with your voice while using the intercom.


Access Advanced Noise Control in the Bluetooth System Configuration Menu

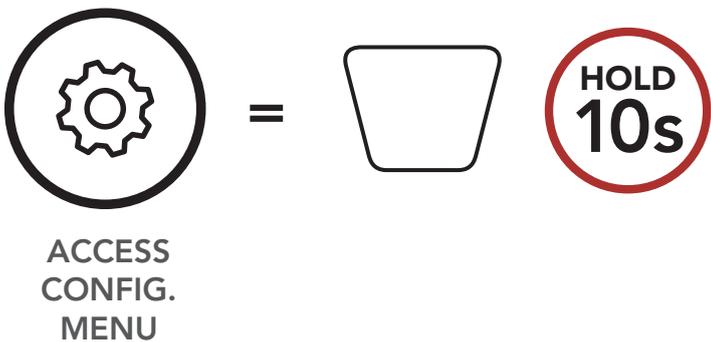

"Configuration menu"

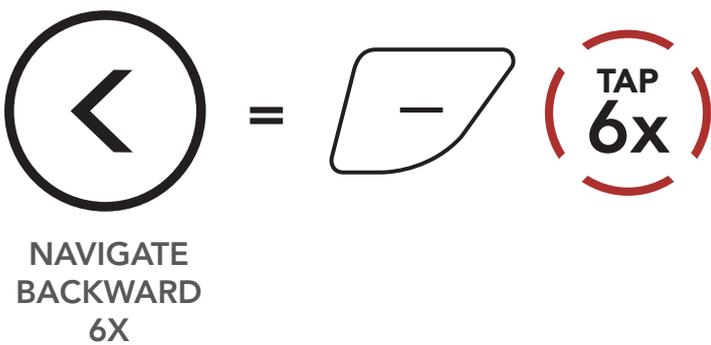

"Noise control"

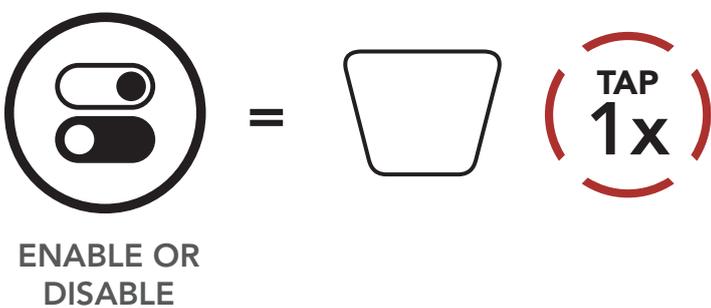


7. USING THE FM RADIO

7.1 FM Radio On/Off


To turn on or shut off the FM radio, press the **(-) Button** for **1 second** until you hear a double beep.

FM Radio On

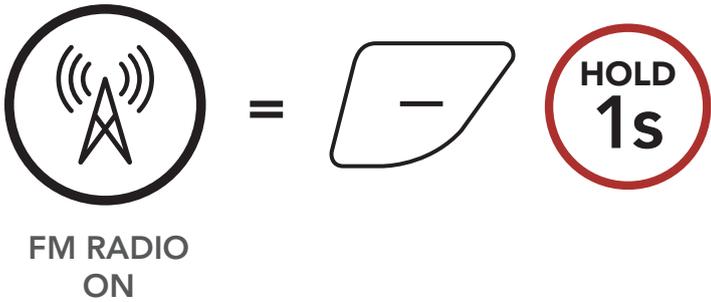

"[Beep, Beep]"

FM Radio Off

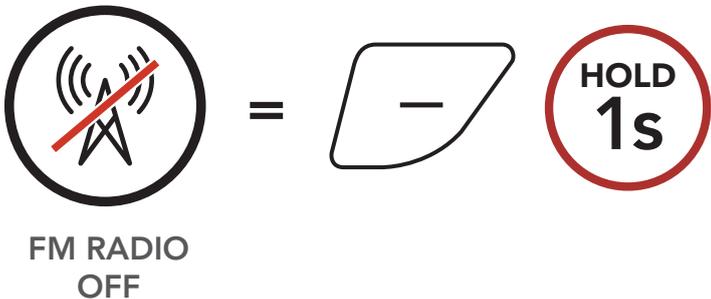


"[Beep, Beep]"

7.2 Seek and Save Radio Stations


The **"Seek"** feature searches for radio stations.

1. Double tap the **(+) Button** or the **(-) Button** to search for radio stations.

Seek Stations Forward

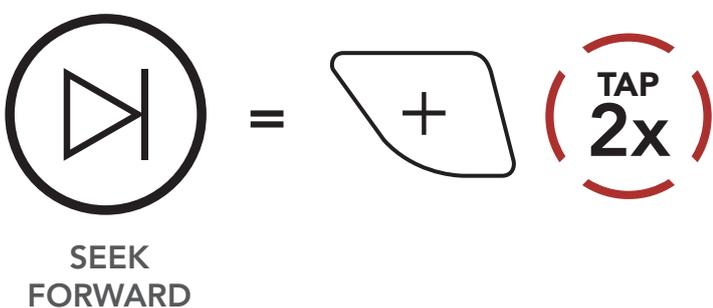


Seek Stations Backward

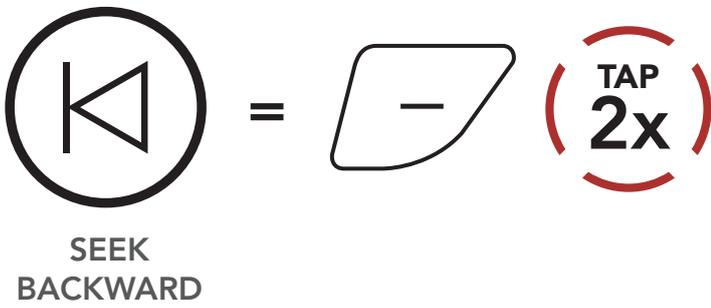

- To save the current station, press and hold the **Center Button** for **3 seconds** until you hear the voice prompt, **"Preset (#)"**.


Enter Preset Selection Mode

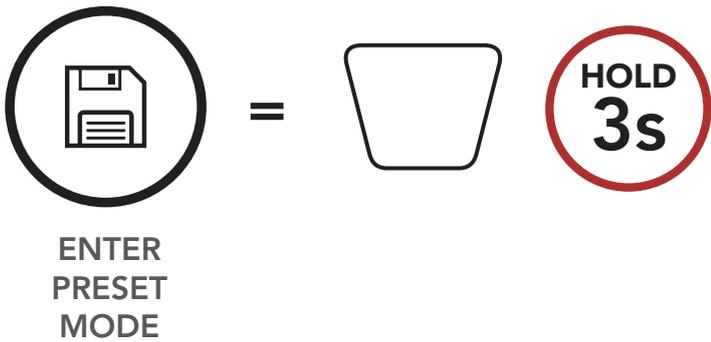


"Preset (#)"

- Tap the **(+) Button** or the **(-) Button** to navigate through the preset numbers that you want to store.

Navigate Forward through Preset Stations

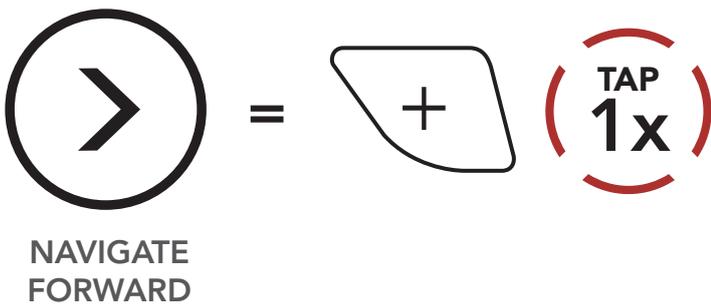


Navigate Backward through Preset Stations

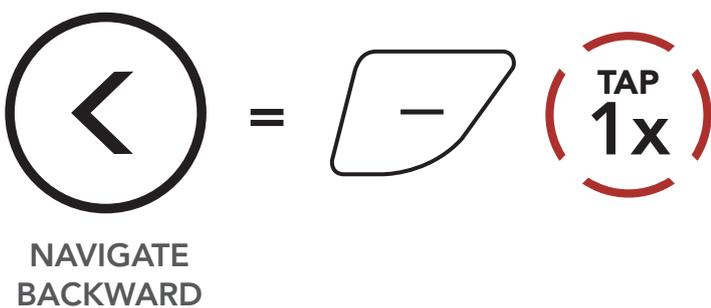


4. Press and hold the **(+) Button** for **1 second** to save the station in the preset number you choose. Or, press and hold the **(-) Button** for **1 second** to delete the station from memory.

Save Station to the Preset Number

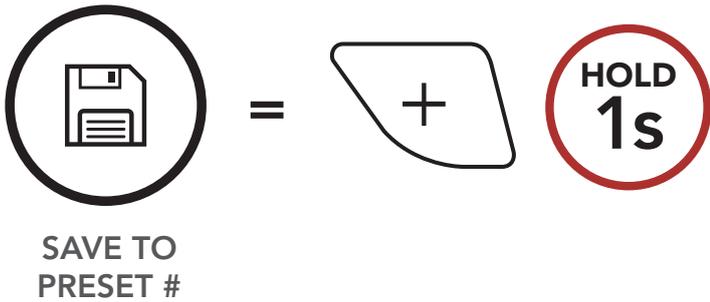

Delete Station from Memory

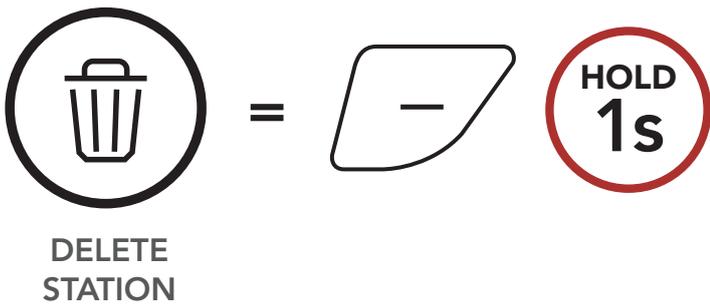


7.3 Scan and Save Radio Stations

The **"Scan"** function automatically searches for radio stations, starting with the current station's frequency, then up from there.


1. Press and hold the **(+) Button** for **1 second** to scan for stations.

Scan and Save Radio Stations

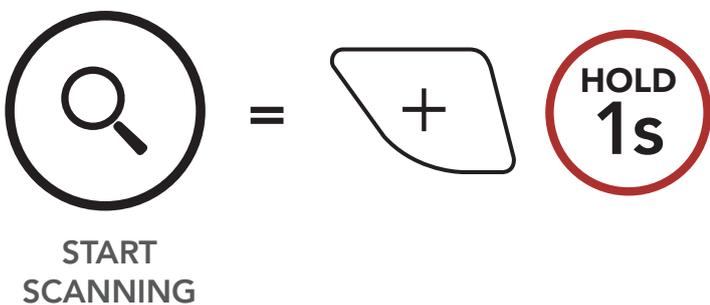

2. The Sena tuner pauses at each station it finds for **8 seconds** before moving to the next.
3. To save the current station, tap the **Center Button**. The station will be saved as the next preset number.


Save the Current Station

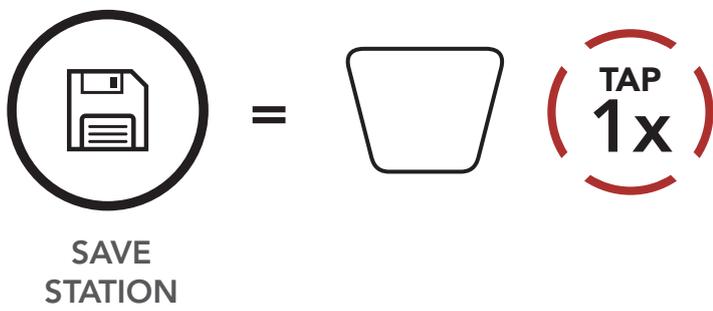

"Preset (#)"

- To stop scanning, press the **(+) Button** for **1 second**.

Stop Scanning

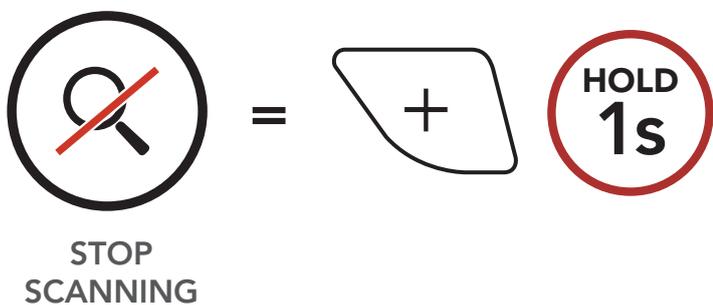


7.4 Temporary Station Preset

The **Temporary Preset** feature automatically finds and saves the nearest 10 radio stations without changing your existing preset stations.

- Tap the **(+) Button** three times to automatically find and save 10 stations.

Temporary Stations

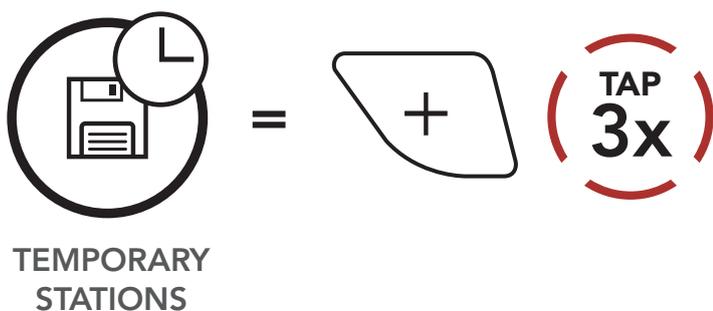


- The temporary preset stations will be cleared when the Bluetooth system reboots.

7.5 Navigating Preset Stations

Using the methods above, up to 10 radio stations can be stored. Press and hold the **Center Button** for **1 second** to navigate through the saved stations.

Navigate through Preset Stations

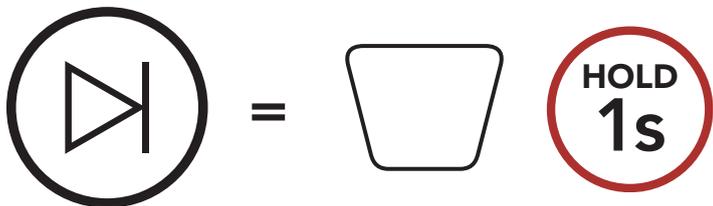

NAVIGATE
FORWARD

Note: You can use the **Sena Device Manager** or the **Sena Smartphone App** to save the preset stations.

7.6 Region Selection (Default: Worldwide)

You can select the proper FM frequency range for your location from the **Sena Device Manager** or the **Sena Smartphone App**. Using the region setting, you can optimize the seek function to avoid unnecessary frequency ranges.




Region	Frequency range	Step
Worldwide	76.0 ~ 108.0 MHz	± 100 kHz
North America, South America and Australia	87.5 ~ 107.9 MHz	± 200 kHz
Asia and Europe	87.5 ~ 108.0 MHz	± 100 kHz
Japan	76.0 ~ 95.0 MHz	± 100 kHz

7.7 Radio Data System(RDS) Alternative(AF) Setting (Default: Enable)

The **RDS AF** setting can be found in the **Bluetooth System Configuration Menu**. Please refer to **Section 2.7: "Configuration Menu"** for more details.

When radio station signals get too weak for good reception, with **RDS AF** enabled, the Sena radio receiver re-tunes to a station with better reception. If **RDS AF** is disabled, you'll have to find stronger stations manually.

Access RDS AF Setting in the Bluetooth System Configuration Menu

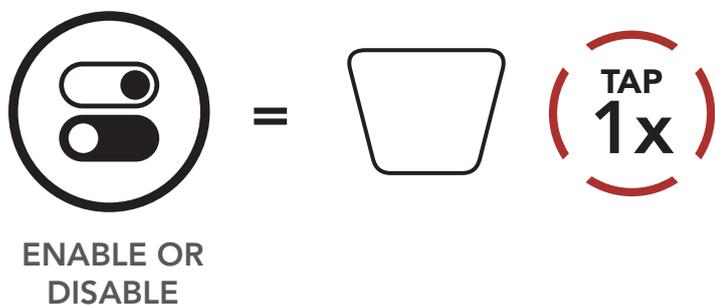
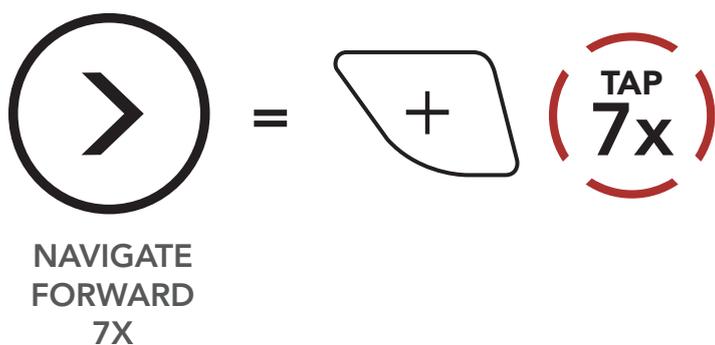
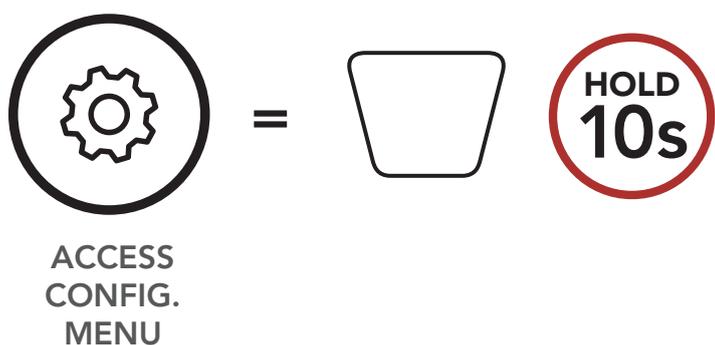


7.8 FM Station Guide (Default: Enable)

The **FM Station Guide** setting can be found in the **Bluetooth System Configuration Menu**. Please refer to **Section 2.7: "Configuration Menu"** for more details.

When FM Station Guide is enabled, FM station frequencies are given by voice prompts as you select preset stations. When FM Station Guide is disabled, the voice prompts on FM station frequencies will not be given as you select preset stations.

Access FM Station Guide in the Bluetooth System Configuration Menu

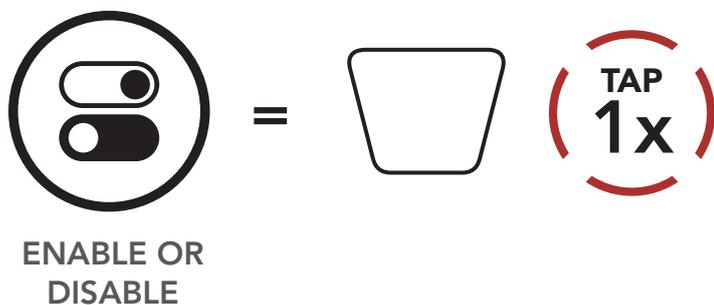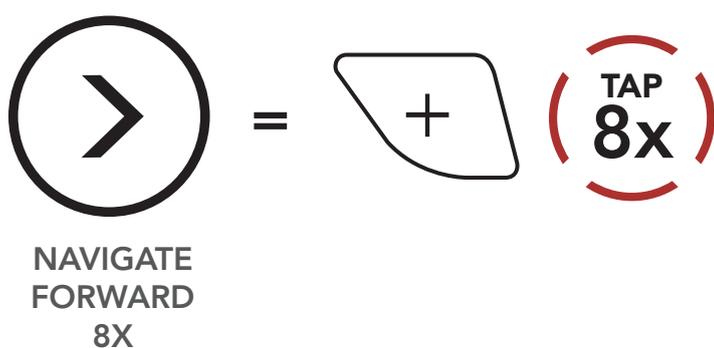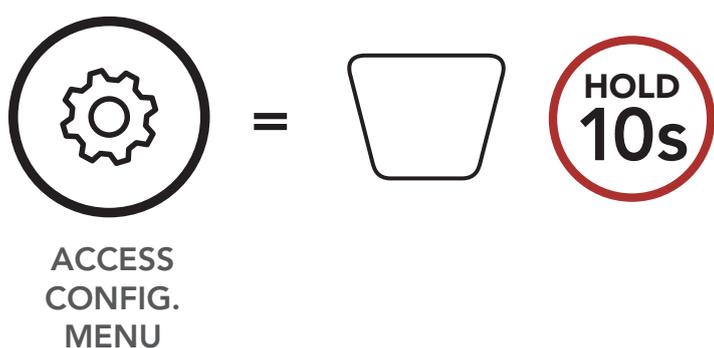

8. HEADSET CONFIGURATION SETTINGS

8.1 Function Priority

The Bluetooth system prioritizes connected devices in the following order:

- (highest)** Mobile phone
- Intercom
- Music sharing via Bluetooth stereo
- FM Radio
- (lowest)** Bluetooth stereo music

A lower-priority function gets interrupted by a higher-priority function. For example, stereo music will be interrupted by an **Intercom Conversation**; an **Intercom Conversation** will be interrupted by an incoming mobile phone call.

8.2 Firmware Upgrades

The Bluetooth system supports firmware upgrades. You can upgrade the firmware using the **Sena Device Manager**. Please refer to **Section 2.6.1: "Sena Device Manager"** for more details. Please visit [sena.com](https://www.sena.com) to check for the latest software downloads.

[Click Here to Visit sena.com](https://www.sena.com)






8.3 Voice Prompts

A **Voice prompt** setting can be found in the **Bluetooth System Configuration Menu**. Please refer to **Section 2.7: "Configuration Menu"** for more details.

If **Voice prompt** is enabled, you can hear **Voice prompts** for different kinds of features. If **Voice prompt** is disabled, Voice prompts are silenced except for those in the **Bluetooth System Configuration Menu**, battery level indication, speed dial, and FM radio functions.



Access Voice Prompt in the Bluetooth System Configuration Menu

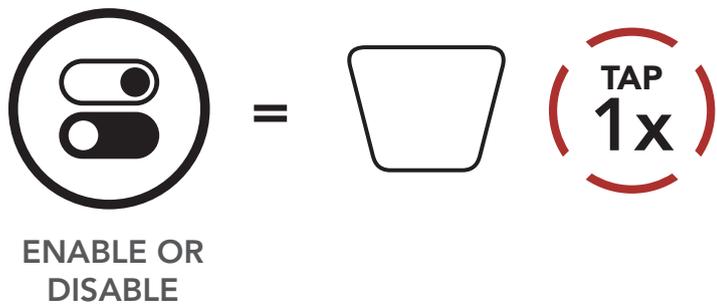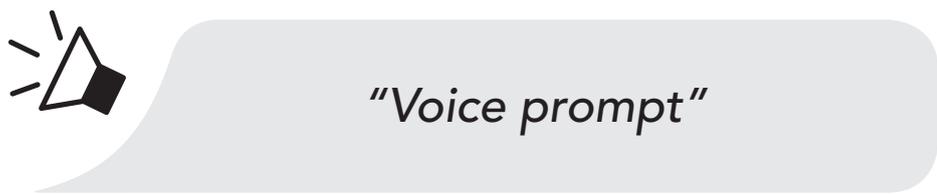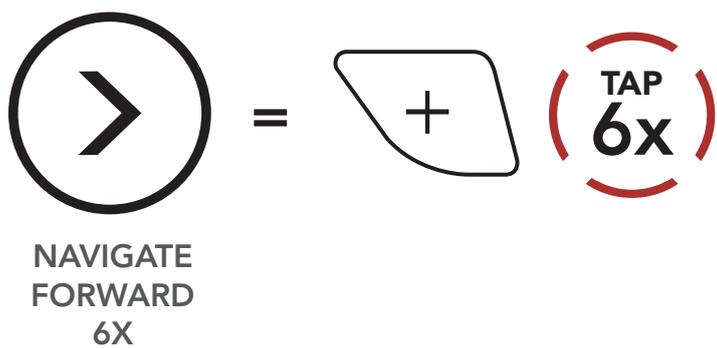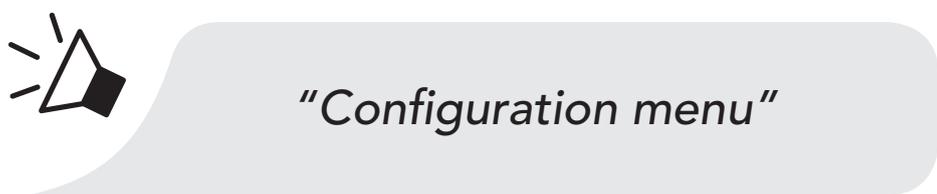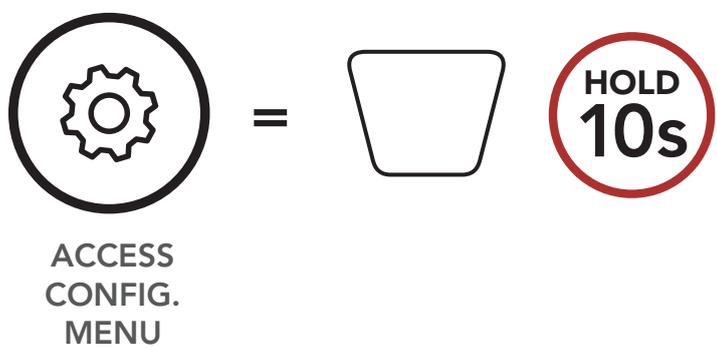


8.4 Deleting All Bluetooth Pairing Information

A **Delete All Bluetooth Pairing Information** setting can be found in the **Bluetooth System Configuration Menu**. Please refer to **Section 2.7: "Configuration Menu"** for more details.

Tap the **Center Button** when in this menu to **Delete All Bluetooth Pairing Information** stored in the headset.

Access Delete All Pairings in the Bluetooth System Configuration Menu

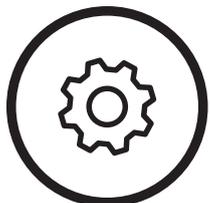


=



ACCESS
CONFIG.
MENU



"Configuration menu"

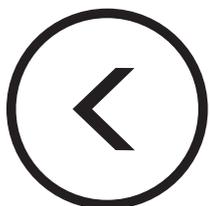

=




NAVIGATE
BACKWARD
5X



"Delete all pairings"



=

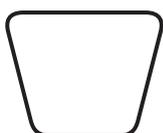

EXECUTE


9. REMOTE CONTROL

You can remotely control the Bluetooth system using Sena Remote Control devices (sold separately) such as a Handlebar Remote or a Wristband Remote. This eliminates the need to remove your hands from the handlebars for button operations.


9.1 Pairing with the Remote Control

1. Turn on the Bluetooth system and the Remote Control device.
2. Execute **Remote Control Pairing** in the **Bluetooth System Configuration Menu**. Please refer to **Section 2.7: "Configuration Menu"** for more details.


Access Remote Control Pairing in the Bluetooth System Configuration Menu

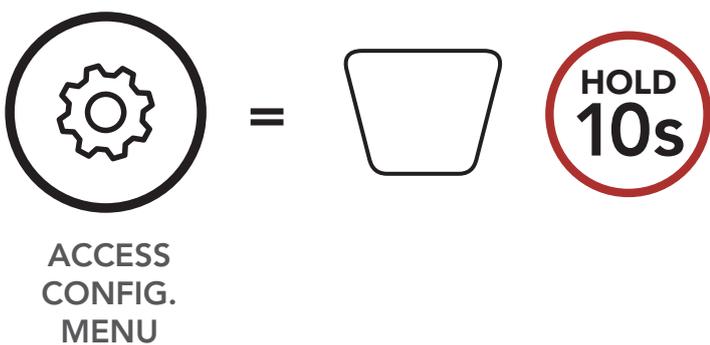

"Configuration menu"

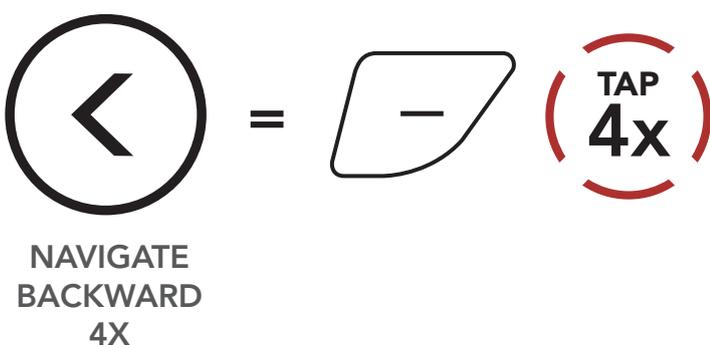

"Remote control pairing"

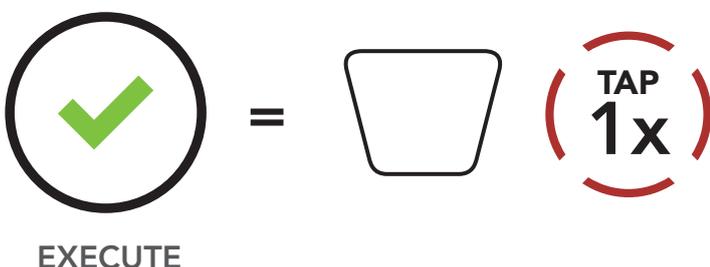

3. Enter pairing mode in the Remote Control device. The Bluetooth system will automatically connect with the Remote Control device in pairing mode. You will hear a voice prompt, **“Remote control connected”**, when they are successfully paired.

Enter Pairing Mode



= Enter Pairing Mode
on Remote Control.

REMOTE
CONTROL



“Remote control connected”

10. TROUBLESHOOTING

Please visit [sena.com](https://www.sena.com) for answers to frequently asked questions. This detailed online FAQ section deals with troubleshooting, illustrates case studies and contains tips on using the **R1**.


[Click Here to Visit sena.com](https://www.sena.com)

10.1 Fault Reset

When the Bluetooth system is not working properly, you can easily reset the unit:

1. Locate the pinhole reset button below Sena logo at the back side of the helmet.
2. Gently insert a paper clip into the hole and press and **Fault Reset Button** for **1 second** with light pressure.

Fault Reset

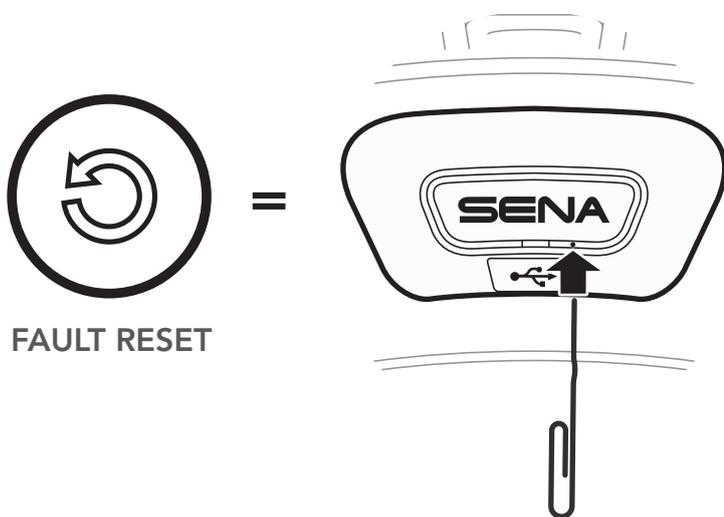




3. The Bluetooth system will shut down.

Note: Fault Reset will not restore the Bluetooth system to factory default settings.

10.2 Factory Reset

To erase all of your settings and start fresh, Bluetooth system can be restored to factory default settings using the **Factory Reset** feature in the **Bluetooth System Configuration Menu**. Please refer to **Section 2.7: "Configuration Menu"** for more details.

Access Factory Reset in the Bluetooth System Configuration Menu

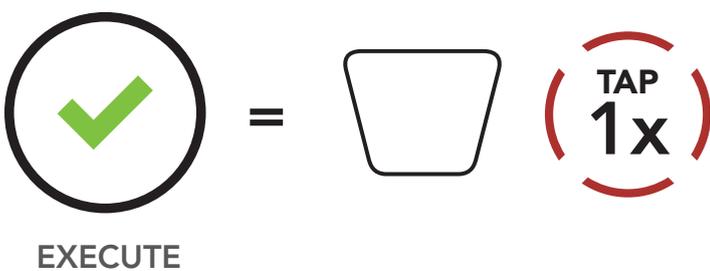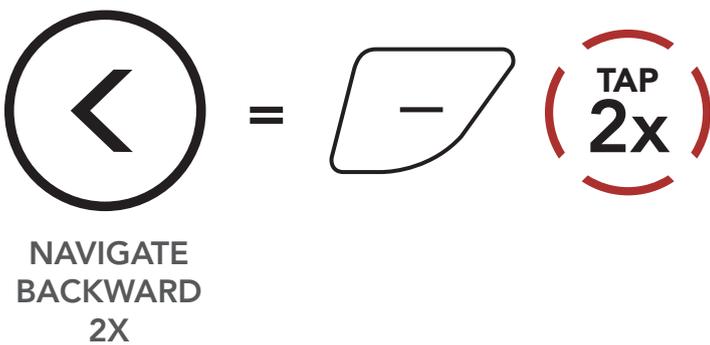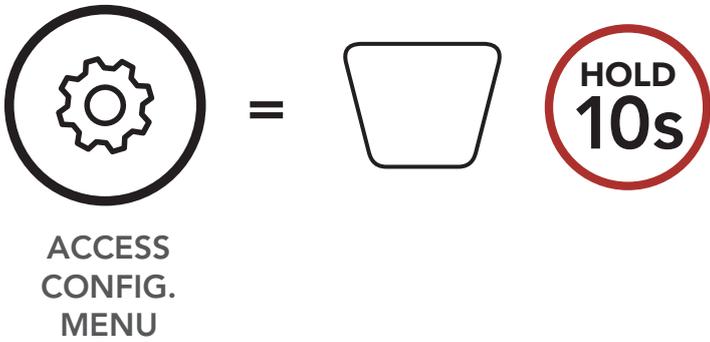

11. MAINTENANCE AND CARE

The inner lining of the helmet is completely removable. Its headliner can be washed by hand using only water, mild soap, at a maximum temperature of 30°C (86°F), and non-abrasive cloths to clean the helmet's shell, pads and retention system. Allow the padding to dry at room temperature. Store the helmet in a dry, dark, well-ventilated location, out of the reach of children and animals. High temperatures (above 110°F, 43°C) may melt the helmet's shell.

⚠ WARNING

- Never use gasoline, diesel fuel, thinners or solvents to clean the helmet. These substances can cause serious damage to the helmet, even though the resulting damage may not be visible. This helmet can be damaged by contact with common substances (for example, certain solvents (ammonia), cleaners (bleach), paints, abrasives) and this damage may not be visible to the wearer. Do not use this helmet if it has been exposed to such substances. The full safety function of the helmet can no longer be guaranteed if exposed to damaging substances.
- Do not store your helmet in your car or anywhere else near a heat source. Do not use if the shell has been melted or deformed. Always position the helmet so that it cannot fall to the floor. Damage that occurs in this way is not covered by the warranty.
- Do not attach anything to your helmet, including mirrors or lights.

The shell of this helmet is constructed of expanded polymer foam. Ventilation holes may allow harmful objects to pass in the helmet interior.

The protective capability of your helmet will diminish over time, dependent upon many factors such as dents, dings, and exposure to pollution, harmful chemicals and long term exposure to the sun. Sena recommends that helmets be replaced after five years.

Note: The useful life of your helmet may be less than five years as a result of exposure to sunlight, rough, handling/storage that results in dents or cuts or as a result of heavy use.

CERTIFICATION AND SAFETY APPROVALS

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennae
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Statement

This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: S7A-SP55

FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

CE Declaration of Conformity

This product is CE marked according to the provisions of the R&TTE Directive (2014/53/EU). Hereby, Sena declares that the radio equipment type SP55 is in compliance with Directive 2014/53/EU. For further information, please consult www.sena.com. Please note that this product uses radio frequency bands not harmonized within EU. Within the EU this product is intended to be used in Austria, Belgium, Denmark, Finland, France, Germany, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden, United Kingdom and within EFTA in Iceland, Norway and Switzerland.

This device can be operated in at least one Member State without infringing applicable requirements on the use of radio spectrum.

RF Range: 2402 ~ 2480 MHz

Max Output Power(E.I.R.P.): 17.65 dBm

Industry Canada Statement

This radio transmitter (identify the device by certification number) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. Son fonctionnement est soumis aux deux conditions suivantes :

(1) Cet appareil ne doit pas créer d'interférences préjudiciables.

(2) Cet appareil doit accepter toute interférence reçue, y compris celles causant un fonctionnement indésirable.

Bluetooth License

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license. Other trademarks and trade names are those of their respective owners.

The product is compliant with and adopts the Bluetooth® Specification 4.1 and has successfully passed all interoperability tests that are specified in the Bluetooth® specification. However, interoperability between the device and other Bluetooth®-enabled products is not guaranteed.

WEEE (Waste Electrical and Electronic Equipment)



The crossed-out wheel bin symbol on the product, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies to the European Union and other locations where separate collection systems are available. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please do not dispose of these products as unsorted municipal waste, but hand it in at an official collection point for recycling.



Helmet Certification

This product conforms to the Bicycle Safety Standard for Bicycle Helmets, CE EN1078 defined by the European Committee for Standardization. The certification CE EN1078 certification applies to Europe.

Sena Technologies, Inc.
 19, Heolleung-ro 569-gil,
 Gangnam-gu Seoul 06376 Korea
 Email: support@sena.com
 www.sena.com



All legal rights reserved.



Made in China

This product conforms to the Bicycle Safety Standard for Bicycle Helmets, C.P.S.C. 16 CFR Part 1203 helmet safety standards defined by the United States Consumer Product Safety Commission. The certification C.P.S.C. 16 CFR Part 1203 applies to the United States of America. The approval label can be affixed permanently to the inside of the helmet (United States).

Made in China



Do not remove or attempt to remove the approval label from the helmet. Do not affix approval labels of unknown origin to the helmet. These are more than likely counterfeit labels. It is against the law to affix counterfeit labels to helmets. If you are in any doubt over the origin of the approval label affixed to your helmet contact Sena directly, and not your dealer.

LIMITED PRODUCT WARRANTY DISCLAIMERS, AND LIMITATIONS

Limited Warranty

Limited Warranty

Sena Technologies, Inc. ("Sena") guarantees the product quality based on the technical specification stated in the product manual, and data regarding product warranty. Here, product warranty extends to the product only.

Warranty Period

Sena warrants that this product shall conform to and perform in accordance with published technical specifications and the accompanying written materials, and shall be free of defects in materials and workmanship, for a period of two (2) years from the date of purchase by the first consumer purchaser of the Product.

Termination

Quality warranty of the product becomes effective on the date of initial purchase. In addition, the quality warranty of the product expires when the warranty period expires. However, in the following cases, the warranty will be terminated prematurely.

- In the event the product has been sold or transferred to a third party.
- In the event the manufacturer's name, serial number, product label, or other markings have been modified or removed.
- In the event any unauthorized person has tried to disassemble, repair, or modify the product.

Notice and Waiver

By buying and using this product, you relinquish considerable legal rights including any claim for compensation for damages. Therefore, be certain to read and understand the following terms and conditions before using the product. Use of this product will constitute consent to this agreement, and forfeiture of rights to all claims. If you do not consent to all the terms and conditions of this agreement, return the product for a refund.

1. You must completely understand and accept all risks (including those occurring due to any careless behavior of yours or others) which may occur during the use of this product.
2. You are responsible for ensuring that your medical condition permits usage of the product and that you are in sufficient physical condition for using any device which can be used with it. In addition, you must ensure that the product does not limit your abilities and that you are able to use it safely.
3. You must be an adult who can take responsibilities for using the product.
4. You must read and understand the following warnings and alerts:
 - Sena, together with employees, managers, partners, subsidiaries, representatives, agents, supporting firms and suppliers, sole sellers of Sena (collectively referred to as "the company") recommend that, before using the product and similar devices of any brands including its derivative models, you

collect any relevant information in advance and be entirely prepared in terms of weather, traffic situation, and road conditions.

- When you use the product, use good judgment; never use it under the influence of alcohol.
5. You must read and completely understand all terms and conditions of legal rights and warnings that are involved in using the product. In addition, usage of the product constitutes acceptance of all terms and conditions regarding waiver of rights.
 6. You must completely understand that this warranty does not apply to any helmet that has been subject to any accident, misuse, abuse (intentional or otherwise), negligence, tampering, modifications or improper maintenance. In addition, fluorescent paints used in certain models of Sena helmets are not covered by this Warranty and may fade or degrade with the passage of time and the exposure of the helmet to the environmental elements. THERE ARE NO WARRANTIES THAT EXTEND BEYOND THE LIMITED WARRANTY EXPRESSLY SET FORTH IN THIS MANUAL, AND ANY IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY EXPRESSLY DISCLAIMED. NO DEALER HAS THE RIGHT TO MODIFY THE TERMS AND DISCLAIMERS SET FORTH HEREIN.

Warranty Exclusions

Reasons for Limited Liabilities

If you do not return the product after purchasing it, you relinquish all rights to liabilities, loss, claims, and claims for reimbursement of expenses (including attorney's fees). Therefore, Sena will not be liable for physical injury, death, or any loss or damage of transportation means, possessions, or assets which belong to you or third parties that may have occurred while you use the product. Further, Sena will not be liable for any substantial damage not related to the condition, environment, or malfunction of the product. All risks related with the operation of the product depend entirely on the user regardless of its use by the initial purchaser or a third party.

Use of this product may violate local or national laws. In addition, be aware once again that correct and safe use of the product is entirely your responsibility.

Limitation of Liability

TO THE FULL EXTENT ALLOWED BY LAW, SENA EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF SENA OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT SENA'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES

WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE. IN ANY CASE, THE TOTAL COMPENSATION LIABILITIES OF SENA OR ITS SALES AGENTS SHALL NOT EXCEED THE PRICE PAID FOR THE PRODUCT BY THE PURCHASER.

Liabilities Disclaimer

In addition to damages which may occur due to the use of the product, Sena will not be liable for damages of the product which occur due to the following events.

- In the event the product is misused or used for purposes other than its intended purposes.
- In the event the product is damaged because the user does not follow the content of the product manual.
- In the event the product is damaged because it has been left unattended or has undergone any other accident.
- In the event the product is damaged because the user has used any parts or software which are not provided by the manufacturer.
- In the event the product is damaged because the user has disassembled, repaired, or modified it in such way as is not explained in the product manual.
- In the event the product is damaged by a third party.
- In the event the product is damaged due to Acts of God (including fire, flood, earthquake, storm, hurricane or other natural disaster).
- In the event the surface of the product is damaged by use.

Warranty Service

To obtain product warranty service, send the defective product, at your expense, to the manufacturer or the seller along with proof of purchase (a receipt that shows the purchase date, a product registration certificate of the Website, and other relevant information). Take necessary measures to protect the product. In order to get a refund or replacement, you must include the whole package as it was purchased. Sena will provide free-of-charge repair or replacement service for the product when product defects occur within the scope of the product warranty during the warranty period.

SENA

Copyright © 2018 Sena Technologies, Inc.
All rights reserved.

© 1998–2018 Sena Technologies, Inc. All rights reserved.

Sena Technologies, Inc. reserves the right to make any changes and improvements to its product without providing prior notice.

Sena™ is a trademark of Sena Technologies, Inc. or its subsidiaries in the USA and other countries. SF1™, SF2™, SF4™, SRL™, Momentum™, Momentum INC™, Momentum Lite™, Momentum Pro™, Momentum INC Pro™, Cavalry™, 30K™, 20S EVO™, 20S™, 10S™, 10C™, 10U™, 10Upad™, 10R™, 3S™, SMH5™, SMH5-FM™, SMH5 MultiCom™, SMH10™, SMH10R™, SPH10™, SPH10H-FM™, Savage™, Prism Tube WiFi™, Prism Tube™, Prism™, Bluetooth Audio Pack for GoPro®, R1™, RC1™, RC3™, RC4™, Handlebar Remote™, Wristband Remote™, PowerPro Mount™, Powerbank™, FreeWire™, SR10™, SR10i™, SM10™, X1™, X1 Pro™, Expand™, Bluetooth Mic & Intercom™, Tufftalk™ and Tufftalk Lite™ are trademarks of Sena Technologies, Inc. or its subsidiaries. These trademarks may not be used without the express permission of Sena.

GoPro® is a registered trademark of Woodman Labs of San Mateo, California. Sena Technologies, Inc. ("Sena") is not affiliated with Woodman Labs, Inc. The Sena Bluetooth Pack for GoPro® is an aftermarket accessory specially designed and manufactured by Sena Technologies, Inc. for the GoPro® Hero3 and Hero4 allowing for Bluetooth capabilities.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license. iPhone® and iPod® touch are registered trademarks of Apple Inc.

Address: 3150 Almaden Expressway,
Suite 238 San Jose, CA 95118