


## VIBRANT VILLAGE smart lights activity gym

**EN** Please retain this information for future reference.

### INSTRUCTIONS FOR USE:


Adult assembly required.

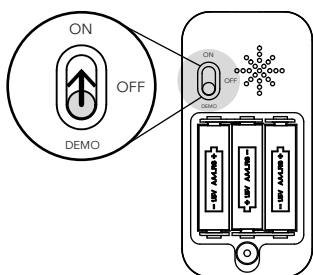


3 x AA batteries are included for "try me" (DEMO) mode. For normal play, move switch to ON.

#### TO REPLACE BATTERIES (by adult only):


- Use screwdriver to remove battery door.
- Replace with 3 x AA 1.5V batteries.
- Be sure to insert with the correct polarity.
- Replace door and screw closed with screwdriver.

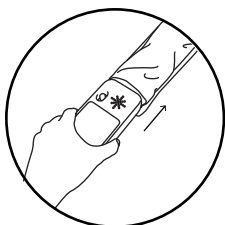


1

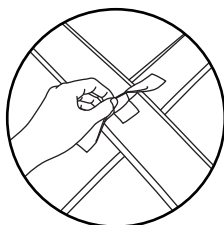

2

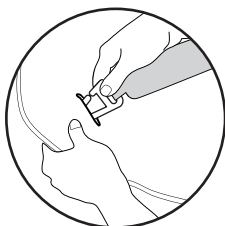

3

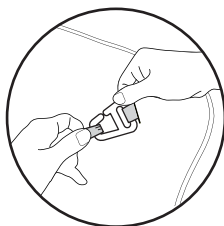


4

#### ASSEMBLY:

- Place battery box in pocket, press hook and loop closed.
  - Place mat flat on floor with pattern facing up.
- Place arch (window side down) on top of mat.
  - Slide other arch (colored stripes down) through loop on top of window arch.
- Select any plastic hook (at ends of each arch) and insert into the nearest slot on mat.
- Reach under mat and put the hook through the fabric loop on the bottom of the mat.
  - Repeat on opposite side of the mat to complete on arch.

### LIGHT & SOUND FUNCTION:

- With switch in ON position, pressing any button will activate music and lights.
- Batting at toys or arches will activate sound effects.
- To save power, sleep mode is activated after 20 minutes if there is no activity.
- Press POWER button to re-activate.

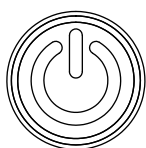


#### POWER BUTTON

- Press to turn on or off.



#### VOLUME BUTTON

- Volume is automatically set to high volume.
- Press once to lower music volume.
- Press again to turn off music.
- 3 songs will play automatically, one after the other.
- Sound effects will continue to activate with movement.

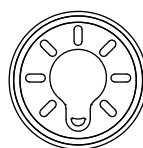

#### LIGHT BUTTON

- Lights will automatically start in Tracking Mode. Lights will move from one end of the arch to the other so baby can follow.
- Press once to change to Light Show Mode. Lights will blink in time with the music.
- Press again to turn lights off.

### CLEANING AND CARE:

**Padded Playmat and Pillow:** Machine wash cold, tumble dry low.

**Arches:** Spot clean only. Do not submerge in water.

**All toys:** Machine wash cold, gentle cycle, no bleach. Tumble dry low.

## ! WARNING:

Adult assembly required. Activity Mat and Tummy Time pillow should not be placed in crib or playpen. Use this product only on the floor. Never leave baby unattended on mat. Always use with adult supervision. Inspect product before each use and discard if damaged or worn. Remove & discard all packaging materials properly.

Do not recharge non-rechargeable batteries. Rechargeable batteries are only to be recharged under adult supervision. Exhausted batteries are to be removed from the toy. The toy is only to be given to a child when fully assembled. Do not short-circuit supply terminals. Rechargeable batteries are to be removed from the toy before being charged. Different types of batteries or new and used/old batteries are not to be mixed. Batteries are to be inserted with the correct polarity. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

#### CONSUMER INFORMATION: SAFETY AND DISPOSAL

At end of product life remove batteries from product by following the battery replacement instructions. Substances used in batteries pose potential environmental and health effects. Do not mix waste batteries with other waste. Keep waste batteries separate. Do not dispose of by landfill or by incineration. Return waste batteries to your point of purchase or recycle center. Recycle all waste batteries per local regulation.

Do not dispose batteries in trash. They are to be collected separately in accordance with local law



© 2017 Skip Hop  
50 W 23 ST, NY, NY 10010  
In the US: 877.4.SKIPHOP

hello@skiphop.com  
www.skiphop.com  
Made in China

Meets or exceeds ASTM F963, EN71 and applicable safety standards.

EU REP:  
Fox Williams  
10 Finsbury Square  
London EC2A 1AF, UK

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)