

TAB1090

TABLET



USER GUIDE

## CONTENT

SAFETY.....	1
User manual.....	3
Important information.....	3
Notes:.....	3
MEMORY CARD INSTALATION.....	4
CHARGING THE BATTERY.....	4
BUTTONS.....	5
USING THE TOUCH SCREEN.....	7
COMPUTER CONNECTION.....	8
APPLICATIONS.....	9
COMMUNICATION.....	10
Making Calls.....	10
Sms – Messages.....	11
SETTINGS.....	12
ADD ANOTHER EMAIL ACCOUNT.....	13
CONNECTED DEVICES.....	14
APPS & NOTIFICATIONS.....	14
BATTERY.....	15
DISPLAY.....	15
SOUND.....	16
STORAGE.....	16
SECURITY & LOCATION.....	17
USERS & ACCOUNTS.....	17
ACCESSIBILITY.....	18
GOOGLE.....	19
SYSTEM.....	19
LANGUAGES & IMPUT.....	19
GESTURES.....	20
DATE & TIME.....	20
BACKUP.....	21
RESET OPITIONS.....	22
ABOUT TABELT.....	22
SAFE USE OF THE BATTERY.....	23

MAINTENANCE OF THE DEVICE.....	23
Surroundings security .....	24
Use of the manual .....	24
SPECS.....	25
WARNINGS.....	26

## **SAFETY**

Read these guidelines carefully. Not following them may be dangerous or illegal.

### **DO NOT RISK**

All wireless devices may cause interferences, which could affect the performance of other devices. Do not switch on the device when the use of mobile phones is prohibited or if it might cause interference or danger.

### **RESTRICTED AREAS**

Switch OFF the device in an airplane since it may disturb the operation of other equipment located therein. The device may interfere with operation of the medical equipment in hospitals and health protection entities. Abide by any kinds of prohibitions, regulations and warnings conveyed by the medical staff.

### **PETROL STATIONS**

Always turn off the device while refuelling your car on petrol station. Do not use your device close to chemicals.

### **WI-FI (WLAN)**

WLAN network may be used indoors without any restrictions.

### **ROAD SAFETY**

Do not use this device while driving any kind of vehicle.

### **QUALIFIED SERVICE**

Only qualified personnel or an authorized service center may install or repair this product. Repairing by an unauthorized or unqualified service may cause device damage and warranty loss.

### **CHILDREN AND PHYSICALLY OR MENTALLY DISABLED PEOPLE**

This device should not be operated by people (including children) with limited physical or mental abilities, as well as by people with no earlier experience in operation of electronic equipment. They may use the device only under supervision of people responsible for their safety. This device is not a toy.

## User guide TAB1090

Memory card and SIM card are small enough to be swallowed by a child and cause choking. Keep the device and its accessories out of reach for children.

### WATER AND OTHER LIQUIDS

Protect the device from water and other liquids. It can influence work and the life span of electronic components. Avoid using the device in environments with high humidity like kitchens, bathrooms or during rainy weather. Particles of water can cause the liquefaction of moisture in the device, and this may have a negative impact on the work of electronic components.

### BATTERY AND ACCESSORIES

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Do not destroy, impair or throw the battery into flames - it might be dangerous and may cause fire. Worn-out or impaired battery should be placed in a dedicated container. Excessive charging the battery can cause damage. Therefore a single battery charge should not last longer than 3 days. Installing an incorrect battery type can cause an explosion. Never open the battery. Please dispose of battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire damage, it should not be repaired but replaced with a new one. Use the original manufacturer's accessories only.



#### HEARING

To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.



#### EYESIGHT

To avoid eyesight damage do not look closely onto the flash light during its work. A strong beam of light may cause permanent eye damage!

## User manual.

The device and screen shots contained in this manual may differ from the actual product. Accessories attached to the set may differ from the illustrations included in manual. Options described in the manual are found in Android™ system. Those descriptions may differ, depending on the version of the operating system and applications installed on the device.

## Important information

The majority of applications which can be installed on the device are mobile apps. Modus operandi of such applications may be different from their counterparts installed on a personal computer. Apps installed on the device may vary depending on country, region, and hardware specifications. The manufacturer is not liable for problems caused by third party software. The manufacturer is not responsible for anomalies that may occur when editing the registry settings and modifying the operating system software. Attempts to modify the operating system can cause malfunctions and problems with applications. It may cause a loss of warranty.

## Notes:



### Android System

Android™ operating system - incredible opportunities are within your hand - all applications are available at any time; the latest Gmail™ email client or browser, it is only the beginning of what you can find in this device - the rest you will find in the online Google Play™. Android is a trademark of Google LLC.



### Google Play

Manufacturer's tablets can use the applications purchased in Google Play. To do this you should register a individual Google™ account providing e-mail and password. After registration and acceptance of the rules you can use paid and free applications listed in the Google Play. Google and Android are trademarks of Google LLC



If any of the above items is missing or damaged, please contact us.



We advise to keep the container in case of any complaints. Keep the container out of reach of children.



Dispose of container in accordance with local regulations when it is no longer needed.

## MEMORY CARD INSTALATION

To insert the memory card correctly, turn off the device, pry the cover with your fingernail and remove it gently, insert the microSD card into the slot as shown in the illustrations next to the slot. Then carefully insert and close the cover.



Use only memory cards recommended by the manufacturer.

Pay attention to the selection of the proper format-the microSD card, capacity and type / class. Incompatible memory cards may damage the device and cause the stored data to be destroyed as well. Incompatibility of memory card can be caused, among others, by an incorrect card format (required format microSD) or an unsupported card capacity - above the value recommended by the manufacturer.

## CHARGING THE BATTERY

Charge the battery before the first use. The battery should be charged by the attached charger or another charger, intended for this type of equipment. If in doubt contact the seller or manufacturer service. Use only chargers and wires recommended by the manufacturer. Using incompatible chargers or cables can cause explosion of the battery or damage to your device. When the battery is near a complete discharge, the notification is displayed on a low battery charge. To continue uses of the device charge the battery.

If the battery is completely discharged the device can not be switched on even when the loading process is ongoing. Before the device can be turned on again, the battery has to be charged for at least a few minutes. In case of any problems with the battery or if in need of a replacement, the device should be delivered to the manufacturer's service center. To charge the battery, connect the microUSB plug to the socket in the device and the USB plug to the charger.



Incorrect charger connection (USB cable) can cause damage to the AC adapter or the device. The damages resulting from improper handling are not covered by the warranty.

Plug the charger into the wall socket. Once you start charging, an icon of the battery situated in the upper right corner will change to an animated symbol of lightning. If the device is turned off an animation depicting the level of battery charge should appear.



The device can heat up during charging. It is a regular occurrence and should not affect the stability or performance of the device.

When the charge reaches 100% it means that the battery is fully charged, finish the charging. Unplug the charger from the wall socket and from the device.



If the device does not charge properly deliver it with the charger to a service center of the manufacturer.

## BUTTONS

### Menu

Pressing it will cause the list of open apps to appear, where you can switch in-between or turn them off.

Double quick press switches on the previously used application.

### Home

One quick press takes you to device desktop.

Longer press and release will turn on the Google search engine and access Google Now™ function.

### Back

Pressing <Back> will cause exit from the application / return to the previous screen.



**Blockade on/off button**

One quick press locks/unlocks the screen.

Pressing the button for about 2 sec. will cause:

○ If the device is off - the device will switch on,

If the device is on - displaying menu allowing you to shutdown, reboot, enable / disable airplane mode, enable lock, displaying system settings.

You can also cause a hard reset by pressing and holding the button until the device resets.

**Volume increase and decrease buttons**

Pressing during a voice call will cause an increase or decrease of the audio connection volume.

Pressing the button while an incoming call mutes the ringtone.

Pressing the button when no calls are active will decrease or increase the volume of the ringtone, change sound profile on "vibration only" or "alarms only".

Pressing the button while camera app is open might start the shutter and take a picture. (Works only if the software provides the function).

Pressing the button in any other app will control volume level of music, spoken instructions, or other sounds.

## USING THE TOUCH SCREEN

The device lets you easily select items or perform operations. The touchscreen can be controlled by the following actions:

### Touch

Touch one to start options, app, and menu, etc.

### Swipe

Quickly swipe up, down, to the left or to the right, to scroll the list or the screen.

### Triple click

Quickly tap the screen three times to start zooming - if this option is enabled in your device settings.

### Hold and swipe

Touch an element (an icon perhaps) and hold it for about 1 second. Then you can delete/uninstall that element.

### Slide in and out

 
Touch the screen with two fingers and slide them together or apart to zoom in or out a photo or a map.



The touch screen will be turned off after some time of inactivity. To turn off the screen press the blockade button.



In most tablets, you can set how long your device waits before turning off the screen. Most often it suffices to select from the app list: [Settings] > [Display] > [Sleep].

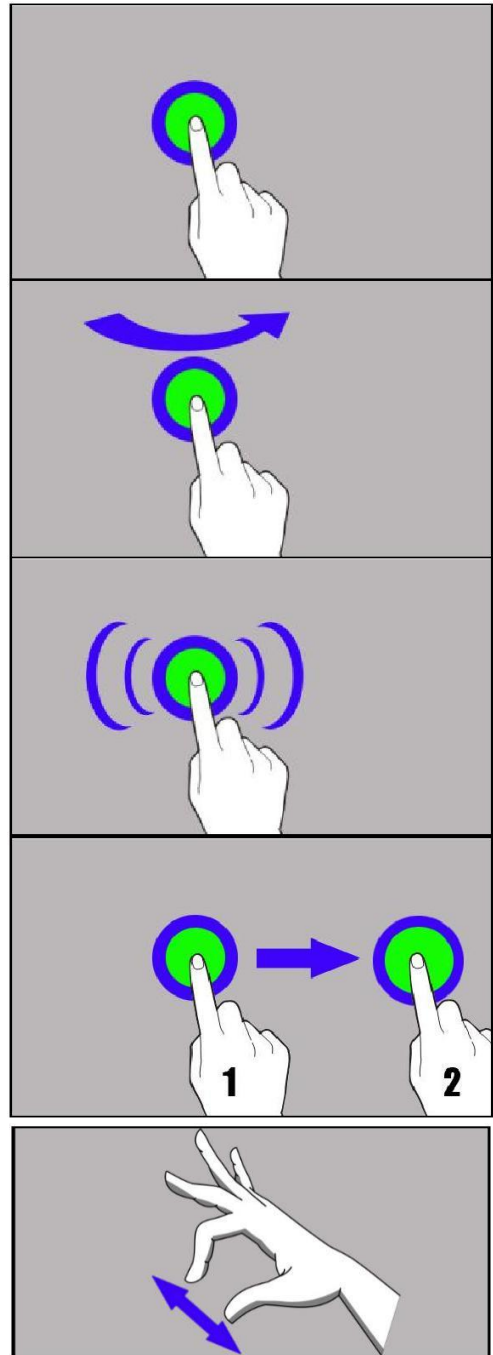



## COMPUTER CONNECTION

To connect to PC computer with Microsoft Windows XP/Vista/7/8/10 using USB you should plug the included USB cable to a multifunctional USB socket in the device. Plug the other end of the cable into the socket in your computer. When the device is plugged in, a screen will appear on your computer with the name of the device and operations possible to perform. If that does not happen swipe from the top edge of the bottom of the device and click "charging this device". Select "Transfer files" from the window displayed on your computer screen, then select "Open device to view files". Now you can exchange files between your device and the computer.



  
If the OS does not see device memory check if the installed the driver operating the device is correct. Search the driver list manually and choose "Transfer files"

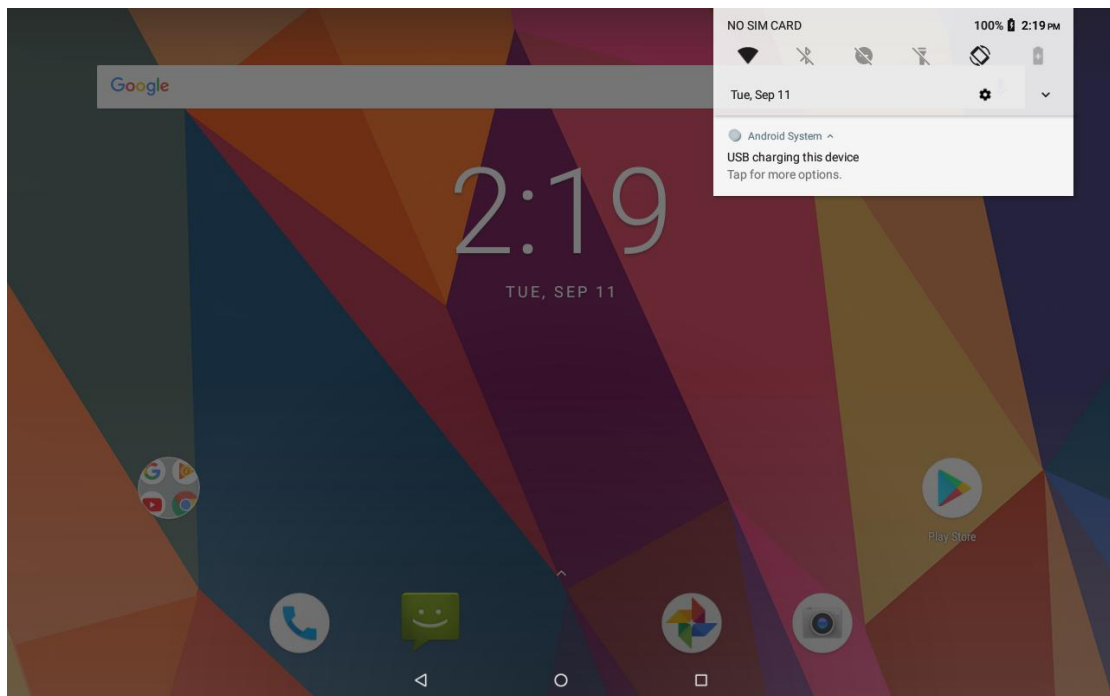


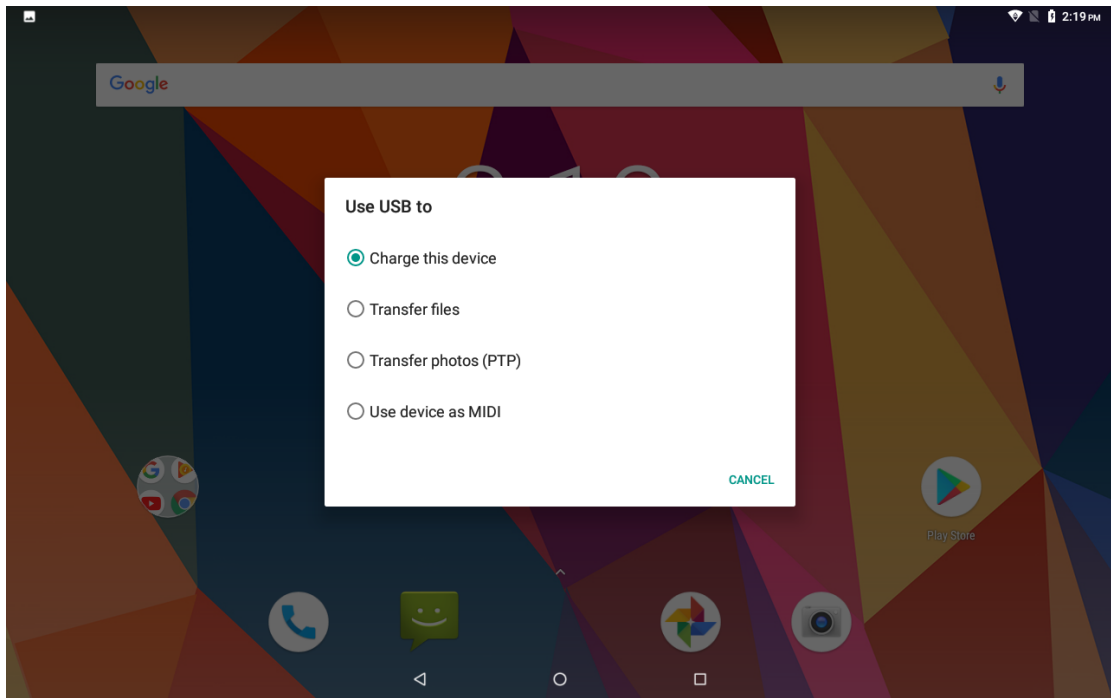



## APPLICATIONS

  When running applications, you can make the most of the device. On screen desktop tap the icon [Application menu] to gain access to installed applications. To add a shortcut to an application on the desktop screen, press the application icon in the application menu and hold it, then when you change the view to the desktop view, select the place where you wish to create a shortcut and "drop" it in there.

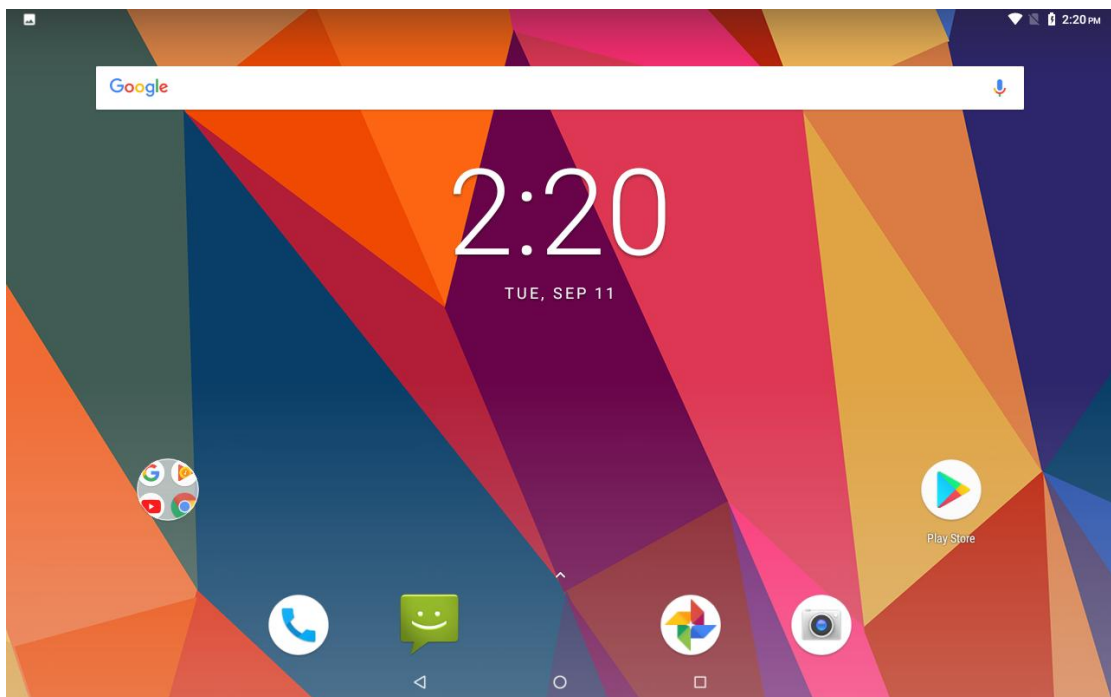

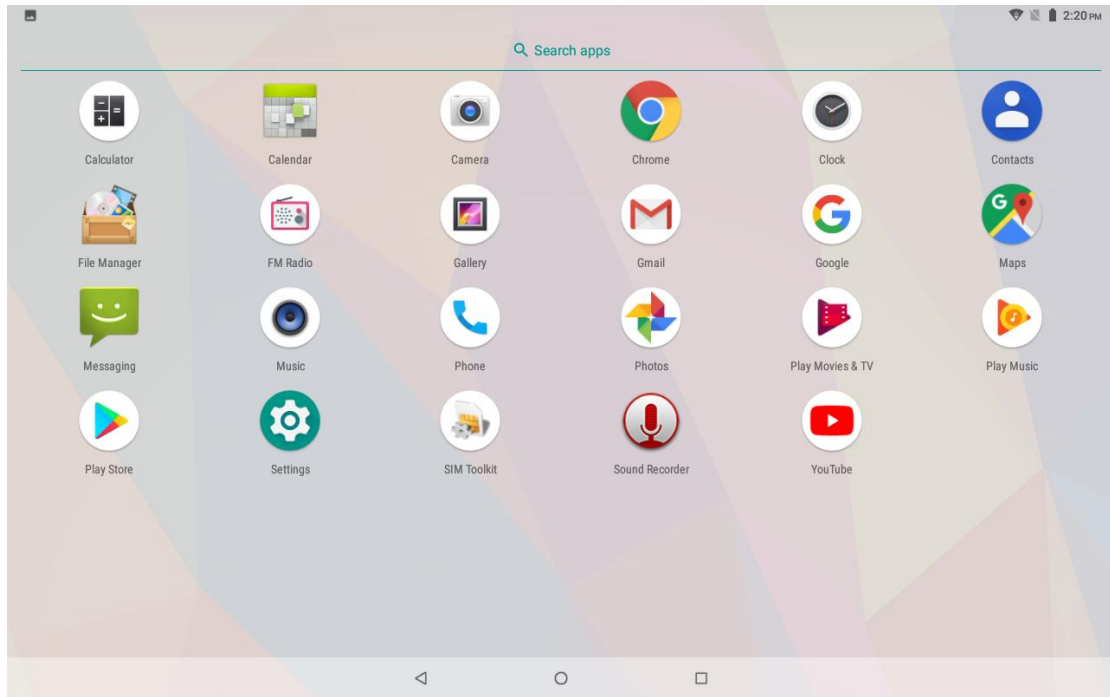



## ADDING CONTACTS

  One way is entering [Phone] application  and typing the number you wish to add. Then press "Create a new contact" . A menu will appear containing, among others: Name and surname, Phone number, Second phone number, E-mail. Fill-in fields you wish and press **SAVE** to save changes.






## COMMUNICATION

### Making Calls

 
To make a call touch "Phone" icon  placed on the main screen or in

Android Applications menu and choose the keyboard icon . Insert the phone number you wish to call. Press "handset" placed at the bottom of the screen and chooses which SIM card you wish to use.

Sms – Messages


You can manage messages using the [Messaging]  application in the home screen or device menu. Run an application and touch icon , insert phone number and name. When you have chosen the contact a screen will appear where you type the message itself. Type the message body. To send a message press icon with the SIM card designation  (for SIM 1) or  (for SIM 2). Before you send a text message you can transform it into a multimedia message by pressing symbol  situated in the left side of the screen and adding a file (picture, video, music etc.).

## SETTINGS

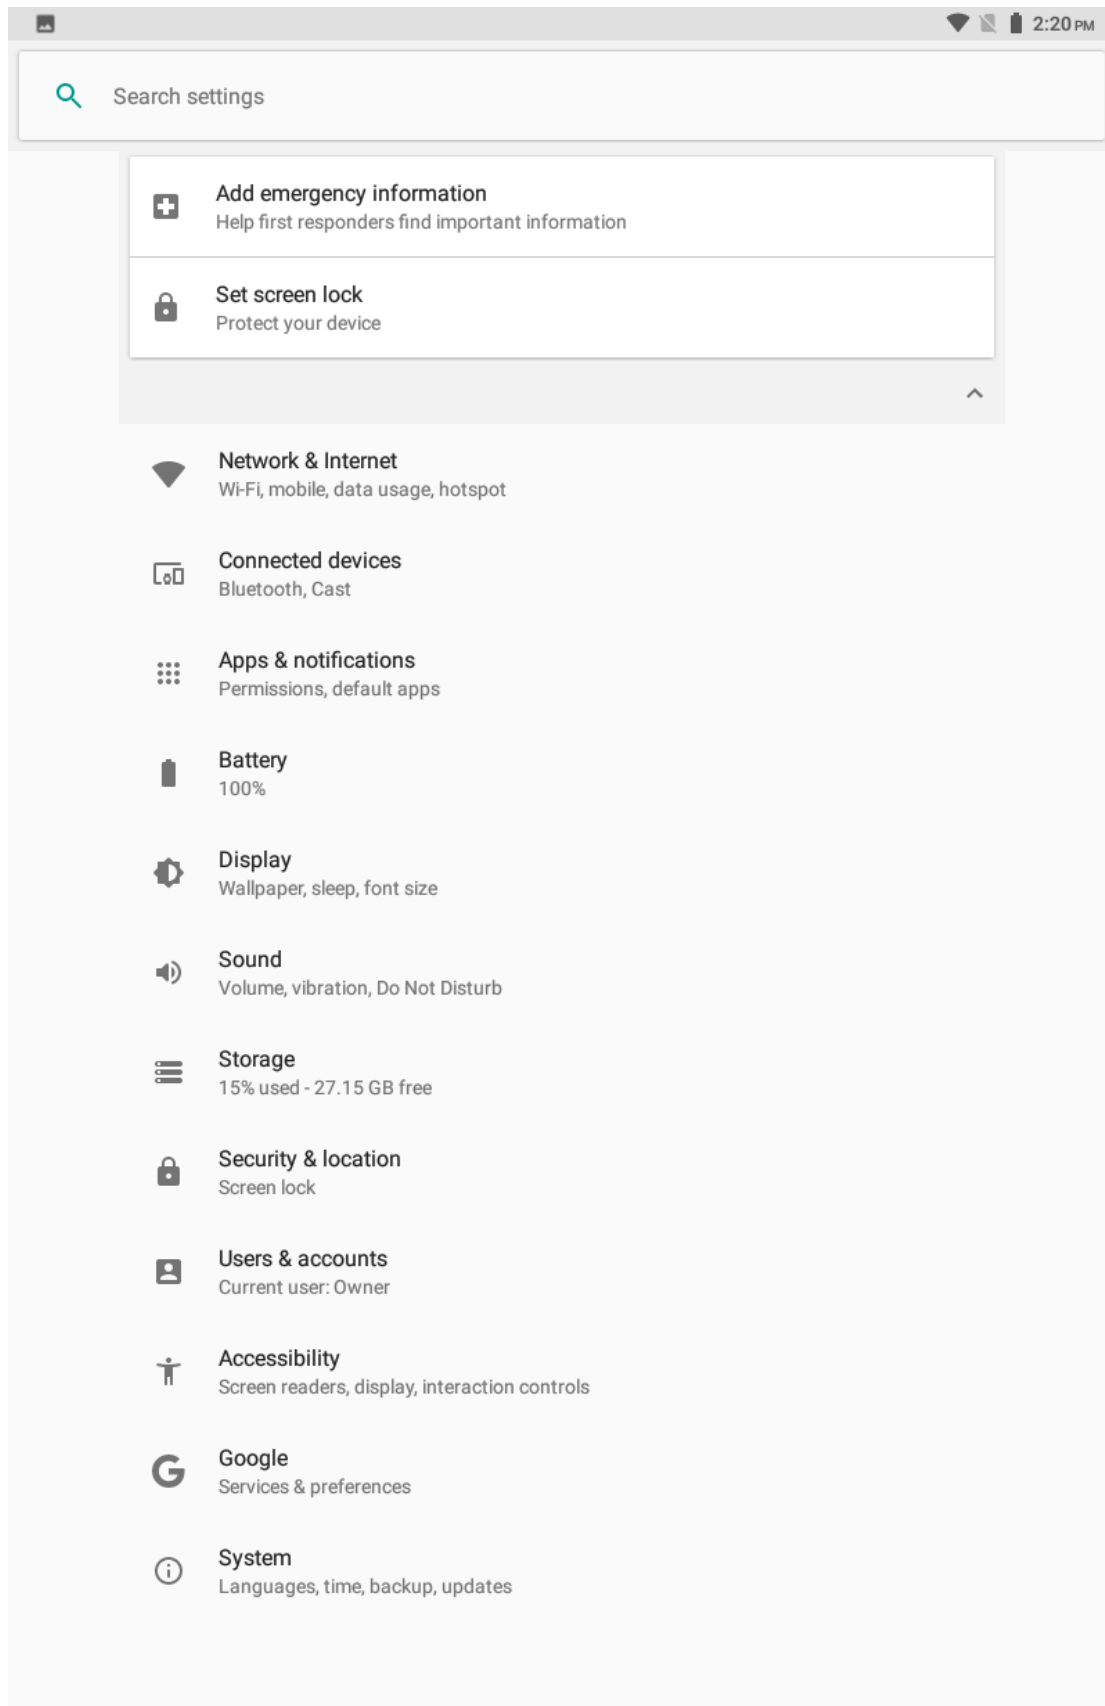 


## ADD ANOTHER EMAIL ACCOUNT

 You can add below email account for this device, as Google, Outlook, Hotmail, or Yahoo ect.

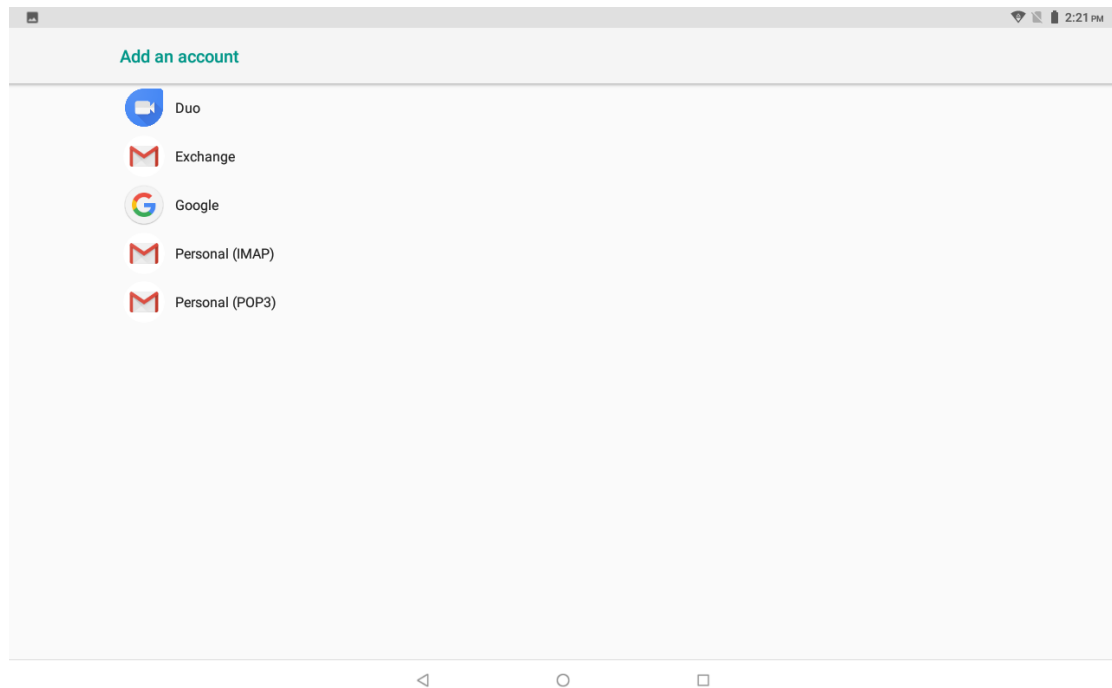

## NETWORK & INTERNET

 
You can set WIFI connection, Mobile network, Data usage, Hotspot & set Tethering, SIM cards, VPN and Airplane mode

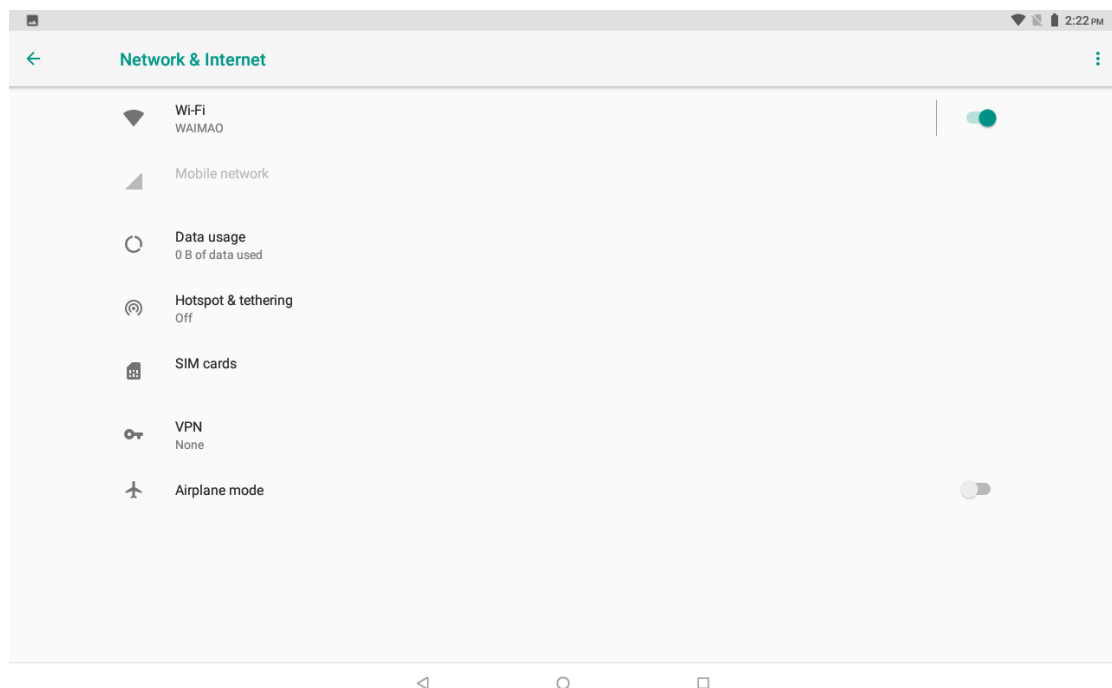




## CONNECTED DEVICES

 You can connect Bluetooth, Cast, Print service and connect the Tablet to Computer by USB cable.

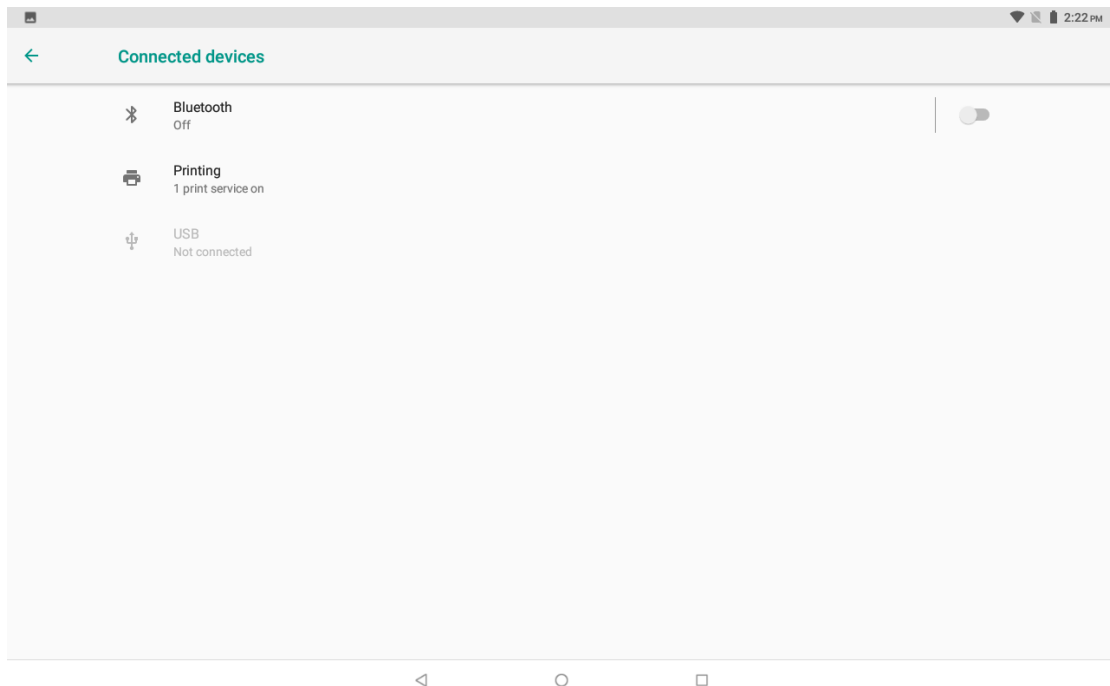


## APPS & NOTIFICATIONS

 You can check All APP information and setting Notifications, also APP permissions and Advanced for Default and some special app access.

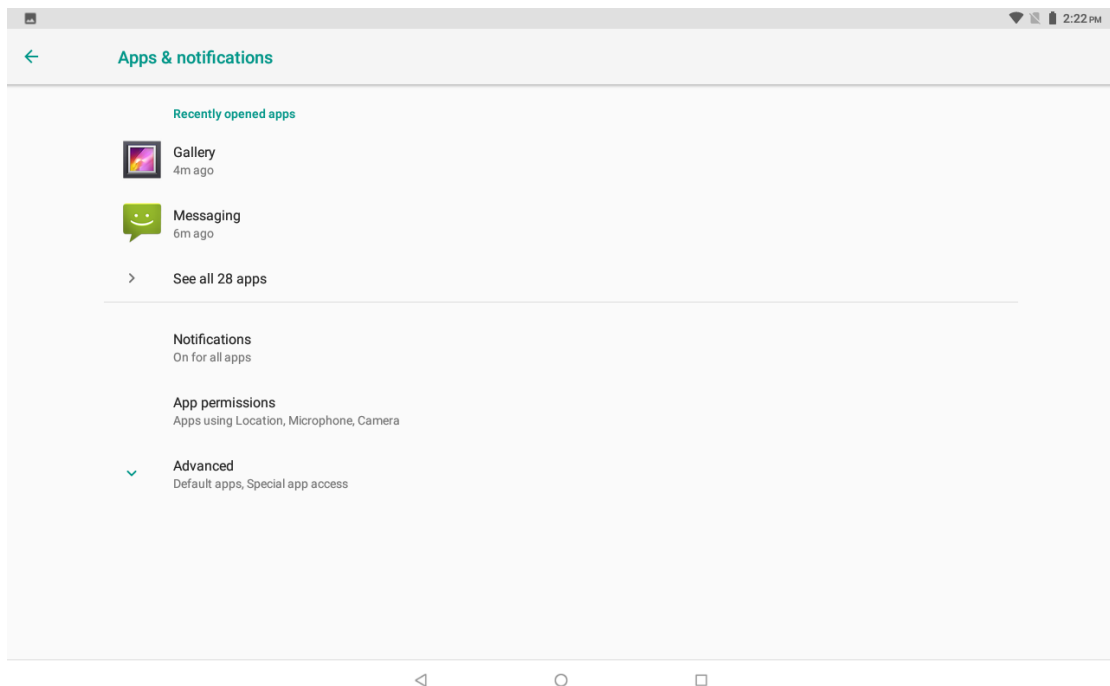


## BATTERY

 You can check all battery information as Volume, Last full charge time, Power Management etc. as below.

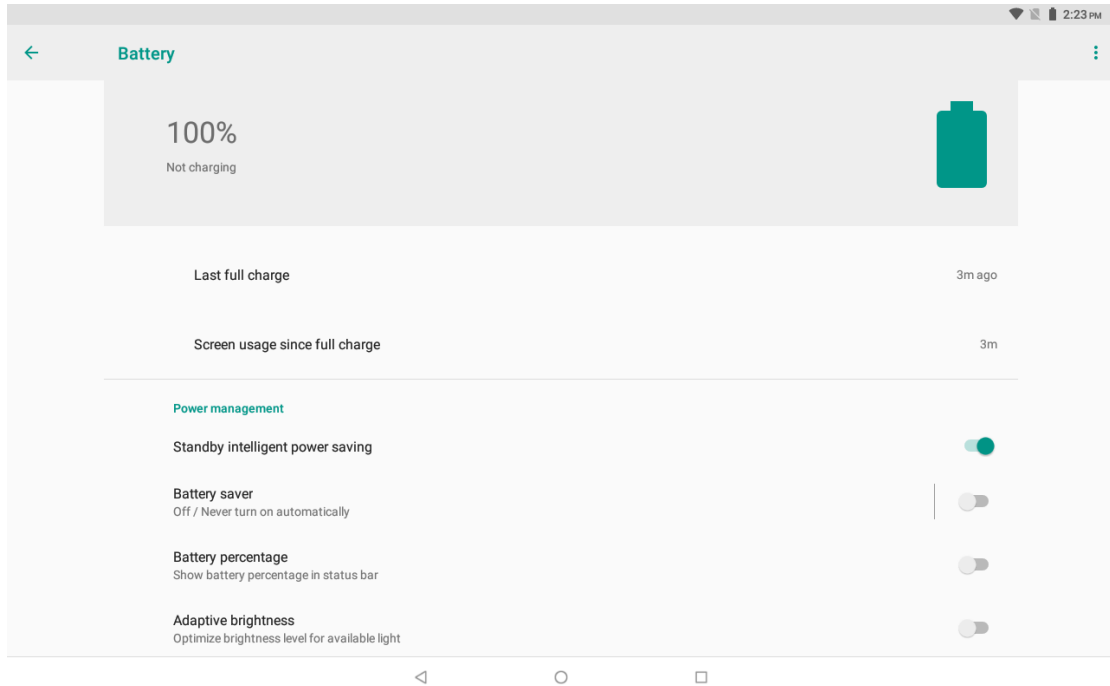


## DISPLAY

 You can Set Brightness level, Adaptive brightness, Wall paper, Sleep and font size ect. as in below picture

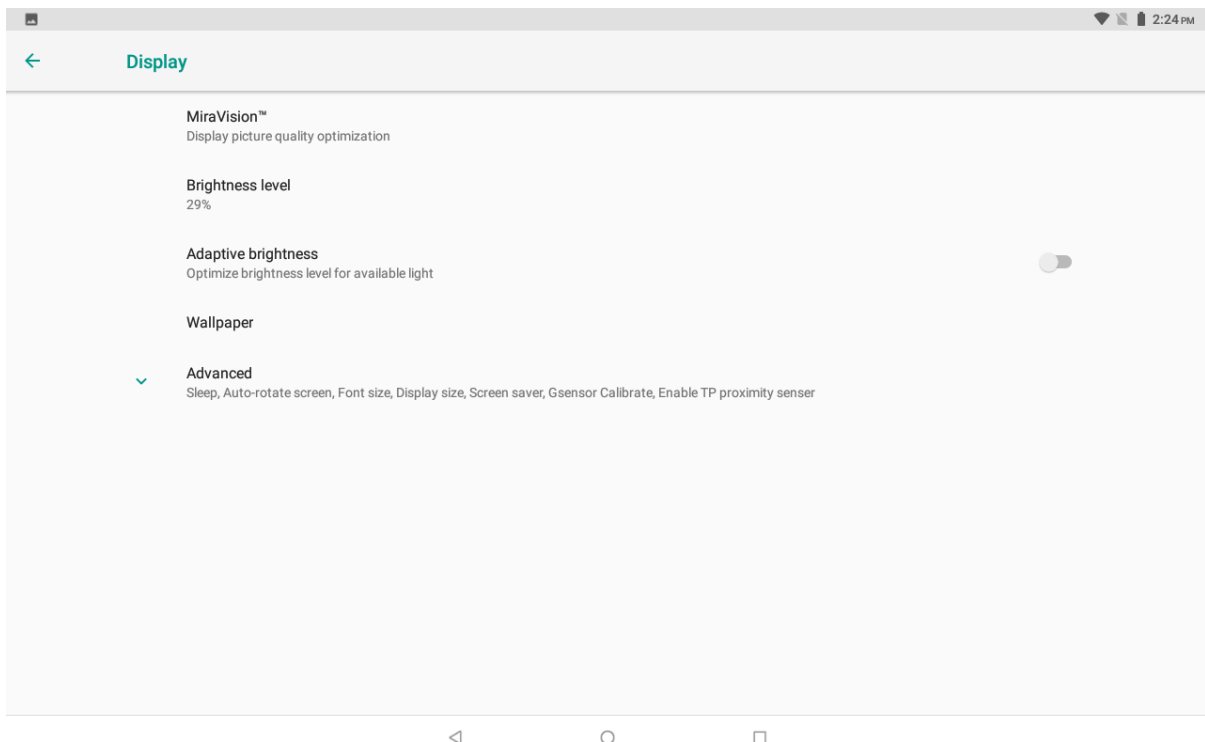


## SOUND

 You can set Sound Volume, Not disturb preference, Default notification sound, Alarm and other Sounds and Vibrations.

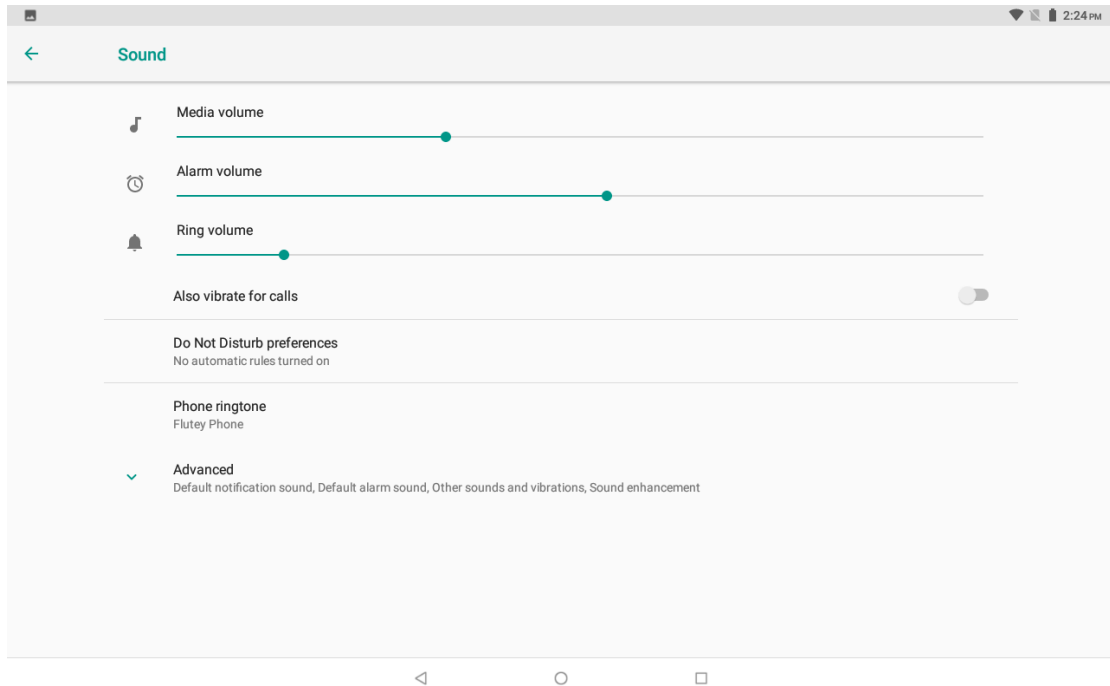


## STORAGE

 You can check all storage details as below.

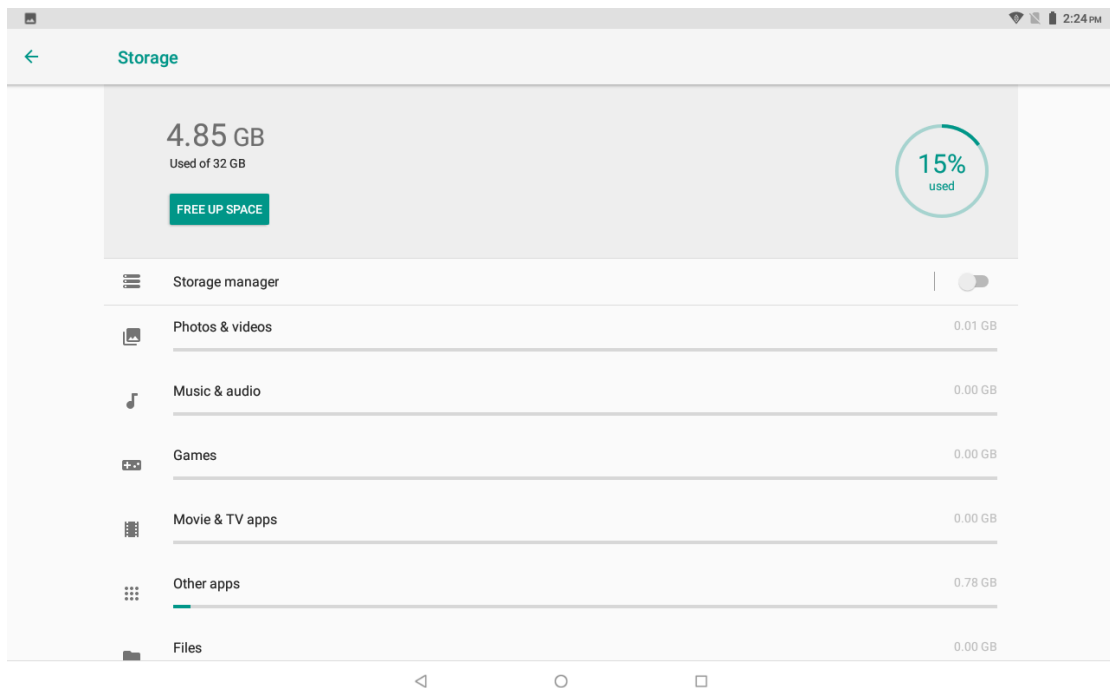


## SECURITY & LOCATION

 You can set Security of Device and Privacy as below.

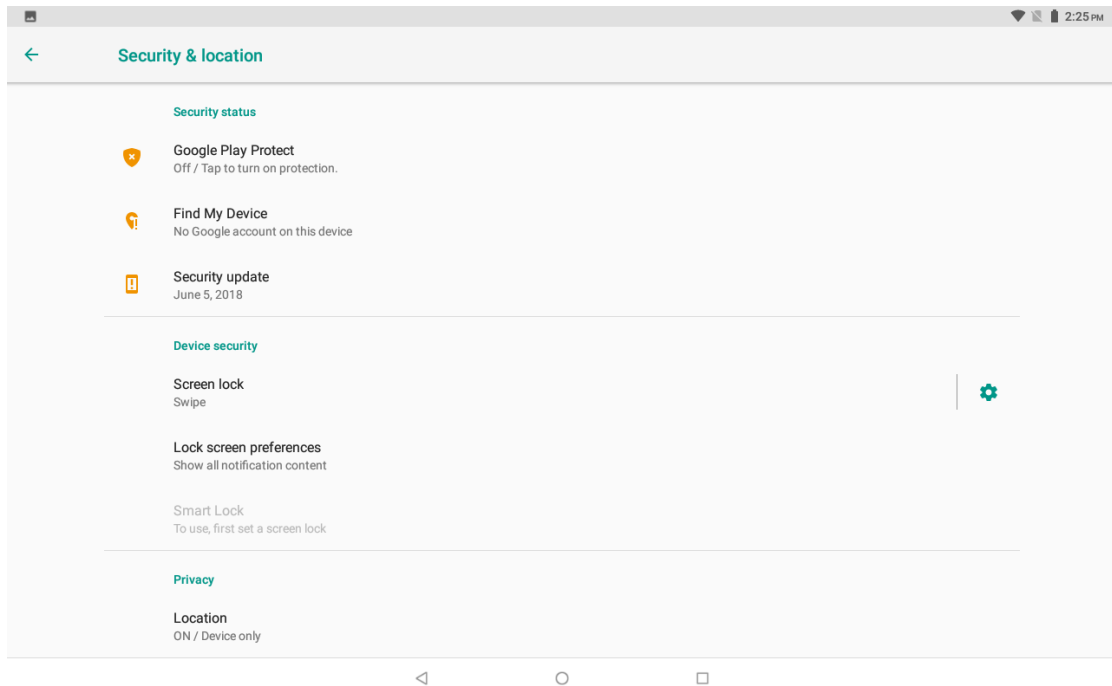



## USERS & ACCOUNTS

 You can add account as below.

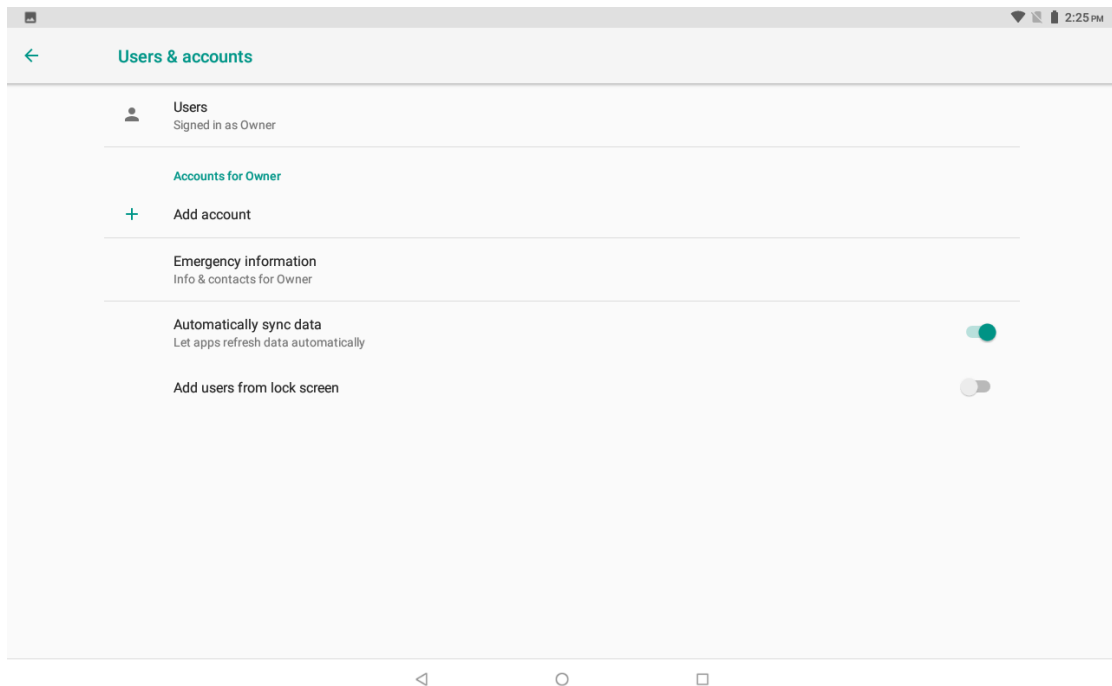


# ACCESSIBILITY

  You can set Below Options.

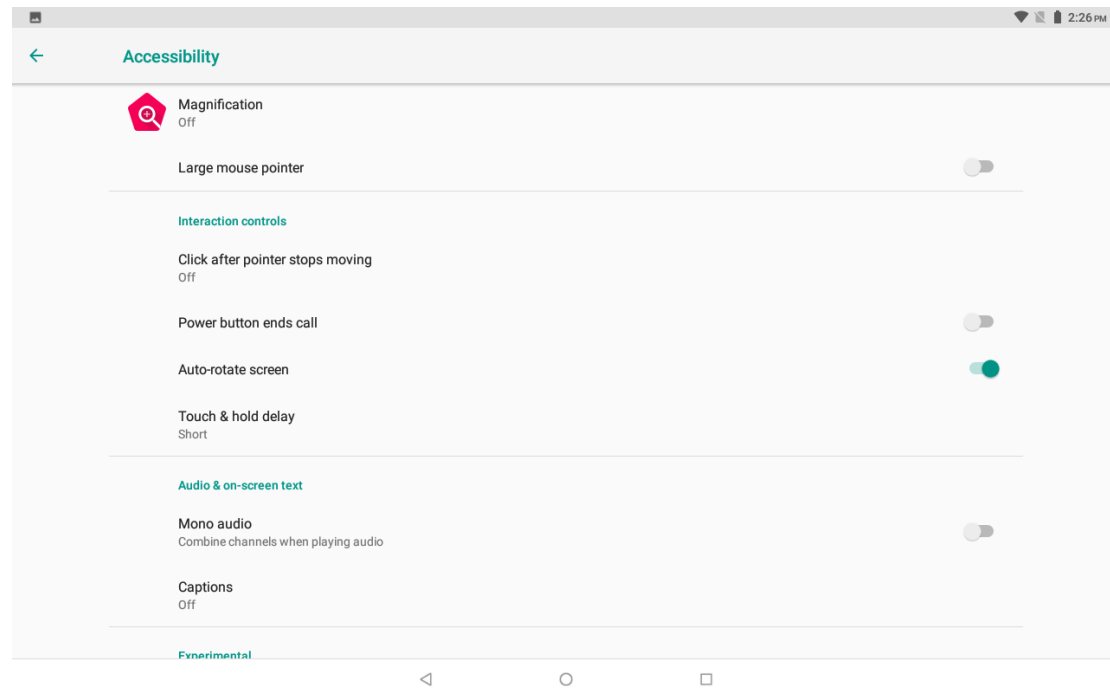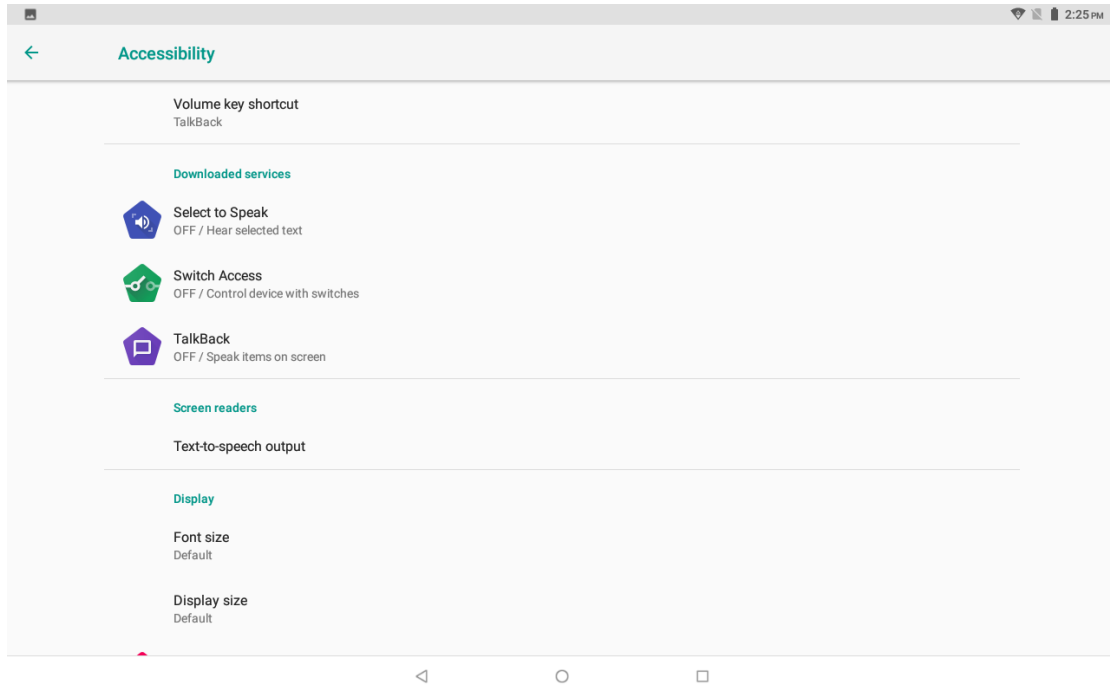


## GOOGLE

 You can set Android Auto app, Cast Media controls, Location Nearby, Restore contacts, Security, Set up nearby device, Set up work profile under this settings.

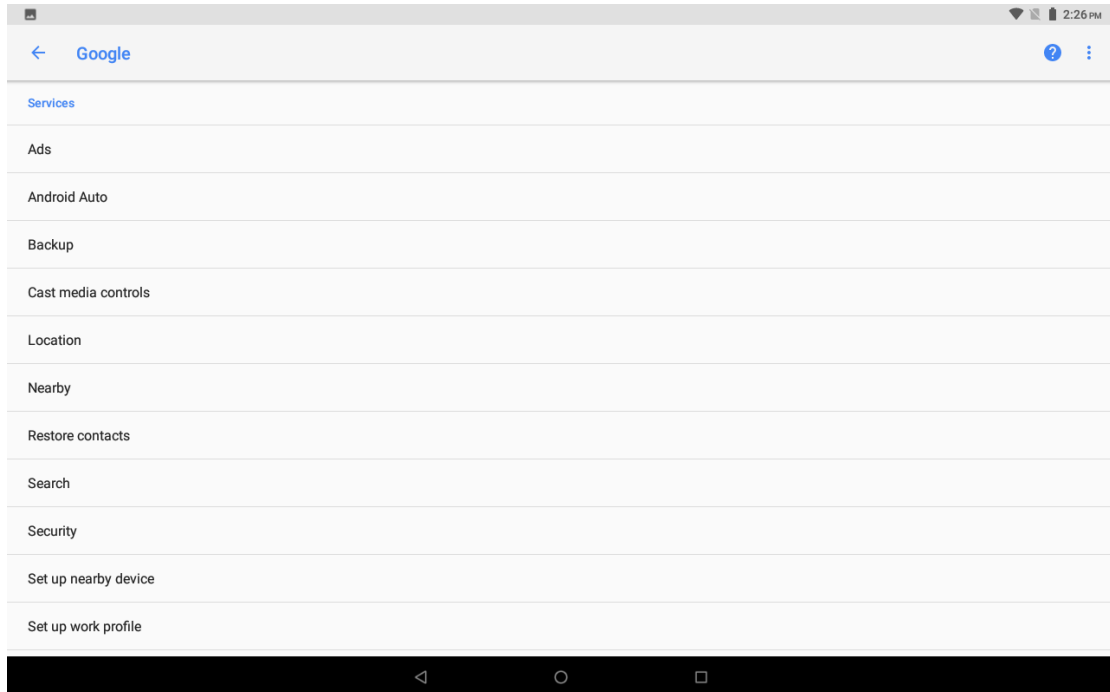


## SYSTEM
 
### LANGUAGES & INPUT

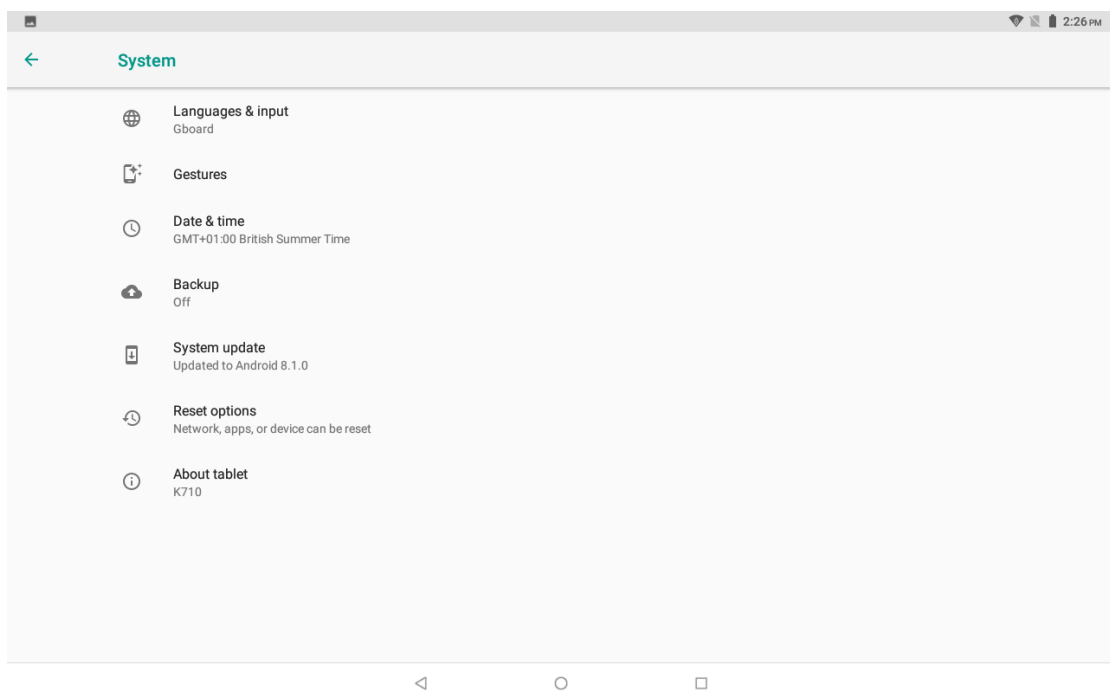


## GESTURES

 You can set Gestures to Jump to Camera

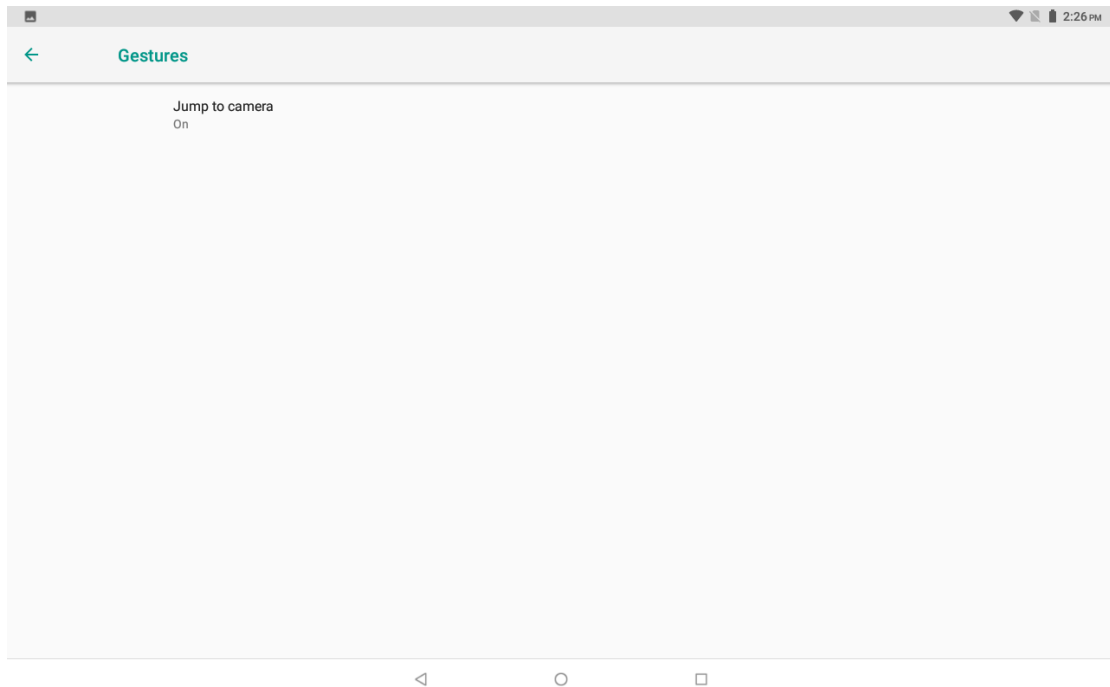


## DATE & TIME

 You can set Date and Time, Select time zone, and set hour format as below.

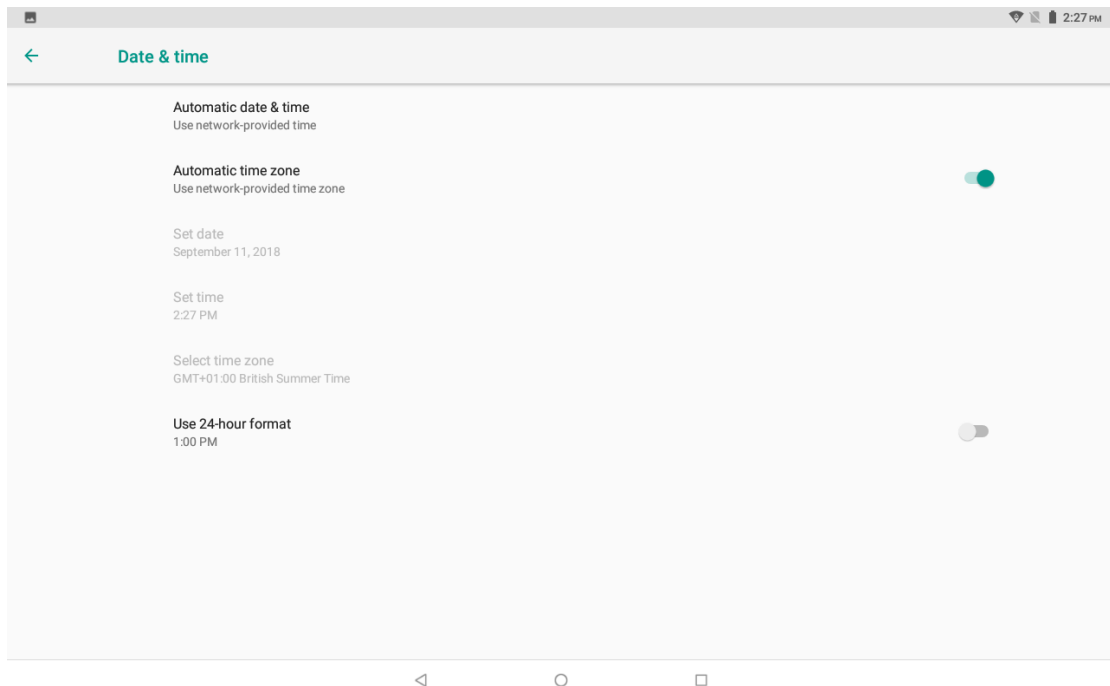


## BACKUP

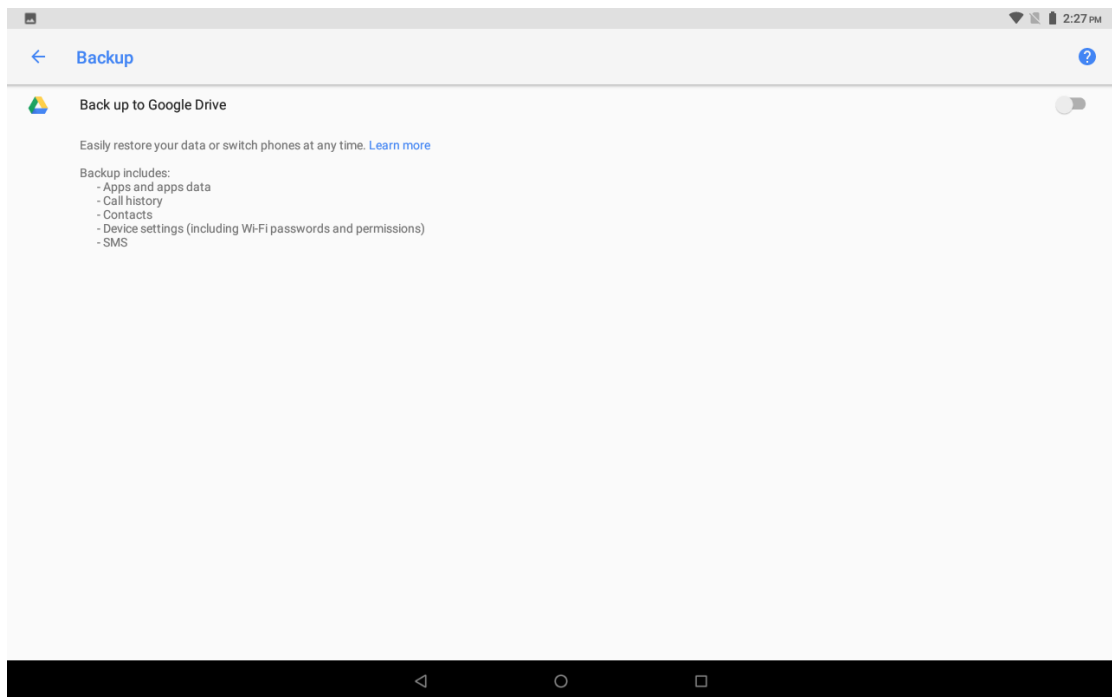 

## SYSTEM UPDATE

 
You can check the system version and date as below.

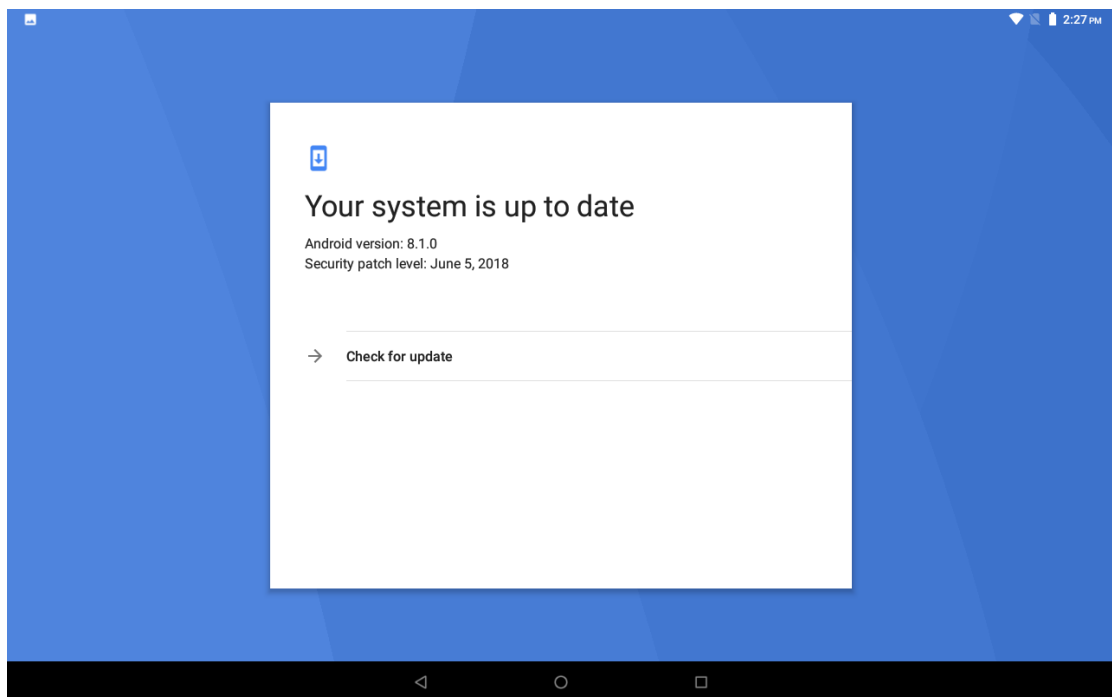




## RESET OPITIONS

 You can set DRM reset, reset Wi-Fi mobile & Bluetooth, reset app references and Erase all data (factory reset) as below.

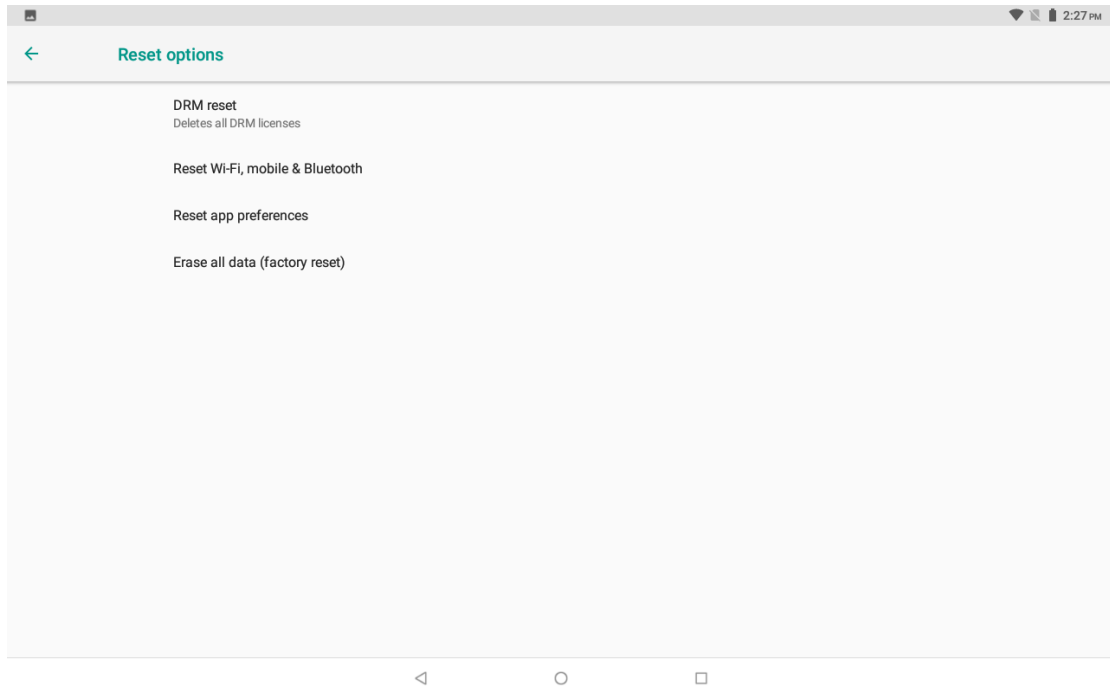

## ABOUT TABLET

 You can check Status and Legal Information, Android version ect inforamtions as below.

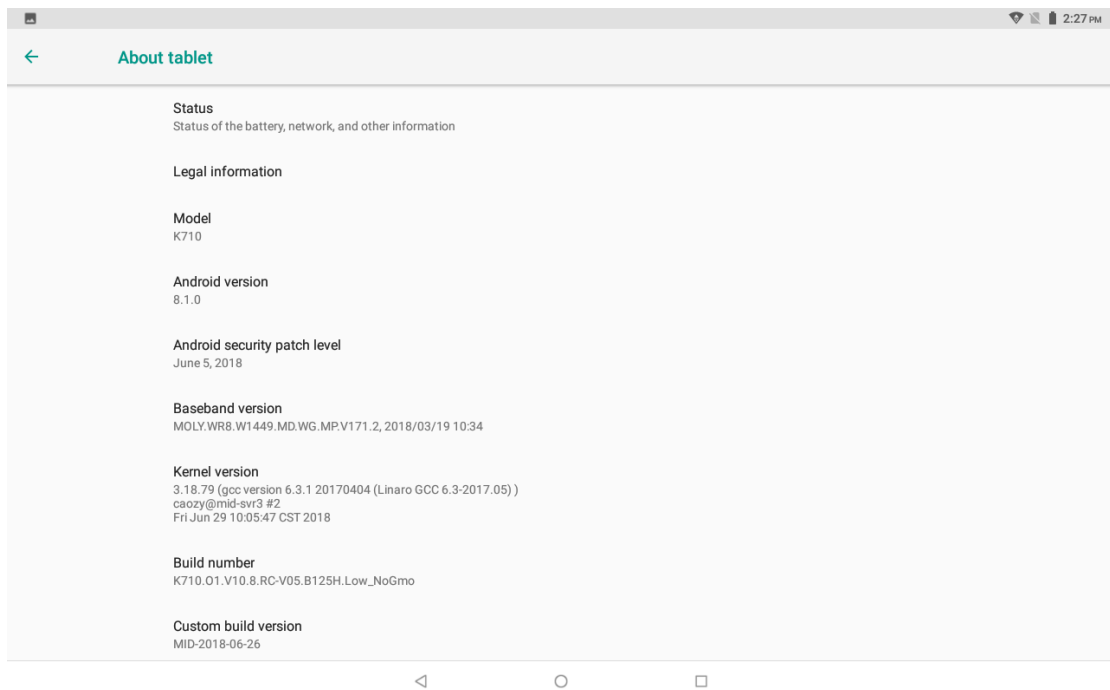

## SAFE USE OF THE BATTERY

The battery may be charged with USB port in the computer or laptop. Nevertheless, it is not a recommended form of charging an operating device due to the low charging current offered by the USB - even though the device is connected to a power source battery can still get discharged. If you wish to charge your device this way turns off the device. If the battery level is low, recharge it to continue the use of the device. If you wish to prolong the battery life span, discharge the battery beneath 20% of the battery capacity and charge it back to 100%. If not used, unplug the charger from the device. Excessive charging might cause shortened battery life. The temperature of the battery has an impact on its charging cycle. Prior to the charging process, cool the battery or raise its temperature so that it is similar to the room temperature. If the battery temperature exceeds 40°C the battery must not be charged! Do not use a damaged battery! The battery life span can be shortened, if it has been exposed to very low or very high temperatures - this causes interference to the device, even when the battery has been properly charged.

## MAINTENANCE OF THE DEVICE

To prolong the life span of the device act according to these instructions.

- Keep the device and its accessories out of reach of children.
- Avoid contact with liquids; it can cause damage to electronic components of the device.
- Avoid very high temperatures for it can shorten the life of device electronic components, melt the plastic parts and destroy the battery.
- Do not try to disassemble the device. Tampering with the device in an unprofessional manner may cause serious damage to the device or destroy it completely.
- For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis.
- Use the original accessories only. Violation of this rule may result in an invalidation of the warranty.

The packaging of the device can be recycled in accordance with local regulations.



### Surroundings security

Turn off the device in areas where its use is forbidden or when it may cause interference or danger. The use of any devices that radio waves causes interference with medical devices (i.e. cardiac pacemaker), if they are not properly secured (if in doubt, consult your doctor or medical device manufacturer). If in doubt consult a doctor or a medical equipment manufacturer.

Attention	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the	The software version can be upgraded without earlier

### Use of the manual

#### Consents

Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

#### Appearance

The device and screen shots contained in this manual may differ from the actual product. Accessories attached to the set may differ from the illustrations included in manual.

## Trademarks

- Google, Android, Google Play, Google Play logos and other brands are Google LLC trademarks.
- Oracle and Java are registered trademarks of Oracle and / or its affiliates.
- Wi-Fi® Wi-Fi logo are a registered trademarks Wi-Fi Alliance association.
- All other trademarks and copyrights belong to their respective owners.

The Android robot has been reconstructed or modified on the basis of a project created and made available by Google. Its use is subject to the terms and conditions described in the Creative Commons 3.0 Authorization

## SPECS

MTK6580, Quad core, Cortex A7, 1.3GHz, Mali-400MP2 GPU, OpenGL ES2.0

10.1" 800\*1280 IPS

Brightness 420 cd/m<sup>2</sup>, on cell, G+G, flat and 2.5D optional

Android 9.0

2GB DDR

64GB

Battery: 5000 mah

Camera: Front 2.0 mega

Back camera 8.0 mega

2G GSM: 850/900/1800/1900MHz

3G 2100/900mhz

WIFI 802.11b/g/n

GPS/Bluetooth/FM


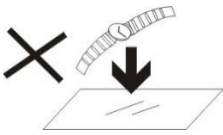 






Interfaces: 2 SIM card/TYPER C/ Earphone/ TF card

    Accessories: Adaptor, user manual, good box, warranty card.





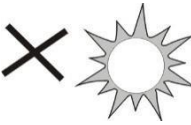


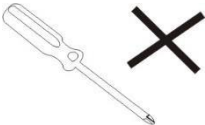 

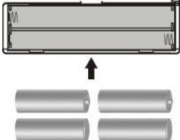 
Metal case 7.8 mm Super slim

User guide  
**TAB1090**

**WARNINGS**

 <p>The image shows two identical symbols for Waste Electrical and Electronic Equipment (WEEE). Each symbol consists of a crossed-out wheeled bin with a small circle containing a dot, and the letters 'Pb' below it, indicating lead content.</p>	<p>Correct disposal of this Product          (Waste Electrical &amp; Electronic Equipment)(WEEE)</p> <p>Your product is designed and manufactured with high quality materials and components which can be recycled and reused.</p> <p>This symbol means that electrical and electronic equipment, at their end of-life should be disposed of separately from your household waste.</p> <p>Please dispose of this equipment at your local community waste collection/recycling centre.</p> <p>In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!</p>
 <p>The symbol shows a crossed-out arrow pointing down to a flat surface, with a curved object above it, indicating that objects should not be placed on top of the device to avoid scratching.</p>	<p>DO NOT place objects on top of the device, as objects may scratch the device.</p>
 <p>The symbol shows a crossed-out arrow pointing down to a surface with small dark spots, indicating that the device should not be exposed to dirty or dusty environments.</p>	<p>DO NOT expose the device to dirty or dusty environments.</p>
 <p>The symbol shows a crossed-out arrow pointing down to a soccer ball, indicating that the device should not be placed on an uneven or unstable surface.</p>	<p>DO NOT place the device on an uneven or unstable surface.</p>
 <p>The symbol shows a crossed-out arrow pointing down to a ruler, a paperclip, and a pencil, indicating that foreign objects should not be inserted into the device.</p>	<p>DO NOT insert any foreign objects into the device.</p>
 <p>The symbol shows a crossed-out arrow pointing down to a horseshoe magnet, indicating that the device should not be exposed to strong magnetic or electrical fields.</p>	<p>DO NOT expose the device to strong magnetic or electrical field.</p>
 <p>The symbol shows a crossed-out arrow pointing down to a sun icon, indicating that the device should not be exposed to direct sunlight or heat sources.</p>	<p>DO NOT expose the device to direct sunlight as it can damage the device. Keep it away from heat sources.</p>
 <p>The symbol shows two vertical arrows. The top arrow points up and is labeled '60°C(140°F)'. The bottom arrow points down and is labeled '20°C(68°F)', indicating the operating temperature range.</p>	<p>DO NOT store your device in temperatures higher than 40°C(104°F). The internal operating temperature for this device is from 20°C(68°F) to 60°C(140°F).</p>

User guide  
**TAB1090**

	<p>DO NOT use the device in the rain.</p>
	<p>Please check with your Local Authority or retailer for proper disposal of electronic products.</p>
	<p>The device and adaptor may product some heat during normal operation of charging. To prevent discomfort or injury from heat exposure, DO NOT leave the device on your lap.</p>
	<p>POWER INPUT RATING: Refer to the rating label on the device and be sure that the power adaptor complies with the rating. Only use accessories specified by the manufacturer.</p>
	<p>Clean the device with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.</p>
	<p>Always power off the device to install or remove external devices that do not support hot-plug.</p>
	<p>Disconnect the device from an electrical outlet and power off before cleaning the device.</p>
	<p>DO NOT disassemble the device. Only a certified service technician should perform repair.</p>
	<p>The device has apertures to disperse heat. DO NOT block the device ventilation, the device may become hot and malfunction as a result.</p>
	<p>Risk of explosion if battery replaced by an incorrect type. Dispose of used batteries according to the instruction.</p>

	<p>PLUGGABLE EQUIPMENT: the socket-outlet shall be installed near the equipment and shall be easily accessible.</p>
	<p>European Union: Disposal Information.</p> <p>This symbol means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.</p>
MADE IN CHINA	

