


SHAD

YAMAHA FZ8 '10 '11 KIT TOP YOFZ84ST



1 261721 x 1



2 303020 x 8
Ø8



3 304077 x8
M8 x 30 Din 912




5 303025 x 2
Ø10



6 304051 x2
M10 x 25 Din 7380



7 304074 x4
M8 x 20 Din 912

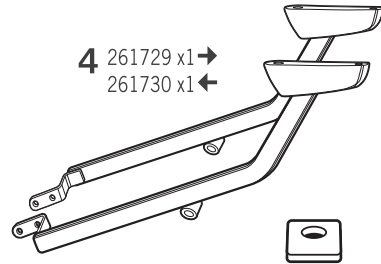

4 261729 x1 →
261730 x1 ←



8 303018 x4
Ø8

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

