


SHAD

KYMCO AK 550 '17 KIT TOP KOAK57ST

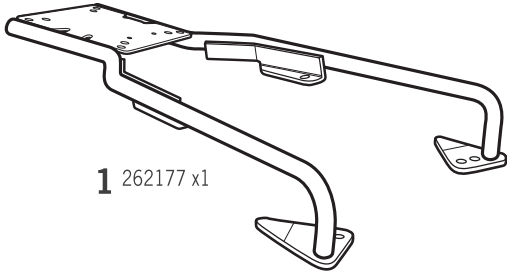

1 262177 x1



2 261072 x4
Ø20 Ø9 x 32




3 303020 x2
Ø8



4 304169 x2
M8 x 50
DIN 7380



5 303045 x2
Ø8



6 304170 x2
M8 x 60
DIN 7380

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the top master before the 3p system.

