

(EN) CONGRATULATIONS ON YOUR PURCHASE OF THE NEW DRAK INTERFACE

This Quick Start Guide will help you to install the interface program and make it easier for you to approach the main operations offered by the interface.

CONTENTS OF THE PACKAGE

- Standard USB 2.0 Mini-B connection cable
- Module for connection with the Dive Computer
- CD-ROM containing the Drak program
- Quick Start Guide
- The Warranty Card

If one of the items on this list is

missing or damaged, contact your dealer for a replacement.

MINIMUM SYSTEM REQUIREMENTS

In order to use the program, you need a PC with the following characteristics:

- Processor: Pentium 700 or later
- Operating system: Microsoft Windows® 2000 or Microsoft Windows® XP
- At least 128 Mbytes of RAM
- Hard Disk with 100 Mb available
- A CD-ROM drive


INSTALLATION PROCEDURE

Do not connect the Drak interface to the computer before the Drak program is correctly installed.

1. Turn on your computer.
2. Insert the CD-ROM provided into the CD- or DVD-ROM drive of your PC.
3. Select the Drak software directory in the CD.
4. Run the setup.exe program.
5. Follow the Setup instructions to complete the installation.
6. When the installation is complete a window will be created containing the program launch icon.
7. Now you can connect the Drak interface to your computer by inserting the MINI-B connector to the interface

device and the USB connector to the USB port of your computer.

8. Launch the Drak program in order to use the interface and download the logbook from your dive computer to your PC.

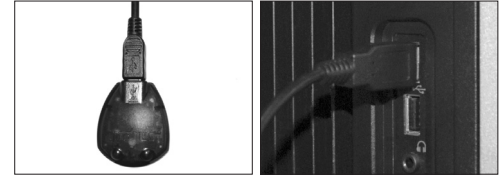

PRODUCT GUIDE, DRIVERS, AND INFORMATION

This guide, the manual in PDF format, the software, and any updates are available online at the website www.mares.com.